



## Contents

<b>68 - Interior equipment</b> .....	<b>1</b>
<b>1 Interior mirror</b> .....	<b>1</b>
1.1 Removing interior rear-view mirror .....	1
1.2 Installing interior rear-view mirror .....	1
1.3 Bonding retaining plate for interior mirror .....	1
1.4 Automatic anti-dazzle interior mirror .....	2
1.5 Removing and installing interior mirror on vehicles with a rain sensor .....	3
1.6 Bonding on interior mirror base with rain sensor .....	4
<b>2 Compartments, covers and trims</b> .....	<b>6</b>
2.1 Removing and installing centre console ▶ 04.00 .....	6
2.2 Removing and installing centre console 05.00 ▶ .....	8
2.3 Installing and removing centre console, Lupo 3L and Lupo FSI .....	13
2.4 Removing ashtray .....	16
2.5 Removing handbrake lever handle .....	17
2.6 Removing driver side compartment .....	18
2.7 Removing front passenger side compartment .....	19
2.8 Removing glove box .....	19
2.9 Removing glove box lock cylinder .....	20
2.10 Removing sun visor .....	21
<b>3 Grab handles</b> .....	<b>22</b>
3.1 Removing roof grab handle ▶ 04.00 .....	22
3.2 Removing roof grab handle 05.00 ▶ .....	22
<b>4 Sill panel trims</b> .....	<b>23</b>
4.1 Removing and installing sill panel trim .....	23
<b>69 - Passenger protection</b> .....	<b>25</b>
<b>1 Seat belts</b> .....	<b>25</b>
1.1 Safety regulations for belt tensioners .....	25
1.2 Disposal of belt tensioner units .....	25
1.3 Checking belt tensioner .....	25
1.4 Removing and installing front seat belts with belt tensioner .....	25
1.5 Removing and installing belt height adjustment .....	27
1.6 Removing belt anchor rail .....	28
1.7 Removing front belt buckle .....	29
1.8 Removing and installing rear seat belts .....	29
1.9 Removing and installing belt reel .....	29
1.10 Removing and installing double buckle .....	30
1.11 Removing and installing lap belt .....	31
<b>2 Inspecting seat belts</b> .....	<b>32</b>
2.1 Checks .....	32
<b>3 Checking child seat anchors (ISOFIX) after an accident</b> .....	<b>36</b>
3.1 Points to check .....	36
<b>4 Airbag</b> .....	<b>37</b>
4.1 Tools .....	37
4.2 Overview - installation locations .....	37
4.3 Safety precautions when working on the airbag .....	38
4.4 Disposal of airbag units .....	39
4.5 Deactivating the airbag .....	39
4.6 Renewing airbag units following an accident .....	39
4.7 Removing and installing driver airbag unit .....	40
4.8 Removing and installing driver airbag unit (Lupo 3L) .....	43
4.9 Removing and installing steering wheel .....	47



4.10	Removing and installing steering wheel (Lupo 3L)	49
4.11	Removing and installing coil connector with slip ring	50
4.12	Removing and installing coil connector with slip ring (Lupo 3L)	51
4.13	Removing and installing front passenger airbag unit	51
4.14	Removing and installing airbag control unit (J 234)	54
4.15	Removing and installing driver and front passenger side airbag	54
4.16	Removing and installing sensor for driver/front passenger side airbag	57
4.17	Adapting components	59
<b>70</b>	<b>- Trim, insulation</b>	<b>60</b>
<b>1</b>	<b>Dash panel</b>	<b>60</b>
1.1	Tools	60
1.2	Removing and installing dash panel ▶ 04.00	60
1.3	Removing and installing dash panel 05.00 ▶	66
<b>2</b>	<b>Door trims</b>	<b>73</b>
2.1	Tools	73
2.2	Removing and installing door trims	73
2.3	Removing and installing door insulation films	76
<b>3</b>	<b>Pillar and side trims</b>	<b>79</b>
3.1	Tools	79
3.2	Removing and installing upper A-pillar trim	79
3.3	Removing lower A-pillar trim.	82
3.4	Removing and installing B-pillar trim	83
3.5	Removing and installing C-pillar trim	84
3.6	Removing and installing rear seat trim	84
3.7	Removing and installing side window trim	86
3.8	Removing and installing rear storage compartment	88
<b>4</b>	<b>Luggage compartment trims</b>	<b>91</b>
4.1	Tools	91
4.2	Removing and installing rear lock carrier cover	91
4.3	Removing and installing luggage compartment side trim	91
4.4	Removing and installing rear lid trim	94
<b>5</b>	<b>Roof trims</b>	<b>95</b>
5.1	Tools	95
5.2	Removing and installing moulded headliner (vehicles with sunroof)	95
5.3	Removing and installing moulded headlining	100
5.4	Removing and installing roof insulation/reinforcement (DVD)	102
<b>72</b>	<b>- Seat frames</b>	<b>105</b>
<b>1</b>	<b>Front seats</b>	<b>105</b>
1.1	Tools	105
1.2	Removing and installing front seat	105
1.3	Removing and installing front seat (Lupo 3L)	108
1.4	Front seat - assembly overview	109
1.5	Removing and installing front backrest	110
1.6	Removing and installing front backrest (Lupo 3L)	112
1.7	Removing and installing seat height adjustment element	115
1.8	Removing and installing cable for locking backrest	117
1.9	Removing and installing cable for locking backrest (Lupo 3L)	119
1.10	Removing and installing Bowden cable for locking backrest (Lupo 3L)	121
1.11	Removing head restraint guides	122
<b>2</b>	<b>Rear seats</b>	<b>124</b>
2.1	Removing bench seat	124
2.2	Removing backrest	124
2.3	Removing backrest locking hooks	125



<b>74 - Seat - padding, covers</b> .....	<b>126</b>
<b>1 Front seat covers and padding</b> .....	<b>126</b>
1.1 Tools .....	126
1.2 Removing and installing front seat cover and padding .....	126
1.3 Removing and installing front backrest cover and padding .....	129
1.4 Rear seat covers and padding .....	131