



Contents

50 - Body - front	1
1 Contact corrosion! Lupo 3L, FSI and GTI	1
2 Lock carrier	2
2.1 Tools	2
2.2 Assembly overview - lock carrier	2
2.3 Removing and installing lock carrier with bolt-on parts	4
2.4 Service position	5
3 Wing	7
3.1 Tools	7
3.2 Removing and installing front wing for Lupo	7
3.3 Removing and installing front wing for Lupo 3L, FSI and GTI	9
4 Noise insulation	11
4.1 Tools	11
4.2 Assembly overview - noise insulation	11
55 - Bonnet, rear lid	12
1 Contact corrosion! Lupo 3L, FSI and GTI	12
2 Bonnet	13
2.1 Tools	13
2.2 Removing and installing bonnet	13
2.3 Bonnet striker pin fixing (Lupo 3L, FSI and GTI)	14
2.4 Attachment of gas-filled struts (Lupo 3L, FSI and GTI)	14
2.5 Bonnet hinge fixing (Lupo 3L, FSI and GTI)	15
2.6 Adjusting bonnet	15
2.7 Removing gas-filled strut	15
2.8 Removing and installing Bowden cable	15
2.9 Removing and installing release lever	17
2.10 Removing and installing bonnet lock	18
3 Rear lid	20
3.1 Note on magnesium components	20
3.2 Tools	20
3.3 Assembly overview - rear lid	21
3.4 Adjusting rear lid	22
3.5 Removing gas-filled strut	23
3.6 Releasing gas from gas strut	24
3.7 Removing and installing rear lid lock	24
3.8 Removing and installing lock cylinder housing	26
3.9 Lid seals	26
3.10 Removing and installing lid inner seal	27
4 Fuel tank flap	28
4.1 Tools	28
4.2 Assembly overview - tank flap unit	28
57 - Front doors, door components, central locking	29
1 Contact corrosion! Lupo 3L, FSI and GTI	29
2 Front door	30
2.1 Tools	30
2.2 Assembly overview - front door	30
2.3 Removing and installing door	33
2.4 Adjusting door	33
2.5 Assembly overview - door handle and door lock	34
2.6 Removing and installing lock cylinder housing	35



2.7	Removing and installing door handle	36
2.8	Removing and installing door lock	37
2.9	Removing and installing door arrester	38
2.10	Removing and installing locking knob for locking rod	38
2.11	Door seals	40
2.12	Removing and installing interior door seal	40
3	Central locking	41
3.1	Tools	41
3.2	Location overview - central locking components	41
3.3	Removing and installing battery for illuminated key	43
3.4	Removing and installing batteries for key (non-folding type) with remote-control unit	46
3.5	Adapting keys with remote control	47
60	Sunroof	48
1	Sliding/tilting sunroof with glass panel (Webasto)	48
1.1	Function	48
1.2	Assembly overview- sliding/tilting sunroof with glass panel	48
1.3	Removing sunroof glass panel	50
1.4	Installing glass panel for sliding/tilting sunroof	50
1.5	Adjusting height of sliding/tilting sunroof glass panel	51
1.6	Renewing panel seal	52
1.7	Removing wind deflector	52
1.8	Removing and installing sliding headlining	52
1.9	Removing sliding/tilting sunroof preselector switch	53
1.10	Removing drive for sliding/tilting sunroof	54
1.11	Adjusting drive for sliding/tilting sunroof ("0" position)	54
1.12	Checking parallel running	54
1.13	Adjusting parallel running	55
1.14	Removing and installing carrier unit	55
1.15	Cleaning water drain hoses	58
2	Folding fabric sunroof	60
2.1	Assembly overview - folding fabric sunroof	60
2.2	Removing and installing complete folding fabric sunroof	61
2.3	Screw sequence	62
2.4	Removing and installing folding fabric sunroof with cover and trim	63
2.5	Renewing folding fabric sunroof cover and trim	64
2.6	Tightening folding fabric sunroof	65
2.7	Checking parallel running	66
2.8	Adjusting parallel running	66
2.9	Renewing roof spoiler	66
63	Bumpers	68
1	Contact corrosion! Lupo 3L, FSI, GTI	68
2	Front bumper	69
2.1	Tools	69
2.2	Repairing bumper cover	69
2.3	Removing bumper, Lupo	69
2.4	Removing bumper Lupo 3L, FSI	71
2.5	Removing bumper, Lupo GTI	72
2.6	Removing and installing bumper cover insert	74
3	Rear bumper	75
3.1	Tools	75
3.2	Removing and installing bumper	75
64	Glazing	77



1	Contact corrosion! Lupo 3L, FSI, GTI	77
2	Flush bonded windows	78
2.1	Tools	78
2.2	Materials	79
2.3	Repairing windscreen	80
2.4	Assembly overview - windscreen	80
2.5	Removing and installing plenum chamber cover	81
2.6	Removing windscreen	83
2.7	Installing windscreen	84
2.8	Assembly overview - rear window	85
2.9	Removing undamaged rear window	85
2.10	Removing broken rear window	86
2.11	Installing rear window	87
2.12	Assembly overview - side window	87
2.13	Removing undamaged side window	87
2.14	Removing broken side window	88
2.15	Installing side window	88
2.16	Preparing old undamaged window for glazing	88
2.17	Preparing new window for glazing	89
2.18	Preparing body flange for glazing	90
2.19	Installation instructions	91
2.20	Minimum curing time	91
2.21	Touching up paintwork damage	92
2.22	Touching up paintwork damage, rear lid for Lupo 3L and FSI up to chassis number 6E-1-010 000 (aluminium/magnesium)	92
2.23	Cleaning off excess adhesive sealing material	92
3	Windows having threaded connections	93
3.1	Assembly overview - hinged window	93
3.2	Removing and installing hinged window	94
3.3	Installing sealing frame	95
4	Door windows	96
4.1	Assembly overview- front door window	96
4.2	Removing and installing door window	96
4.3	Adjusting door window	97
4.4	Removing and installing outer window channel	97
4.5	Removing and installing window regulator	99
4.6	Repairing electric window regulators	99
66	Exterior equipment	101
1	Contact corrosion! Lupo 3L, FSI, GTI	101
2	Wheel housing liner	102
2.1	Removing and installing front wheel housing liner	102
2.2	Removing and installing rear wheel housing liner	103
3	Exterior mirror	104
3.1	Tools	104
3.2	Assembly overview	104
3.3	Removing mirror housing	105
4	Trim	106
4.1	Removing and installing radiator grille with trim frame	106
4.2	Removing trim frame	106
4.3	Removing radiator trim (Lupo 3L, FSI)	107
4.4	Assembly overview - plenum chamber cover	107
4.5	Removing and installing radiator grille, Lupo GTI	108
5	Mouldings	109
5.1	Tools	109



5.2	Removing and installing roof moulding	109
5.3	Protective side mouldings	111
6	Rear spoiler	112
6.1	Tools	112
6.2	Assembly overview - rear spoiler for Lupo GTI and FSI from chassis number 6E-1-010-000	112
6.3	Removing and installing rear spoiler for Lupo GTI and FSI from chassis number 6E-1-010-000	113
6.4	Assembly overview - rear spoiler for Lupo FSI up to chassis number 6E-1-010 000	114
6.5	Removing and installing rear spoiler for Lupo FSI up to chassis number 6E-1-010 000 ..	115