



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Gearbox identification</b>	<b>1</b>
1.1 Location on gearbox	1
1.2 Identification code, assembly allocation, capacities	1
<b>2 Overview - power transmission</b>	<b>3</b>
<b>3 Calculating overall gear ratio "i"</b>	<b>5</b>
<b>4 General repair notes</b>	<b>6</b>
4.1 Components	6
<b>30 - Clutch</b>	<b>9</b>
<b>1 Repairing clutch mechanism</b>	<b>9</b>
1.1 Assembly overview - pedal cluster	10
1.2 Distinguishing between clutch pedal switches F36	11
1.3 Removing and installing clutch pedal switch with rectangular housing	11
1.4 Removing and installing clutch pedal switch with round housing	12
1.5 Removing and installing over-centre spring (left hand drive)	13
1.6 Removing and installing over-centre spring (right hand drive)	13
1.7 Removing and installing clutch pedal	15
1.8 Removing and installing mounting bracket	17
1.9 Assembly overview - hydraulic system	19
1.10 Removing and installing master cylinder	21
1.11 Removing and installing slave cylinder	24
1.12 Removing and installing pipe/hose line	25
1.13 Bleeding clutch system	27
<b>2 Repairing clutch release mechanism</b>	<b>29</b>
<b>3 Repairing clutch</b>	<b>31</b>
<b>34 - Controls, housing</b>	<b>34</b>
<b>1 Repairing selector mechanism</b>	<b>34</b>
1.1 Installation position of selector mechanism	34
1.2 Removing and installing selector lever knob and cover	36
1.3 Repairing selector lever and selector lever housing	38
1.4 Assembly overview - removing and installing selector cables	39
1.5 Removing and installing selector mechanism	41
1.6 Adjusting selector mechanism	44
<b>2 Removing and installing gearbox</b>	<b>47</b>
2.1 Removing gearbox	48
2.2 Transporting gearbox	52
2.3 Installing gearbox	52
<b>3 Checking gear oil</b>	<b>57</b>
<b>4 Dismantling and assembling gearbox</b>	<b>58</b>
4.1 Overview - gearbox	58
4.2 Removing and installing cover for gearbox housing and 5th and 6th gear	60
4.3 Removing and installing clutch housing	62
4.4 Removing and installing input shaft, output shaft (drive pinion), differential, selector mechanism and selector forks	63
4.5 Dismantling and assembling procedure	64
<b>5 Repairing gearbox housing and clutch housing</b>	<b>76</b>
<b>6 Repairing gearbox housing cover</b>	<b>81</b>
<b>7 Repairing selector unit</b>	<b>84</b>
<b>8 Dismantling and assembling selector forks</b>	<b>86</b>



<b>35 - Gears, shafts</b> .....	<b>92</b>
<b>1 Input shaft</b> .....	<b>92</b>
1.1 Dismantling and assembling input shaft .....	92
<b>2 Output shaft</b> .....	<b>102</b>
2.1 Dismantling and assembling output shaft .....	102
<b>39 - Final drive - differential</b> .....	<b>110</b>
<b>1 Renewing oil seals for flange shafts</b> .....	<b>110</b>
1.1 Renewing oil seal for left flange shaft .....	110
1.2 Renewing seal for right flange shaft .....	112
<b>2 Differential</b> .....	<b>114</b>
2.1 Dismantling and assembling differential .....	114
2.2 Adjusting differential .....	123