



## Contents

<b>00 - Technical data . . . . .</b>	<b>1</b>
1 <b>Technical data . . . . .</b>	1
1.1    Technical data . . . . .	1
1.2    Engine number . . . . .	1
1.3    Engine data . . . . .	1
<b>10 - Removing and installing engine . . . . .</b>	<b>3</b>
1 <b>Removing and installing engine . . . . .</b>	3
1.1    Removing and installing engine . . . . .	3
1.2    Notes on removing . . . . .	4
1.3    Securing engine to assembly stand . . . . .	7
1.4    Notes on installing . . . . .	7
1.5    Tightening torques . . . . .	8
1.6    Assembly mountings . . . . .	9
1.7    Additional information and removal instructions for vehicles with air conditioner . . . . .	10
<b>13 - Crankshaft group . . . . .</b>	<b>11</b>
1 <b>Dismantling and assembling engine . . . . .</b>	11
1.1    Dismantling and assembling engine . . . . .	11
1.2    Removing and installing ribbed belt . . . . .	21
2 <b>Dismantling and assembling cylinder block, crankshaft and flywheel . . . . .</b>	23
2.1    Dismantling and assembling cylinder block, crankshaft and flywheel . . . . .	23
2.2    Crankshaft dimensions . . . . .	26
2.3    Renewing crankshaft oil seal -belt pulley end- . . . . .	26
2.4    Renewing crankshaft sealing flange -flywheel end- . . . . .	28
3 <b>Dismantling and assembling pistons and conrods . . . . .</b>	37
3.1    Dismantling and assembling pistons and conrods . . . . .	37
3.2    Piston and cylinder dimensions . . . . .	43
<b>15 - Cylinder head, Valve gear . . . . .</b>	<b>44</b>
1 <b>Removing and installing cylinder head . . . . .</b>	44
1.1    Removing and installing cylinder head . . . . .	44
1.2    Checking valve timing . . . . .	49
1.3    Checking semi-automatic toothed belt tensioning roller . . . . .	52
1.4    Removing, installing and tensioning toothed belts . . . . .	56
1.5    Removing and installing camshaft housing . . . . .	63
1.6    Removing and installing cylinder head . . . . .	66
1.7    Checking compression pressures . . . . .	69
2 <b>Servicing valve gear . . . . .</b>	71
2.1    Servicing valve gear . . . . .	71
2.2    Reworking valve seats . . . . .	80
2.3    Removing and installing camshaft adjuster and exhaust camshaft sprocket . . . . .	82
2.4    Renewing camshaft oil seals . . . . .	90
2.5    Checking valve guides . . . . .	93
2.6    Renewing valve guides . . . . .	94
2.7    Renewing valve stem seals . . . . .	95
<b>17 - Lubrication . . . . .</b>	<b>98</b>
1 <b>Removing and installing parts of the lubrication system . . . . .</b>	98
1.1    Removing and installing parts of the lubrication system . . . . .	98
1.2    Removing and installing oil sump . . . . .	105
1.3    Removing and installing oil pump . . . . .	107
1.4    Checking oil pressure and oil pressure switch . . . . .	110



<b>19 - Cooling system . . . . .</b>	<b>112</b>
1 <b>Removing and installing parts of cooling system . . . . .</b>	<b>112</b>
1.1    Removing and installing parts of cooling system . . . . .	112
1.2    Parts of cooling system body side . . . . .	113
1.3    Parts of cooling system engine side . . . . .	116
1.4    Coolant hose connection diagram . . . . .	121
1.5    Draining and filling cooling system . . . . .	122
1.6    Removing and installing radiator . . . . .	124
1.7    Removing and installing coolant pump . . . . .	126
<b>20 - Fuel supply system . . . . .</b>	<b>128</b>
1 <b>Removing and installing parts of fuel supply system . . . . .</b>	<b>128</b>
1.1    Removing and installing parts of fuel supply system . . . . .	128
1.2    Removing and installing fuel tank with its attachments and fuel filter . . . . .	129
1.3    Safety precautions when working on the fuel supply system . . . . .	133
1.4    Rules for cleanliness . . . . .	134
1.5    Removing and installing fuel delivery unit . . . . .	134
1.6    Removing and installing fuel tank . . . . .	135
1.7    Crash fuel shut-off . . . . .	137
1.8    Checking fuel pump . . . . .	138
2 <b>Electronic power control (EPC) . . . . .</b>	<b>144</b>
2.1    Electronic power control (EPC) . . . . .	144
2.2    Servicing parts of electronic power control (EPC) . . . . .	144
3 <b>Activated charcoal filter system . . . . .</b>	<b>145</b>
3.1    Activated charcoal filter system . . . . .	145
3.2    Servicing parts of the activated charcoal filter system . . . . .	145
3.3    Checking fuel tank breather . . . . .	147
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>149</b>
1 <b>Servicing injection system . . . . .</b>	<b>149</b>
1.1    Servicing injection system . . . . .	149
1.2    Fitting locations overview . . . . .	149
1.3    General notes on injection . . . . .	155
1.4    Removing and installing parts of the injection system . . . . .	156
1.5    Dismantling and assembling intake manifold . . . . .	164
1.6    Dismantling and assembling fuel rail with injectors . . . . .	167
1.7    Dismantling and assembling air cleaner . . . . .	170
1.8    Safety precautions . . . . .	173
1.9    Rules for cleanliness . . . . .	174
1.10   Technical data . . . . .	174
2 <b>Checking components . . . . .</b>	<b>175</b>
2.1    Checking components . . . . .	175
2.2    Checking injectors . . . . .	175
2.3    Checking fuel pressure regulator and holding pressure . . . . .	178
2.4    Adapting components . . . . .	182
<b>26 - Exhaust system . . . . .</b>	<b>183</b>
1 <b>Removing and installing parts of exhaust system . . . . .</b>	<b>183</b>
1.1    Removing and installing parts of exhaust system . . . . .	183
1.2    Exhaust manifold, front exhaust pipe and catalyst with attachments . . . . .	183
<b>28 - Ignition system . . . . .</b>	<b>190</b>
1 <b>Servicing ignition system . . . . .</b>	<b>190</b>
1.1    Servicing ignition system . . . . .	190
1.2    General notes on ignition system . . . . .	190

---



---

1.3	Removing and installing parts of the ignition system . . . . .	191
1.4	Safety precautions . . . . .	193
1.5	Test data, spark plugs . . . . .	194