

001 - Basic equipment	1-19
1. Basic equipment	1
2. Battery, ignition/starter switch, X-contact relief relay	2
3. Dash panel insert, rev. counter, odometer display, belt warning system	3
4. Dash panel insert, digital clock, main beam warning lamp, turn signal indicator lamp, handbrake warning, brake fluid level warning contact	4
5. Light switch	5
6. Tail lights, brake light, rear fog light, reversing light, rear turn signals	6
7. Headlight dipper/flasher switch, left headlight, turn signal switch, parking light switch	7
8. Right headlight, front turn signal	8
9. Hazard warning switch with blinker relay, heated rear window	9
10. Heated rear window switch	10
11. Switch and instrument illumination regulator, headlight range control	11
12. Fresh air blower, fresh air blower switch, fresh air/recirculated air flap positioning motor	12
13. Intermittent wipe wiper switch, wiper motor, front and rear washer pump, intermittent wash and wipe relay	13
14. Rear window wiper motor, heater element for washer jet	14
15. Interior light, door contact switch, registration plate light	15
16. Brake light switch, cigarette lighter	16
17. Immobilizer, self-diagnosis connection	17
18. Horn, reversing light switch	18
19. Radio connection	19
002 - 1.4 ltr./55kW 4AV, engine code AHW, AKQ	20-29
1. 1.4 ltr./55kW 4AV, engine code AHW, AKQ	20
2. Battery, starter, alternator, radiator fan	21
3. 4AV control unit (injection system), ignition system, Hall sender	22
4. 4AV control unit (injection system), throttle valve control part, intake manifold pressure sender, intake air temperature sender	23
5. 4AV control unit (injection system), engine speed sender, coolant temperature sender, injectors	24
6. 4AV control unit (injection system), Lambda probe, activated charcoal filter sytem solenoid valve, exhaust gas recirculation pulsed valve	25
7. 4AV (injection system) control unit, knock sensor, fuel pump relay, control unit for fuel shut-off (crash)	26-27
8. Fuel pump relay, speedometer sender, fuel gauge sender, coolant shortage warning sender	28
9. Dash panel insert, oil pressure warning, coolant temperature gauge, fuel gauge, rev. counter, alternator warning lamp, coolant shortage and coolant temperature warning lamp	29
003 - 1.7 l/44 kW - diesel engine, engine code AKU	30-39
1. 1.7 l/44 kW - diesel engine, engine code AKU	30
2. Battery, starter, alternator, radiator fan	31
3. Diesel direct injection system control unit, engine speed sender, intake air temperature sender	32
4. Diesel direct injection system control unit, needle lift sender, exhaust gas recirculation valve, fuel shut-off control unit for crash	33-34
5. Diesel direct injection system control unit, metering adjuster, fuel temperature sender, modulating piston movement sender, clutch pedal switch	35
6. Diesel direct injection system control unit, accelerator sender, low heat output relay, high heat output relay, coolant heater element(s)	36
7. Diesel direct injection system control unit, engine and coolant temperature sender, fuel shut-off valve, voltage supply relay, commencement of injection valve, throttle valve module	37
8. Brake light switch, speedometer sender, engine glow plugs, engine glow plug relay, oil pressure switch	38
9. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustic oil pressure warning, odometer	39
004 - 1.0 ltr./37 kW Simos, engine code AHT	40-48
1. 1.0 ltr./37 kW Simos, engine code AHT	40
2. Battery, starter, alternator, radiator fan	41
3. Simos control unit, ignition system, Hall sender	42
4. Simos control unit, throttle valve control unit, intake manifold pressure sender, intake manifold temperature sender	43
5. Simos control unit, engine speed sender, coolant temperature sender, injectors	44
6. Simos control unit, Lambda probe, activated charcoal filter system solenoid valve, power steering pressure switch	45
7. Simos control unit, knock sensor, fuel pump relay, fuel shut-off (crash) control unit	46
8. Fuel pump relay, speedometer sender, fuel gauge sender, coolant shortage warning sender	47
9. Dash panel insert, oil pressure warning, coolant temperature gauge, fuel gauge, rev. counter, alternator warning lamp, coolant shortage and coolant temperature warning lamp	48
005 - Airbaa svstem	49-51

1. Airbag system	49
2. Airbag control unit, airbag coil connector, front airbag igniter, side airbag driver's side	50
3. Airbag control unit, side airbag front passenger's side, airbag warning lamp	51
006 - Anti-lock brake system (ABS)	52-56
1. Anti-lock brake system (ABS)	52
2. Battery, ABS control unit with EDL, brake light switch, fuses on battery fuse holder	53
3. ABS control unit, ABS hydraulic pump, front speed sensor	54
4. ABS control unit, rear speed sensor	55
5. ABS control unit, dash panel insert	56
007 - Central locking with remote control, anti-theft alarm system, window regulator	57-65
1. Central locking with remote control, anti-theft alarm system, window regulator	57
2. Central locking and anti-theft alarm system control unit, driver side central locking lock unit, central locking warning lamp	58
3. Central locking and anti-theft alarm system control unit, front passenger side central locking lock unit	59
4. Central locking and anti-theft alarm system control unit, rear lid central locking switch, contact switch in lock cylinder for rear lid, rear lid central locking motor	60
5. Central locking and anti-theft alarm system control unit, anti-theft alarm contact switch, anti-theft alarm system horn, central locking and anti-theft alarm system aerial	61
6. Central locking and anti-theft alarm system control unit, switch in driver door, front left window regulator	62
7. Central locking and anti-theft alarm system control unit, front left window regulator control unit, front right window regulator control unit, right window regulator motor	63
8. Central locking and anti-theft alarm system control unit, front right window regulator switch, fuses	64
9. Fuses	65
008 - Air conditioning system	66-70
1. Air conditioning system	66
2. Fresh air and air recirculation switch, fresh air blower, fresh/recirculating air flap positioning motor	67
3. Fresh air blower switch, radiator fan control unit, air conditioning system switch, ambient temperature switch	68
4. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling	69
5. Radiator fan control unit, thermo-switch for radiator fan, high pressure sender	70
009 - Automatic gearbox	71-76
1. Automatic gearbox	71
2. Battery, starter, alternator, radiator fan, starter inhibitor relay	72
3. 4AV injection system control unit, automatic gearbox control unit, multifunction switch	73
4. Automatic gearbox control unit, solenoid valves, solenoid valve series resistance, vehicle speed sender	74
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid, kickdown switch	75
6. Starter inhibitor switch, selector lever illumination	76
010 - 1.0 I/37 kW - Motronic, engine code ALL	77-85
1. 1.0 I/37 kW - Motronic, engine code ALL	77
2. Battery, alternator, starter, radiator fan	78
3. Motronic control unit, ignition system, Hall sender, coolant temperature sender, power assisted steering pressure switch	79
4. Motronic control unit, throttle valve module, intake air temperature sender, intake manifold pressure sender	80
5. Motronic control unit, injectors, Lambda probe	81
6. Motronic control unit, knock sensor, activated charcoal filter system	82
7. Fuel pump relay, fuel shut-off control unit for crash	83
8. Speedometer sender, coolant shortage indicator sender, fuel supply	84
9. Dash panel insert, alternator warning lamp, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustic oil pressure warning, odometer	85
011 - 1.0 I/37 kW - Motronic, engine code ALL	86-94
1. 1.0 I/37 kW - Motronic, engine code ALL	86
2. Battery, alternator, starter, radiator fan	87
3. Motronic control unit, ignition system, Hall sender, coolant temperature sender, power assisted steering pressure switch	88
4. Motronic control unit, throttle valve module, intake air temperature sender, intake manifold pressure sender	89
5. Motronic control unit, injectors, Lambda probe	90
6. Motronic control unit, knock sensor, exhaust gas recirculation frequency valve, activated charcoal filter svstem	91

7. Motronic control unit, fuel pump relay	92
8. Speedometer sender, coolant shortage indicator sender, fuel supply	93
9. Dash panel insert, alternator warning lamp, fuel gauge, coolant shortage and coolant temperature indicator, optical and acoustic oil pressure warning, odometer	94
012 - Basic equipment	95-113
1. Basic equipment	95
2. Battery, ignition/starter switch, X-contact relief relay	96
3. Dash panel insert, rev. counter, odometer display, belt warning system, alternator warning lamp	97
4. Dash panel insert, digital clock, main beam warning lamp, turn signal indicator lamp, handbrake warning, brake fluid level warning contact	98
5. Light switch	99
6. Tail lights, brake light, rear fog light, reversing light, rear turn signals	100
7. Headlight dipper/flasher switch, left headlight, turn signal switch, parking light switch	101
8. Right headlight, front turn signal	102
9. Hazard warning switch with blinker relay, heated rear window	103
10. Heated rear window switch	104
11. Switch and instrument illumination regulator, headlight range control	105
12. Fresh air blower, fresh air blower switch, fresh air/recirculated air flap positioning motor	106
13. Intermittent wipe wiper switch, wiper motor, front and rear washer pump, intermittent wash and wipe relay	107
14. Rear window wiper motor, heater element for washer jet	108
15. Interior light, door contact switch, registration plate light	109
16. Brake light switch, cigarette lighter, fog light	110
17. Immobilizer, self-diagnosis connection	111
18. Horn, reversing light switch	112
19. Radio system	113
013 - 1.4 l/74 kW - engine code AFK	114-122
1. 1.4 l/74 kW - engine code AFK	114
2. Battery, alternator, starter, radiator fan, radiator fan thermal switch	115
3. 4AV/4CV injection system control unit, ignition system, engine speed sender	116
4. 4AV/4CV injection system control unit, throttle valve module, intake manifold pressure sender, intake manifold temperature sender	117
5. 4AV/4CV injection system control unit, Hall sender, coolant temperature sender, injectors, crankcase breather heater element	118
6. 4AV/4CV injection system control unit, Lambda probe, activated charcoal filter system solenoid valve, exhaust gas recirculation frequency valve, crankcase breather heater element	119
7. 4AV/4CV injection system control unit, knock sensor, fuel pump relay, fuel shut-off control unit for crash	120
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	121
9. Dash panel insert, oil pressure warning, coolant temperature display, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage display	122
014 - Seat heating, driver's and passenger's side	123-125
1. Seat heating, driver's and passenger's side	123
2. Driver's seat heating	124
3. Front passenger's seat heating	125
015 - Airbag system	126-128
1. Airbag system	126
2. Airbag control unit, airbag coil connector, front airbag igniter, side airbag driver's side	127
3. Airbag control unit, side airbag front passenger's side, airbag warning lamp	128
016 - Anti-lock brake system (ABS)	129-133
1. Anti-lock brake system (ABS)	129
2. Battery, ABS control unit with EDL, brake light switch, fuses on battery fuse holder	130
3. ABS control unit, ABS hydraulic pump, front speed sensor	131
4. ABS control unit, rear speed sensor	132
5. ABS control unit, dash panel insert	133
017 - Central locking with remote control	134-142
1. Central locking with remote control	134
2. Central locking and anti-theft alarm system control unit, driver side central locking lock unit, central locking warning lamp	135
3. Central locking and anti-theft alarm system control unit, front passenger side central locking lock unit	136
4. Central locking and anti-theft alarm system control unit, rear lid central locking switch, contact switch in lock cylinder for rear lid, rear lid central locking motor	137
5. Central locking and anti-theft alarm system control unit, anti-theft alarm system contact switch, anti-theft alarm system horn	138
6. Central locking and anti-theft alarm system control unit. switch in driver door. front left	139

window regulator	
7. Central locking and anti-theft alarm system control unit, front left window regulator control unit, front right window regulator control unit, right window regulator motor	140
8. Central locking and anti-theft alarm system control unit, fuses	141
9. Fuses, front right window regulator switch, window regulator switch illumination	142
018 - Daylight driving lights	143-149
1. Daylight driving lights	143
2. Dash panel insert, main beam warning lamp, relief relay for X contact	144
3. Lighting switch	145
4. Tail lights, brake lights, rear fog light, reversing light, rear turn signal	146
5. Headlight dip/flasher switch, left headlight, turn signal switch, switch for parking lights, left side light	147
6. Right headlight, right side light	148
7. Lighting regulator for switches and instruments, headlight range control, licence plate lights	149
019 - 1.7 ltr./44kW diesel engine, engine code AKU	150-158
1. 1.7 ltr./44kW diesel engine, engine code AKU	150
2. Battery, starter, alternator, radiator fan	151
3. Diesel direct injection system control unit, engine speed sender, intake air temperature sender	152
4. Diesel direct injection system control unit, needle lift sender, exhaust gas recirculation valve, fuel shut-off (cash) control unit	153
5. Diesel direct injection system control unit, metering adjuster, fuel temperature sender, modulating piston movement sender, clutch pedal switch	154
6. Diesel direct injection control unit, accelerator position sender, low heat output relay, high heat output relay, coolant heater elements	155
7. Diesel direct injection system control unit, engine and coolant temperature sender, fuel shut-off valve, voltage supply relay, commencement of injection valve, valve for throttle butterfly	156
8. Brake light switch, speedometer sender, engine glow plugs, glow plug relay, oil pressure switch	157
9. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, optical and acoustic oil pressure warning, odometer display	158
020 - Folding fabric sunroof (only models with no heated seats)	159-160
1. Folding fabric sunroof (only models with no heated seats)	159
2. Folding fabric sunroof switch, sliding sunroof thermal switch, X contact relief relay, folding fabric sunroof motor	160
021 - Automatic gearbox	161-166
1. Automatic gearbox	161
2. Battery, starter, alternator, radiator fan, starter inhibitor relay	162
3. 4AV injection system control unit, automatic gearbox control unit, multifunction switch	163
4. Automatic gearbox control unit, solenoid valves, solenoid valve series resistance, vehicle speed sender	164
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid, kickdown switch	165
6. Starter inhibitor switch, selector lever illumination	166
022 - 1.0 ltr./37 kW Simos, engine code AHT	167-175
1. 1.0 ltr./37 kW Simos, engine code AHT	167
2. Battery, starter, alternator, radiator fan	168
3. Simos control unit, ignition system, Hall sender	169
4. Simos control unit, throttle valve control unit, intake manifold pressure sender, intake manifold temperature sender	170
5. Simos control unit, engine speed sender, coolant temperature sender, injectors	171
6. Simos control unit, Lambda probe, activated charcoal filter system solenoid valve, power steering pressure switch	172
7. Simos control unit, knock sensor, fuel pump relay, fuel shut-off (crash) control unit	173
8. Fuel pump relay, speedometer sender, fuel gauge sender, coolant shortage warning sender	174
9. Dash panel insert, oil pressure warning, coolant temperature gauge, fuel gauge, rev. counter, alternator warning lamp, coolant shortage and coolant temperature warning lamp	175
023 - Air conditioner	176-180
1. Air conditioner	176
2. Fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	177
3. Fresh air blower switch, radiator fan control unit, air conditioner switch, ambient temperature sensor	178
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling	179
5. Radiator fan control unit, radiator fan thermo-switch, high pressure sender	180
024 - Basic equipment, (Lupo 3L)	181-199
1. Basic equipment, (Lupo 3L)	181
2. Batterv. ignition/starter switch. X contact relief relav	182

3. Voltage stabiliser	183
4. Dash panel insert, speedometer, odometer display	184
5. Dash panel insert, tailgate/boot lid open warning lamp, rev. counter, digital clock, warning buzzer, alternator warning lamp	185
6. Dash panel insert, brake system warning lamp, main beam warning lamp, brake fluid level warning contact, rear fog light warning lamp, turn signal warning lamps	186
7. Handbrake warning lamp control unit, handbrake warning lamp, cigarette lighter	187
8. Hazard warning light switch, turn signal relay, front turn signals	188
9. Turn signal switch, headlight dipper/flasher switch, parking light switch, headlight front left	189
10. Right headlight front, headlight range control	190
11. Switches and instruments - lighting control, tail light left, brake light left, turn signal rear left, reversing light left, reversing light switch, rear fog light	191
12. Tail light right, brake light right, turn signal rear right, reversing light right, brake light switch, high level brake light, number plate light	192
13. Light switch	193
14. Front interior light, door contact switch driver's/front passenger's side	194
15. Immobilizer, horn plate, horn, airbag coil connector, return spring with slip ring	195
16. Heated rear window switch, heated rear window, tailgate/boot lid release switch, consumer switch-off relay	196
17. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	197
18. Intermittent wiper switch, rear wiper switch, automatic intermittent wash/wipe relay, windscreen wiper motor, windscreen and rear window washer pump	198
19. Rear window wiper motor, heater elements for washer jets	199
025 - 1.2 l/45 kW - turbo diesel with unit injectors, engine code ANY	200-211
1. 1.2 l/45 kW - turbo diesel with unit injectors, engine code ANY	200
2. Alternator, starter	201
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, accelerator position sender, kickdown switch, idling speed switch	202
4. Diesel direct injection system control unit, engine speed sender, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, immobilizer control unit	203
5. Diesel direct injection system control unit, unit injector valves, Hall sender (camshaft position sender)	204
6. Diesel direct injection system control unit, air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve, variable intake manifold flap changeover valve	205
7. Diesel direct injection system control unit, high heat output and low heat output relays, auxiliary heater element	206
8. Diesel direct injection system control unit, fuel temperature sender, crankcase breather heater element	207
9. Diesel direct injection system control unit, brake light switch, brake pedal switch for diesel direct injection system	208
10. Glow plug relay, speedometer sender, oil pressure switch, engine glow plugs	209
11. Dash panel insert, fuel gauge sender, coolant temperature/coolant shortage indicator, optical and acoustic oil pressure warning	210
12. Dash panel insert, coolant temperature display, fuel gauge, rev. counter, speedometer, alternator warning lamp, self-diagnosis connection, data bus diagnostic interface	211
026 -	212-221
1.	212
2. Battery, alternator, starter, radiator fan, thermal switch	213
3. Motronic control unit, ignition system, engine speed sender	214
4. Motronic control unit, throttle valve control unit, pedal value sender, intake manifold pressure sender, intake manifold temperature sender, brake light switch, brake pedal switch	215
5. Motronic control unit, Hall sender 1, coolant temperature sender, injectors, power assisted steering pressure switch	216
6. Motronic control unit, lambda probe, activated charcoal filter system solenoid valve, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	217
7. Motronic control unit, knock sensor, fuel pump relay, crash fuel shut-off control unit	218
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	219
9. Oil pressure warning lamp, coolant temperature gauge, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage warning lamp	220
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	221
027 -	222-231
1.	222
2. Battery, alternator, starter, radiator fan	223
3. 4LV control unit (injection system), ignition system, engine speed sender	224
4. 4LV control unit (injection system). throttle valve control unit. pedal value sender. intake	225

manifold pressure sender, intake manifold temperature sender, brake light switch, brake pedal switch	
5. 4LV control unit (injection system), Hall sender 1, coolant temperature sender, injectors	226
6. 4LV control unit (injection system), lambda probe I, lambda probe II, activated charcoal filter system solenoid valve, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	227
7. 4LV control unit (injection system), knock sensor, fuel pump relay, fuel shut-off control unit (crash)	228
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	229
9. Dash panel insert, oil pressure warning lamp, coolant temperature gauge, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage warning lamp	230
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	231
028 - 1.4 l/55 kW - turbo diesel engine with unit injectors, engine code AMF	232-243
1. 1.4 l/55 kW - turbo diesel engine with unit injectors, engine code AMF	232
2. Alternator, starter, radiator fan thermal switch, radiator fan, fuses	233
3. Diesel direct injection system control unit, voltage supply relay, idling speed switch, accelerator position sender	234
4. Diesel direct injection system control unit, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, engine speed sender	235
5. Diesel direct injection system control unit, unit injector valves, Hall sender (for camshaft)	236
6. Diesel direct injection system control unit, air mass meter, exhaust gas recirculation valve, variable intake manifold flap changeover valve, exhaust gas recirculation valve, charge pressure control solenoid valve	237
7. Diesel direct injection system control unit, coolant heater element(s), high and low heat output relay	238
8. Diesel direct injection system control unit, fuel temperature sender, crankcase breather heater element	239
9. Diesel direct injection system control unit, brake pedal switch for diesel direct injection system, brake light switch, clutch pedal switch	240
10. Glow plug relay, speedometer sender, oil pressure switch, engine glow plugs	241
11. Dash panel insert, fuel gauge sender, coolant shortage indicator sender	242
12. Dash panel insert, coolant temperature display, fuel gauge, rev. counter, speedometer, warning lamps, self-diagnosis connection	243
029 - Air conditioner	244-248
1. Air conditioner	244
2. Fresh air/air recirculation flap switch, fresh air blower, fresh/air recirculation flap control motor, fuse	245
3. Fresh air blower switch, radiator fan control unit, air conditioner switch, ambient temperature sensor, fuse	246
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling	247
5. Radiator fan control unit, radiator fan thermal-switch, high pressure sender	248
030 - 1.7 ltr./44kW diesel engine, engine code AKU	249-258
1. 1.7 ltr./44kW diesel engine, engine code AKU	249
2. Battery, starter, alternator, radiator fan	250
3. Diesel direct injection system control unit, engine speed sender, intake air temperature sender, immobilizer control unit	251
4. Diesel direct injection system control unit, needle lift sender, exhaust gas recirculation valve, fuel shut-off (crash) control unit	252
5. Diesel direct injection system control unit, metering adjuster, fuel temperature sender, modulating piston movement sender, clutch pedal switch	253
6. Diesel direct injection system control unit, accelerator pedal position sender, low heat output relay, high heat output relay, coolant heating elements	254
7. Diesel direct injection system control unit, engine and coolant temperature sender, fuel shut-off valve, voltage supply relay, commencement of injection valve, valve for throttle butterfly	255
8. Brake light switch, speedometer sender, engine glow plugs, glow plug relay, oil pressure switch	256
9. Dash panel insert, fuel gauge, coolant shortage and coolant temperature warning/gauge, optical and acoustic oil pressure warning, odometer display	257
10. Dash panel insert, self-diagnosis connection, diagnosis interface for data bus	258
031 - Electronic manual gearbox 085	259-266
1. Electronic manual gearbox 085	259
2. Alternator, starter, fuses	260
3. Electronic manual gearbox control unit, consumer switch-off relay, reversing light switch	261
4. Electronic manual gearbox control unit, start/stop mode switch, brake pressure switch, selector lever potentiometer, selector lever lock solenoid, bonnet contact switch	262
5. Electronic manual gearbox control unit, clutch travel sender, Selector lever gate detector switch, N switch detector, stop switch detector, E switch detector, gearbox speed sender	263
6. Electronic manual gearbox control unit, clutch actuator hydraulic pump relay, gearbox hydraulic pressure sender. clutch actuator valve	264

7. Electronic manual gearbox control unit, gear detection potentiometers 1 and 2, gear selection valves 1,2,3 and 4	265
8. Dash panel insert, rev. counter, bulb warning relay, speedometer, alternator warning lamp, blocking diode	266
032 - Airbags system	267-270
1. Airbags system	267
2. Airbag control unit, airbag coil connector, airbag igniter front, side airbag crash sensors	268
3. Airbag control unit, side airbag igniter, battery isolation igniter	269
4. Airbag control unit, airbag warning lamp, self-diagnosis connection	270
033 - Electric/mechanical power assisted steering	271-273
1. Electric/mechanical power assisted steering	271
2. Alternator, Steering column electronics control unit	272
3. Steering column electronics control unit, electro/mechanical power steering motor, steering position sender, steering moment sender	273
034 - Automatic gearbox	274-279
1. Automatic gearbox	274
2. Battery, starter, alternator, voltage regulator, starter inhibitor relay	275
3. 4LV (injection system) control unit, automatic gearbox control unit, multi-function switch	276
4. Automatic gearbox control unit, solenoid valves, vehicle speed sender	277
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid valve, selector lever display illumination, selector lever position P/N warning lamp	278
6. Fuses for selector lever illumination	279
035 - Automatic gearbox	280-285
1. Automatic gearbox	280
2. Battery, starter, alternator, radiator fan, starter inhibitor relay	281
3. 4AV/4CV injection system control unit, automatic gearbox control unit, multifunction switch	282
4. Automatic gearbox control unit, solenoid valves, solenoid valve series resistance, vehicle speed sender	283
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid, kickdown switch	284
6. Starter inhibitor switch, selector lever illumination	285
036 - Basic equipment	286-302
1. Basic equipment	286
2. Battery, ignition/starter switch, X-contact relief relay	287
3. Dash panel insert, rev. counter, odometer display, alternator warning lamp	288
4. Dash panel insert, handbrake warning switch, brake fluid level warning contact, driver side belt switch	289
5. Light switch	290
6. Tail lights, brake light, rear fog light, reversing light, rear turn signals	291
7. Headlight dipper/flasher switch, left headlight, turn signal switch, parking light switch	292
8. Right headlight, front turn signal	293
9. Hazard warning switch with turn signal (blinker) relay, heated rear window, turn signal relay	294
10. Heated rear window switch, switches and instruments illumination regulator, headlight range control regulator, headlight range control motor, fuses	295
11. Fresh air blower, fresh air blower switch, fresh air/recirculated air flap positioning motor	296
12. Window wiper switch, window washer motor, front and rear washer pump, intermittent wash and wipe relay	297
13. Rear window wiper motor, heater element for washer jet	298
14. Interior light, door contact switch, registration plate light, fog light	299
15. Reversing light switch, airbag coil connector, dual-tone horn relay, horn plate, horn/dual-tone horn	300
16. Immobilizer, self-diagnosis connection, immobilizer reader coil	301
17. Rear cigarette lighter, fuses	302
037 - 1.0 I/37 kW - Motronic, engine code AUC	303-312
1. 1.0 I/37 kW - Motronic, engine code AUC	303
2. Battery, alternator, starter, radiator fan	304
3. Motronic control unit, engine speed sender, spark plug connector, spark plug, ignition transformer	305
4. Motronic control unit, throttle valve module, pedal value sender, intake manifold pressure sender, intake air temperature sender, brake light switch, brake pedal switch	306
5. Motronic control unit, Hall sender 1, coolant temperature sender, injectors, power assisted steering pressure switch	307
6. Motronic control unit, Lambda probe I, Lambda probe II, activated charcoal filter system solenoid valve, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	308
7. Motronic control unit, knock sensor, fuel pump relay	309
8. Fuel pump. speedometer sender. fuel gauge sender. coolant shortage indicator sender	310

9. Dash panel insert, oil pressure warning, coolant temperature display, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage display	311
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	312
038 - 1.4 ltr./55 kW - 4LV, engine codes AUA	313-322
1. 1.4 ltr./55 kW - 4LV, engine codes AUA	313
2. Battery, alternator, starter, radiator fan	314
3. 4LV control unit (injection system), ignition system, engine speed sender	315
4. 4LV control unit (injection system), throttle valve control unit, pedal valve sender, intake manifold pressure sender, intake manifold temperature sender, brake light switch, brake pedal switch	316
5. 4LV control unit (injection system), Hall sender 1, coolant temperature sender, injectors	317
6. 4LV control unit (injection system), lambda probe I, lambda probe II, activated charcoal filter system solenoid valve, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	318
7. 4LV control unit (injection system), knock sensor, fuel pump relay	319
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender, heater element (crankcase breather)	320
9. Dash panel insert, oil pressure warning lamp, coolant temperature gauge, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage warning lamp	321
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	322
039 - Central locking with remote control	323-332
1. Central locking with remote control	323
2. Central locking and anti-theft alarm system control unit, driver side central locking lock unit, central locking warning lamp	324
3. Central locking and anti-theft alarm system control unit, front passenger side central locking lock unit	325
4. Central locking and anti-theft alarm system control unit, rear lid release switch, contact switch in lock cylinder for rear lid, rear lid central locking motor, self-diagnosis connection	326
5. Central locking and anti-theft alarm system control unit, anti-theft alarm system contact switch, alarm horn	327
6. Central locking and anti-theft alarm system control unit, interior monitoring sensor, interior monitoring sender	328
7. Central locking and anti-theft alarm system control unit, switch in driver door, front left window regulator	329
8. Central locking and anti-theft alarm system control unit, front left window regulator control unit, front right window regulator control unit, right window regulator motor	330
9. Central locking and anti-theft alarm system control unit, fuses	331
10. Fuses, front right window regulator switch, window regulator switch illumination	332
040 - Radio systems	333-336
1. Radio systems	333
2. Radio, dash panel insert	334
3. Radio, front loudspeaker, aerial, aerial amplifier	335
4. Radio, rear loudspeaker	336
041 - Exterior mirror, electrically adjustable and heated	337-339
1. Exterior mirror, electrically adjustable and heated	337
2. Mirror adjustment switch, electrically adjustable and heated exterior mirrors for driver's door, electrically adjustable and heated exterior mirrors for front passenger's door	338
3. Rear window switch	339
042 - Basic equipment	340-357
1. Basic equipment	340
2. Battery, ignition/starter switch, X-contact relief relay, fuses	341
3. Control unit with display in dash panel insert, rev. counter, odometer display, fuses	342
4. Control unit with display in dash panel insert, brake fluid level warning contact, handbrake warning switch	343
5. Light switch	344
6. Tail lights, high level brake light bulb	345
7. Turn signal switch, headlight dipper/flasher switch, left headlight, fuses	346
8. Right headlight, left and right side repeater turn signals, fuses	347
9. Hazard warning light switch, switch and instrument illumination regulator, turn signal relay	348
10. Heated rear window switch, heated rear window, fuses	349
11. Headlight washer system relay, headlight range control unit, headlight range control motor	350
12. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air and air recirculation mode warning lamp	351
13. Intermittent wiper switch, rear window wiper switch, automatic intermittent wash and wipe relay, wiper motor	352
14. Rear window wiper motor, left washer jet heater element, right washer jet heater element	353
15. Fuses, interior light, registration plate light	354
16. Horn. cigarette lighter. horn relav. airbad coil connector/return spring with slip ring. fuses	355

17. Immobilizer reader coil, immobilizer control unit, fuses, self-diagnosis connection	356
18. Fuses	357
043 - 1.6l/92 kW - Simos, engine code AVY	358-368
1. 1.6l/92 kW - Simos, engine code AVY	358
2. Battery, starter, alternator, voltage regulator, ignition/starter switch, radiator fan thermal switch, radiator fan	359
3. Engine speed sender, Simos control unit, ignition transformer, spark plug connector, spark plug, fuses	360
4. Ambient temperature sender, intake manifold pressure sender, accelerator position sender, accelerator position sender 2, throttle valve drive (electric throttle), throttle valve drive angle sender 1 (electric throttle), throttle valve drive angle sender 2 (electric throttle), throttle valve module, Simos control unit	361
5. Coolant temperature sender, Hall sender, ABS and EDL control unit, Simos control unit, injectors	362
6. Lambda probe, high-pressure sender, Lambda probe after catalytic converter, radiator fan control unit, Simos control unit, immobilizer control unit, crankcase breather heater element, activated charcoal filter system solenoid valve 1 (pulsed), fuses	363
7. Brake light switch, clutch pedal switch, brake pedal switch, knock sensor 1, Simos control unit, camshaft control valve 1, fuses	364
8. Fuel pump relay, airbag control unit, Simos control unit, central locking and anti-theft alarm system control unit, fuses	365
9. Fuel gauge sender, fuel system pressurisation pump, speedometer sender (Hall sender on gearbox), coolant shortage indicator sender, fuses	366
10. Oil pressure switch, fuel gauge, coolant temperature sender, rev. counter, oil pressure warning buzzer, control unit with display in dash panel insert, alternator warning lamp, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, reserve fuel warning lamp	367
11. Control unit with display in dash panel insert, data bus diagnostic interface, self-diagnosis connection	368
044 - Anti-lock brake system (ABS) with electronic differential lock (EDL)	369-372
1. Anti-lock brake system (ABS) with electronic differential lock (EDL)	369
2. ABS control unit, brake light switch, fuses on battery fuse holder	370
3. ABS control unit, inlet valves, outlet valves, speed sensor	371
4. ABS control unit, inlet valves, dash panel insert, self-diagnosis connection, ABS hydraulic pump	372
045 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	373-380
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	373
2. ABS with EDL control unit	374
3. ABS with EDL control unit, steering angle sender	375
4. ABS with EDL control unit, speed sensors	376
5. ABS with EDL control unit, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump	377
6. ABS with EDL control unit, brake pressure solenoid valve, brake pressure solenoid trip switch	378
7. ABS with EDL control unit, handbrake warning switch, brake light suppression relay, brake fluid level warning contact	379
8. Control unit with display in dash panel insert, handbrake warning lamp, ABS warning lamp, TCS/ESP warning lamp	380
046 - Radio and navigation system (MFD) with monochrome display	381-384
1. Radio and navigation system (MFD) with monochrome display	381
2. Control unit with display for radio and navigation system, dash panel insert	382
3. Control unit with display for radio and navigation system, front loudspeaker, radio/telephone aerial, navigation aerial (GPS)	383
4. Control unit with display for radio and navigation system, rear loudspeaker	384
047 - Electric sliding / tilting sunroof	385-386
1. Electric sliding / tilting sunroof	385
2. Sliding sunroof adjustment control unit, sliding sunroof adjustment regulator	386
048 - CAN-bus network	387-389
1. CAN-bus network	387
2. Dash panel insert, data bus diagnostic interface, self-diagnosis connection, airbag control unit connection	388
3. Connection for: ABS control unit, steering angle sender, automatic gearbox control unit, immobilizer control unit, electronic manual gearbox control unit, engine control units	389
049 - Basic equipment	390-409
1. Basic equipment	390-391
2. Battery, ignition/starter switch, X contact relief relay	392
3. Voltage stabiliser	393
4. Dash panel insert. speedometer. odometer display	394

5. Dash panel insert, tailgate/boot lid open warning lamp, rev. counter, digital clock, warning buzzer, alternator warning lamp	395
6. Dash panel insert, brake system warning lamp, main beam warning lamp, brake fluid level warning contact, rear fog light warning lamp, turn signal warning lamps	396
7. Handbrake warning lamp control unit, handbrake warning lamp, cigarette lighter	397
8. Hazard warning light switch, turn signal relay, front turn signals	398
9. Turn signal switch, headlight dipper/flasher switch, parking light switch, headlight front left	399
10. Right headlight front, headlight range control	400
11. Switches and instruments - lighting control, tail light left, brake light left, turn signal rear left, reversing light left, reversing light switch, rear fog light	401
12. Tail light right, brake light right, turn signal rear right, reversing light right, brake light switch, high level brake light, number plate light	402
13. Lighting switch	403
14. Interior light front, door contact switch driver's/front passenger's side	404
15. Immobilizer, horn plate, horn	405
16. Heated rear window switch, heated rear window	406
17. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	407
18. Intermittent wiper switch, rear wiper switch, automatic intermittent wash/wipe relay, windscreen wiper motor, windscreen and rear window washer pump	408
19. Rear window wiper motor, heater elements for washer jets, fog light	409
050 - 1.2 l/45 kW - turbo diesel engine with unit injectors, engine code AYZ	410-421
1. 1.2 l/45 kW - turbo diesel engine with unit injectors, engine code AYZ	410
2. Alternator, starter, radiator fan, radiator fan thermal switch, fuses	411
3. Diesel direct injection system control unit, voltage supply relay, kickdown switch, idling speed switch, accelerator position sender	412
4. Diesel direct injection system control unit, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, engine speed sender	413
5. Diesel direct injection system control unit, unit injector valves, Hall sender (for camshaft), auxiliary heating heater element contact switch	414
6. Diesel direct injection system control unit, air mass meter, variable intake manifold flap changeover valve, exhaust gas recirculation valve, charge pressure control solenoid valve, throttle valve actuator	415
7. Diesel direct injection system control unit, high heat output and low heat output relays, auxiliary heating heater element	416
8. Diesel direct injection system control unit, fuel temperature sender, crankcase breather heater element	417
9. Diesel direct injection system control unit, brake pedal switch for diesel direct injection system, brake light switch, clutch pedal switch	418
10. Glow plug relay, speedometer sender, oil pressure switch, engine glow plugs	419
11. Dash panel insert, fuel gauge sender, coolant temperature/coolant shortage indicator, optical and acoustic oil pressure warning	420
12. Dash panel insert, coolant temperature display, fuel gauge, rev. counter, self-diagnosis connection, speedometer, alternator warning lamp	421
051 - 1.4 l/77 kW - Motronic, engine code ARR (FSI)	422-433
1. 1.4 l/77 kW - Motronic, engine code ARR (FSI)	422
2. Battery, alternator, starter, radiator fan, radiator fan control unit	423
3. Motronic control unit, injectors for cylinders 1, 2, 3 and 4, engine speed sender	424
4. Motronic control unit, throttle valve module, pedal value sender, brake light switch, brake pedal switch, ignition coil 4	425
5. Motronic control unit, Hall sender 1, coolant temperature sender, injectors	426
6. Motronic control unit, Lambda probe, activated charcoal filter solenoid valve, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	427
7. Motronic control unit, NOx sensor control unit, NOx sender, intake manifold pressure sender	428
8. Motronic control unit, pressure sensor, air mass meter, radiator outlet coolant temperature sender, exhaust gas temperature sender, fuel pressure regulation valve	429
9. Motronic control unit, map-controlled engine cooling system thermostat, fuel pressure sender, intake manifold flap potentiometer, intake manifold flap valve, fuel metering valve, camshaft control valve, fuses	430
10. Motronic control unit, knock sensor, fuel pump relay	431
11. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	432
12. Dash panel insert, oil pressure warning, coolant temperature display, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage display warning lamp	433
052 - Manual gearbox 085 (electronic)	434-441
1. Manual gearbox 085 (electronic)	434
2. Alternator, starter	435

3. Electronic manual gearbox control unit, reversing light switch	436
4. Electronic manual gearbox control unit, eco-operation switch, brake pressure switch, selector lever lock solenoid	437
5. Electronic manual gearbox control unit, clutch travel sender, gearbox speed sender	438
6. Electronic manual gearbox control unit, clutch actuator hydraulic pump relay, hydraulic pressure sender, clutch actuator valve	439
7. Electronic manual gearbox control unit, gear detector potentiometer 1 and 2, selector lever valves 1, 2, 3 and 4	440
8. Dash panel insert, rev. counter, bulb warning relay, speedometer, alternator warning lamp, handbrake warning lamp, diode	441
053 - Heated seats, driver's and front passenger's side	442-444
1. Heated seats, driver's and front passenger's side	442
2. Heated driver's seat control unit, heated driver's seat adjuster, heated driver's seat, heated driver's seat backrest	443
3. Heated driver's seat control unit, heated front passenger's seat adjuster, heated front passenger's seat, heated front passenger's seat backrest	444
054 - Climatronic	445-452
1. Climatronic	445
2. Climatronic control unit, temperature flap control motor, dash panel temperature sensor	446
3. Climatronic control unit, central flap control motor, footwell/defroster flap control motor	447
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	448
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor, evaporator out-flow temperature sender	449
6. Climatronic control unit, high pressure sender, compressor regulating valve	450
7. Climatronic control unit, radiator fan control unit, radiator fan	451
8. Radiator fan control unit	452
055 - Electro-hydraulic power steering	453-454
1. Electro-hydraulic power steering	453
2. Power steering control unit	454
056 - Electronic manual gearbox 085	455-462
1. Electronic manual gearbox 085	455
2. Alternator, starter	456
3. Electronic manual gearbox control unit, consumer switch-off relay, reversing light switch	457
4. Electronic manual gearbox control unit, start/stop mode switch, brake pressure switch, selector lever potentiometer	458
5. Electronic manual gearbox control unit, selector lever electronics control unit, clutch travel sender, gearbox speed sender	459
6. Electronic manual gearbox control unit, clutch actuator hydraulic pump relay, gearbox hydraulic pressure sender, clutch actuator valve	460
7. Electronic manual gearbox control unit, gear detection potentiometers 1 and 2, gear selection valves 1,2,3 and 4	461
8. Dash panel insert, rev. counter, bulb warning relay, speedometer, alternator warning lamp, handbrake warning lamp, blocking diode	462
057 - Radio systems	463-467
1. Radio systems	463
2. Radio, dash panel insert	464
3. Radio, front loudspeakers, aerial, aerial amplifier	465
4. Radio, rear loudspeakers	466
5. Radio, CD changer or CD-player	467
058 - Preperation for telephone	468-469
1. Preperation for telephone	468
2. Radio, preperation for telephone	469
059 - Climatronic	470-477
1. Climatronic	470
2. Climatronic control unit, temperature flap control motor, dash panel temperature sensor	471
3. Climatronic control unit, central flap control motor, footwell/defroster flap control motor	472
4. Climatronic control unit, air flow flap control motor, vent temperature sender, fresh air intake duct temperature sensor	473
5. Climatronic control unit, ambient temperature sensor, fresh air blower, fresh air blower control unit, sunlight penetration photosensor	474
6. Climatronic control unit, high pressure sender, compressor regulating valve	475
7. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling	476
8. Radiator fan control unit, radiator fan thermo-switch	477
060 - Central locking with remote control	478-487
1. Central locking with remote control	478

2. Central locking and anti-theft alarm system control unit, driver side central locking lock unit, central locking warning lamp	479
3. Central locking and anti-theft alarm system control unit, front passenger side central locking lock unit	480
4. Central locking and anti-theft alarm system control unit, rear lid release switch, contact switch in lock cylinder for rear lid, rear lid central locking motor, self-diagnosis connection	481
5. Central locking and anti-theft alarm system control unit, anti-theft alarm system contact switch, alarm horn	482
6. Central locking and anti-theft alarm system control unit, interior monitoring sensor, interior monitoring sender	483
7. Central locking and anti-theft alarm system control unit, switch in driver door, front left window regulator	484
8. Central locking and anti-theft alarm system control unit, front left window regulator control unit, front right window regulator control unit, right window regulator motor	485
9. Central locking and anti-theft alarm system control unit, fuses	486
10. Fuses, front right window regulator switch, window regulator switch illumination	487
061 -	488-489
1.	488
2. Temperature flap position switch, temperature selection rotary knob potentiometer	489
062 - Base equipment	490-509
1. Base equipment	490-491
2. Battery, ignition/starter switch, X contact relief relay, starter motor relay	492
3. Voltage stabiliser, diagnosis connection, fuses	493
4. Dash panel insert, speedometer, odometer display	494
5. Dash panel insert, fuel gauge sender	495
6. Dash panel insert, blocking diode, handbrake warning switch, brake fluid level warning contact	496
7. Handbrake warning lamp control unit, handbrake warning lamp, cigarette lighter, selector lever stop detector switch, fuses	497
8. Hazard warning light switch, turn signal relay, front turn signals	498
9. Turn signal switch, headlight dip/flasher switch, parking light switch, left headlight	499
10. Front right headlight, left headlight range control motor, right headlight range control motor, fuses	500
11. Switches and instruments illumination regulator, headlight range control regulator, reversing light switch, tail lights, fuses	501
12. Right tail light, right brake light, rear right turn signal, right reversing light, brake light switch, high level brake light, number plate light	502
13. Light switch, fuses	503
14. Front interior light, driver and front passenger doors contact switch, radio, fuses	504
15. Immobilizer, horn plate, horn, airbag coil connector/return spring with slip ring, dual tone horn relay, reader coil	505
16. Heated rear window switch, heated rear window, consumer switch-off relay, rear lid release switch	506
17. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/air recirculation flap control motor	507
18. Windscreen wiper switch, rear window wiper switch, automatic intermittent wash/wipe relay, windscreen wiper motor, windscreen washer pump	508
19. Rear window wiper motor, washer jets heater element, fog light, fuse	509
063 - 1.4 l/55 kW 4LV, engine code AUA	510-519
1. 1.4 l/55 kW 4LV, engine code AUA	510
2. Battery, alternator, starter, radiator fan, radiator fan thermal switch	511
3. 4LV control unit (injection system), ignition system, engine speed sender	512
4. 4LV control unit (injection system), throttle valve control unit, pedal value sender, intake manifold pressure sender, intake manifold temperature sender, brake light switch, brake pedal switch	513
5. 4LV control unit (injection system), Hall sender 1, coolant temperature sender, injectors	514
6. 4LV control unit (injection system), lambda probe I, lambda probe II, activated charcoal filter system solenoid valve, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	515
7. 4LV control unit (injection system), knock sensor, fuel pump relay	516
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender, heater element (crankcase breather)	517
9. Dash panel insert, oil pressure warning lamp, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage warning lamp	518
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	519
064 - Base equipment	520-536
1. Base equipment	520
2. Battery, ignition/starter switch, X-contact relief relay	521
3. Dash panel insert. rev. counter. odometer display. alternator warning lamp	522

4. Dash panel insert, digital clock, main beam warning lamp, turn signal warning lamp, handbrake warning, brake fluid level warning contact	523
5. Light switch	524
6. Tail lights, brake lights, rear fog light, reversing light, rear turn signals	525
7. Headlight dip/flasher switch, left headlight, turn signal switch, parking light switch	526
8. Right headlight, front turn signals	527
9. Hazard warning light switch with turn signal relay, heated rear window	528
10. Heated rear window switch, switches and instruments illumination regulator, headlight range control adjuster, headlight range control motors, fuses	529
11. Fresh air blower, fresh air blower switch, fresh air/air recirculation flap control motor, series resistance with overheating fuse	530
12. Windscreen wiper switch, windscreen wiper motor, windscreen and rear window washer pump, automatic intermittent wash/wipe relay	531
13. Rear window wiper motor, washer jet heater elements	532
14. Interior light, door contact switch, number plate lights, fog light	533
15. Reversing light switch, airbag coil connector/return spring with slip ring, dual tone horn relay, horn plate, dual tone horn	534
16. Immobilizer, self-diagnosis connection, immobilizer reader coil	535
17. Electronic manual gearbox control unit, starter motor relay, cigarette lighter, fuses	536
065 - Central locking	537-546
1. Central locking	537
2. Central locking and anti-theft alarm system control unit, driver side central locking lock unit, central locking warning lamp	538
3. Central locking and anti-theft alarm system control unit, front passenger side central locking lock unit	539
4. Central locking and anti-theft alarm system control unit, rear lid release switch, contact switch in lock cylinder for rear lid, rear lid central locking motor, self-diagnosis connection	540
5. Central locking and anti-theft alarm system control unit, anti-theft alarm system contact switch, alarm horn	541
6. Central locking and anti-theft alarm system control unit, interior monitoring sensor, interior monitoring sender	542
7. Central locking and anti-theft alarm system control unit, switch in driver door, front left window regulator	543
8. Central locking and anti-theft alarm system control unit, front left window regulator control unit, front right window regulator control unit, right window regulator motor	544
9. Central locking and anti-theft alarm system control unit, fuses	545
10. Fuses, front right window regulator switch, window regulator switch illumination	546
066 - 1.4 l/55 kW 4AV, engine code AHW	547-555
1. 1.4 l/55 kW 4AV, engine code AHW	547
2. Battery, alternator, starter, radiator fan, thermal switch	548
3. 4AV/4CV control unit (injection system), ignition transformer, spark plugs, spark plug connector, engine speed sender	549
4. 4AV/4CV control unit (injection system), throttle valve control unit, intake manifold pressure sender, intake manifold temperature sender	550
5. 4AV/4CV control unit (injection system), Hall sender, coolant temperature sender, injectors	551
6. 4AV/4CV (injection system) control unit, lambda probe, activated charcoal filter system solenoid valve, exhaust gas recirculation frequency valve, heater element (crankcase breather)	552
7. 4AV/4CV control unit (injection system), knock sensor, fuel pump relay, fuel shut-off control unit (crash)	553
8. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	554
9. Dash panel insert, oil pressure warning lamp, coolant temperature gauge, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage	555
067 - 1.4 l/55 kW - engine code BBY	556-566
1. 1.4 l/55 kW - engine code BBY	556
2. Battery, alternator, starter, radiator fan, thermal switch	557
3. 4MV injection system control unit, engine speed sender, ignition coils 1-2 with output stage, spark plugs, spark plug connector	558
4. 4MV injection system control unit, ignition coils 3-4 with output stage, spark plugs, spark plug connector	559
5. 4MV injection system control unit, throttle valve module, pedal valve sender, intake manifold pressure sender, intake air temperature sender, brake light switch, brake pedal switch	560
6. 4MV injection system control unit, Hall sender 1, coolant temperature sender, injectors	561
7. 4MV injection system control unit, Lambda probe I, Lambda probe II, activated charcoal filter system solenoid valve, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	562
8. 4MV injection system control unit, injectors, knock sensor, fuel pump relay	563
9. Fuel pump, speedometer sender, fuel gauge sender, coolant shortage indicator sender	564

10. Dash panel insert, oil pressure warning, coolant temperature display, fuel gauge, rev. counter, alternator warning lamp, coolant temperature/coolant shortage display	565
11. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	566
068 - Radio systems, engine code ANY	567-571
1. Radio systems, engine code ANY	567
2. Radio, dash panel insert, fuses	568
3. Radio, front loudspeaker, aerial, aerial amplifier	569
4. Radio, rear loudspeaker	570
5. Radio, CD changer or CD player	571
069 - Folding fabric sunroof (only vehicles fitted with heated seats)	572-573
1. Folding fabric sunroof (only vehicles fitted with heated seats)	572
2. Folding fabric sunroof switch, folding fabric sunroof relay, fuse	573
070 - 1.7 l/44 kW Diesel engine, engine code AKU	574-583
1. 1.7 l/44 kW Diesel engine, engine code AKU	574
2. Battery, starter, alternator, radiator fan, radiator fan thermal switch, fuses	575
3. Diesel direct injection system control unit, engine speed sender, fuses	576
4. Diesel direct injection system control unit, needle lift sender, exhaust gas recirculation valve, crash fuel shut-off control unit	577
5. Metering adjuster, fuel temperature sender, modulating piston movement sender, commencement of injection valve, fuel shut-off valve	578
6. Diesel direct injection system control unit, accelerator pedal position sender, low heat output relay, high heat output relay, coolant heater elements	579
7. Clutch pedal switch, coolant temperature sender, engine temperature sender, terminal 30 voltage supply relay, throttle butterfly valve	580
8. Brake light switch, speedometer sender, engine glow plugs, engine glow plug relay, oil pressure switch	581
9. Dash panel insert, fuel gauge, coolant shortage and coolant temperature indicator/display, optical and acoustic oil pressure warning, odometer	582
10. Dash panel insert, self-diagnosis connection, data bus diagnostic interface	583
071 - Day driving lights	584-592
1. Day driving lights	584
2. Battery, X contact relief relay, ignition and starter switch, fuses	585
3. Fuses	586
4. Light switch	587
5. Hazard warning lights switch, turn signal relay, switches and instruments lighting regulator, headlight range control regulator	588
6. Control unit in dash panel insert, wiper switch, turn signal switch, headlight dip and flasher switch	589
7. Tail lights	590
8. Number plate lights, right headlight, right turn signal, right side mounted turn signal	591
9. Left headlight, left turn signal, left side mounted turn signal, fog lights	592
072 - Day driving lights	593-602
1. Day driving lights	593
2. Battery, X contact relief relay, ignition and starter switch, fuses	594
3. Fuses	595
4. Light switch	596
5. Hazard warning lights switch, turn signal relay, switches and instruments lighting regulator	597
6. Control unit in dash panel insert, wiper switch, turn signal switch, headlight dip and flasher switch	598
7. Tail lights	599
8. Right headlight, right headlight range control motor, right gas discharge headlight control unit, right side mounted turn signal	600
9. Left headlight, control unit for headlight range control, left headlight range control motor, left side mounted turn signal	601
10. Control unit for headlight range control, rear left vehicle level sender, headlight washer system relay, fog lights, number plate light	602
073 - Automatic gearbox	603-608
1. Automatic gearbox	603
2. Battery, starter, alternator, radiator fan, starter inhibitor relay	604
3. 4AV/4CV injection system control unit, automatic gearbox control unit, multifunction switch	605
4. Automatic gearbox control unit, solenoid valves, solenoid valve series resistance, vehicle speed sender	606
5. Automatic gearbox control unit, gearbox speed sender, selector lever lock solenoid, kickdown switch	607
6. Starter inhibitor switch, selector lever illumination	608
201 - -Fitting locations:Relay locations and fuse assignment	609-613

1. Relay locations and fuse assignment	609
2. Relay locations on relay plate	610
3. Fuse assignment in fuse box, on left of dash panel	611
4. -Fitting locations:Relay locations and fuse assignment	612
5. Fuse assignment in fuse box/battery	613
202 - -Fitting locations:Coupling stations for wiring harnesses	614-617
1. Coupling stations for wiring harnesses	614
2. Coupling station below the relay plate	615
3. Coupling stations on left and right A pillars, Connectors on left C pillar	616
4. Screwed connections (30) on relay plate	617
203 - -Fitting locations:Control units and relays	618-621
1. Control units and relays	618
2. Control units for ABS	619
3. Control unit for central locking	620
4. Control unit for radiator fan, 2 speed with fan run-on	621
204 - -Fitting locations:Multi-pin connectors	622-629
1. Multi-pin connectors	622
2. On engine	623
3. On engine	624
4. On the body	625
5. On the body	626
6. On the body	627
7. On the body	628
8. On the body	629
205 - -Fitting locations:Relay locations and fuse assignment (from October 1998)	630-634
1. Relay locations and fuse assignment (from October 1998)	630
2. Relay locations on relay plate	631
3. fuse assignment in fuse box, on left of dash panel	632
4. -Fitting locations:Relay locations and fuse assignment (from October 1998)	633
5. Fuse assignment in fuse box/battery	634
206 - -Fitting locations: Relay locations and fuse assignment (from May 1999) - 3	635-649
1. Relay locations and fuse assignment (from May 1999)	635-649
1.1 Relay locations and fuse assignment (from May 1999)	635-637
1.1.1 Relay locations on relay carrier (up to April 2000)	635-637
1.2 Fuse assignment on fuse holder on left of dash panel (up to April 2000)	638-641
1.3 Fuse assignment on fuse holder on left of dash panel (from May 2000 to April 2001)	642-645
1.4 Fuse assignment on battery fuse holder (AVY, ARR, AYZ, AMF engines)	646-647
1.5 Fuse locations on battery fuse holder (AUA, AUB, AUC, AUD, AKU, AKQ, BBY)	648-649
207 - -Fitting locations: Relay locations and fuse assignment (from May 2001) - 3	650-677
1. Relay locations and fuse assignment (from May 2001)	650-677
1.1 Relay locations on relay plate on left below dash panel, engine code ARR (FSI engine)	650
1.2 Fuse assignment in fuse holder on left below dash panel, engine code ARR (FSI engine)	651-654
1.3 Fuse assignment in battery fuse box, engine code ARR (FSI engine)	655-656
1.4 Relay locations on relay plate on left below dash panel, engine code AVY (GTI)	657
1.5 Fuse assignment in fuse holder on left below dash panel, engine code AVY (GTI)	658-661
1.6 Fuse assignment in battery fuse box, engine code AVY (GTI)	662-663
1.7 Relay locations on relay plate on left below dash panel, engine code AYZ (3 Litre)	664
1.8 Fuse assignment in fuse holder on left of dash panel, engine code AYZ (3 Litre)	665-668
1.9 Fuse assignment in battery fuse box, engine code AYZ (3 Litre)	669-670
1.10 Relay locations on relay plate on left below dash panel, does not apply to engine codes ARR (FSI), AVY (GTI), and AYZ (3 litre)	671
1.11 Fuse assignment in fuse holder on left below dash panel, does not apply to engine codes ARR (FSI engine), AVY (GTI) and AYZ (3 Litre)	672-675
1.12 Fuse assignment in battery fuse holder, does not apply to engine codes ARR (FSI engine), AVY (GTI) and AYZ (3 Litre)	676-677
401 - -Fault finding programme:Battery discharges (Voltage leakage suspected)	678
1. Battery discharges (Voltage leakage suspected)	678
402 - -Fault finding programme:Starter motor does not turn	679
1. Starter motor does not turn	679
403 - -Fault finding programme:Starter motor turns too slowly and does not crank engine	680
1. Starter motor turns too slowly and does not crank engine	680
404 - -Fault finding programme:Alternator warning lamp does not go out as speed increases	681
1. Alternator warning lamp does not go out as engine speed increases	681
405 - -Fault finding programme:Checking alternator and voltage regulator with multimeter V.A.G. 1715	682
1. Checking alternator and voltage regulator with multimeter V.A.G. 1715	682
406 - -Fault finding programme:Alternator warning lamp does not light up when ignition is switched	683

on	
1. Alternator warning lamp does not light up when ignition is switched on	683
407 - -Fault finding programme:Checking turn signals and hazard warning lights system	684-690
1. Test prerequisites	684
2. -Fault finding programme:Checking turn signals and hazard warning lights system	685
3. -Fault finding programme:Checking turn signals and hazard warning lights system	686
4. -Fault finding programme:Checking turn signals and hazard warning lights system	687
5. -Fault finding programme:Checking turn signals and hazard warning lights system	688
6. -Fault finding programme:Checking turn signals and hazard warning lights system	689
7. -Fault finding programme:Checking turn signals and hazard warning lights system	690
408 - -Fault finding programme:Checking windscreen wash/wipe system	691-695
1. Contents, Test prerequisites	691
2. Checking windscreen wipw system	692
3. -Fault finding programme:Checking windscreen wash/wipe system	693
4. -Fault finding programme:Checking windscreen wash/wipe system	694
5. Checking windscreen washer system	695
409 - -Fault finding programme:Checking rear window wash/wipe system	696-699
1. Contents, Prerequisites	696
2. Checking rear window wipe system	697
3. Checking rear window washer system	698
4. -Fault finding programme:Checking rear window wash/wipe system	699
410 - -Fault finding programme:Checking additional coolant heating	700-706
1. Function, Test prerequisites	700
2. -Fault finding programme:Checking additional coolant heating	701
3. -Fault finding programme:Checking additional coolant heating	702
4. -Fault finding programme:Checking additional coolant heating	703
5. -Fault finding programme:Checking additional coolant heating	704
6. -Fault finding programme:Checking additional coolant heating	705
7. -Fault finding programme:Checking additional coolant heating	706
411 - -Fault finding programme:Checking roof aerial	707-708
1. Checking roof aerial	707
2. -Fault finding programme:Checking roof aerial	708
802 - - Fitting locations: Coupling stations for wiring harnesses - 3	709-713
1. Coupling stations for wiring harnesses	709-713
1.1 Coupling station under relay carrier	710
1.2 Assignment of coupling stations on A-pillar	711
1.2.2 Lower right A-pillar coupling station	711
1.3 Assignment of connections on C-pillar	712
1.4 Screw connections on relay plate	713