



Contents

1	Engine list	1
2	Service work	6
2.1	Information on LongLife service and time or distance dependent service	6
2.2	Service tables	8
3	General	25
3.1	Lifting vehicle	25
3.2	Sticker	26
3.3	Connecting vehicle diagnosis tester	28
3.4	Severe operating conditions	29
3.5	Vehicle data sticker	29
3.6	Vehicle identification number	30
3.7	Countries with elevated sulphur content in diesel fuel	30
3.8	List of hot countries for changing ATF in the AG4 (01M gearbox)	31
3.9	Engine oil	31
3.10	Engine code and engine number	31
3.11	RME fuel (biodiesel)	31
3.12	Service intervals	32
3.13	Type plate	32
4	Descriptions of work	33
4.1	Removable towing bracket: Check and clean if necessary	35
4.2	Swivel joints: Visual check	37
4.3	Front passenger front airbag: Check activation / deactivation for vehicles without seat occupied recognition	37
4.4	Ambient temperature display: Select temperature units	38
4.5	Automatic gearbox: Changing ATF (01M gearbox)	39
4.6	Automatic gearbox: Changing ATF strainer (01M gearbox)	39
4.7	Automatic gearbox: Check gear oil in final drive (01M gearbox)	39
4.8	Automatic gearbox: Check ATF level, top-up if necessary (01M gearbox)	39
4.9	Automatic gearbox: Check ATF level, top-up if necessary (09G gearbox)	39
4.10	Automatic gearbox: Change ATF (09G gearbox)	39
4.11	Battery: Check using battery tester with printer VAS 5097A	39
4.12	Battery: Check battery terminal clamps for secure seating	39
4.13	Checking tyres: Condition, wear pattern, inflation pressures, tread depth	41
4.14	Brake system: Perform visual check for leaks and damage	46
4.15	Front and rear brake pads/linings: Checking thickness	46
4.16	Brake and clutch system: Change brake fluid	49
4.17	Brake fluid level: Check	52
4.18	Anti-theft wheel bolts: Installing	53
4.19	Digital clock: Set time and display mode	54
4.20	Direct shift gearbox - DSG -: Change oil and oil filter (02E gearbox)	55
4.21	Window regulators: Perform initialisation (activation)	55
4.22	Performing vehicle system test	55
4.23	Protective bellows: Visual check	56
4.24	Checking first aid box expiry date	57
4.25	Poly V-belt: Check condition	57
4.26	Poly V-belt: Adjust tension on engines without automatic tensioning roller	57
4.27	Fuel filter: Renew (diesel engine)	58
4.28	Fuel filter: Drain water (diesel engine)	61
4.29	Cooling system: Check frost protection and coolant level	62
4.30	Air filter: Clean housing and renew filter element	65
4.31	Engine cover panel -top-: Removing and installing	66
4.32	Engine compartment cover (noise insulation) -bottom-: Removing and installing	71
4.33	Engine oil level: Check	72



4.34	Engine oil: Drain or extract; renew oil filter and replenish engine oil	72
4.35	Engine and components in engine compartment (from above and below): Perform visual check for leaks and damage	82
4.36	Performing road test	82
4.37	Wheel securing bolts: Tighten to specified torque	83
4.38	Reading radio code with fault reader	85
4.39	Radio: Activate anti-theft coding	86
4.40	Tyre repair set: Check	87
4.41	Manual gearbox/final drive: Check oil level	88
4.42	Window wash/wipe system and headlight washer system: Check function	90
4.43	Windscreen wiper blades: Checking park position, if wiper blades »judder«: Checking setting angle	93
4.44	Wiper blade protection: Remove	95
4.45	Headlight setting: Check, if necessary adjust	98
4.46	Sunroof: Check function, clean and grease guide rails	106
4.47	Sliding sunroof drains: Check flow and clean if necessary	106
4.48	Service interval display: Reset	108
4.49	Service interval display: Recoding / adapting	113
4.50	Power assisted steering: Check oil level	120
4.51	Track rod ends: Check clearance, security and boots	122
4.52	Dust and pollen filter: Renew filter element	122
4.53	Transportation devices: Remove blocking pieces from front axle springs	123
4.54	Transportation anchorage openings: Sealing with caps	125
4.55	Door arrester: Grease	125
4.56	Underbody sealant: Visual check for damage to underbody sealant, underbody panels, routing of lines and plugs	126
4.57	Convertible top end position latch (with electric convertible top actuation): Visual check with convertible top open	126
4.58	Convertible top protective film: Removing (convertible)	127
4.59	Camshaft drive toothed belt: Check	129
4.60	Camshaft drive toothed belt: Checking for wear (SDI/TDI diesel engines)	130
4.61	Toothed belt and idler roller for camshaft drive: Renewing, SDI / TDI diesel engines	130
4.62	Camshaft drive toothed belt: Renewing (unit injector diesel engines)	131
4.63	Camshaft drive belt tensioner: Renewing (unit injector diesel engines)	131
4.64	Camshaft drive toothed belt and toothed belt tensioner: Renewing (4-cylinder 5-valve petrol engines)	131
4.65	Spark plugs: Renew	131
5	Exhaust emissions test	140
5.1	Exhaust emissions test for petrol engines without OBD	140
5.2	Exhaust emissions test for petrol engines with OBD	148
5.3	Exhaust emissions test for petrol engines, methods to activate disturbance variable for control circuit test according to basic procedure	156
5.4	Exhaust emissions test for diesel engines	158
6	Glossary	180