



## Contents

<b>27 - Starter, current supply, CCS</b>	<b>1</b>
<b>1 Battery</b>	<b>1</b>
1.1 Battery - general notes	1
1.2 Types of battery	1
1.3 Warning notices and safety regulations	3
1.4 Battery terminal connection	5
<b>2 Checking battery</b>	<b>6</b>
2.1 Testing different battery types	6
2.2 Inspection	8
2.3 Information about battery replacement and battery gas venting	9
2.4 Checking colour indicator in battery cover, magic eye	10
2.5 Battery tester with printer VAS 5097 A	12
2.6 Battery tester with printer VAS 6161	17
2.7 Midtronics battery tester MCR340V , only for USA and Canada	22
2.8 Battery test using the vehicle diagnostic tester	26
2.9 Current draw test	27
2.10 Checking no-load voltage of battery (stock and stored vehicles)	28
<b>3 Charging battery</b>	<b>30</b>
3.1 Battery charger VAS 5095 A	30
3.2 Battery charger VAS 5900	35
3.3 Battery charger VAS 5903	47
3.4 Battery charger VAS 5906	59
3.5 Midtronics battery charger INC 940 , only for USA/Canada	61
3.6 Solar charger module VAS 6102 A	66
3.7 Totally discharged batteries	67
<b>4 Cruise control system (CCS)</b>	<b>69</b>
4.1 Function of cruise control system	69
4.2 Activating and deactivating cruise control system (CCS)	69
<b>90 - Gauges, instruments</b>	<b>70</b>
<b>92 - Windscreen wash/wipe system</b>	<b>71</b>
<b>1 Washer fluid lines</b>	<b>71</b>
1.1 Windscreen and rear window washer system	71
1.2 Headlight washer system	72
1.3 Repairing washer fluid lines	72
<b>2 Distinguishing features of jointless wiper blades</b>	<b>75</b>
<b>94 - Lights, bulbs, switches - exterior</b>	<b>76</b>
<b>1 Operation and safety notes for gas discharge lamps</b>	<b>76</b>
<b>96 - Lights, bulbs, switches - interior</b>	<b>79</b>
<b>1 Cigarette lighter, socket</b>	<b>79</b>
1.1 Assembly overview - cigarette lighter, 12 V socket	79
1.2 Removing and installing cigarette lighter U1	80
1.3 Removing and installing socket illumination bulb L42	83
1.4 Removing and installing cigarette lighter illumination bulb L28	83
<b>97 - Wiring</b>	<b>85</b>
<b>1 Vehicle diagnosis, testing and information systems</b>	<b>85</b>
1.1 General description - vehicle diagnosis, testing and information system	85
1.2 Connecting vehicle diagnostic tester	85
1.3 Connecting vehicle diagnostic tester, Bora/Golf, model years 1998 to 2003	86



<b>2</b>	<b>Wiring harness and connector repairs</b> .....	<b>87</b>
2.1	General notes concerning repairs to vehicle electrical system .....	87
2.2	Wiring harness repair set .....	88
2.3	Tool descriptions .....	90
2.4	Repairs to wiring harnesses .....	93
2.5	Repairs to fibre optic cables .....	109
2.6	Repair of aerial wires .....	115
2.7	Repairs to contact housings and connectors .....	126
2.8	Releasing and dismantling contact housings .....	130
<b>3</b>	<b>Cleaning contact surfaces</b> .....	<b>136</b>
3.1	Contact surface cleaning set VAS 6410 .....	136
<b>4</b>	<b>Renewing Lambda probe</b> .....	<b>142</b>
4.1	Renewing LSF Lambda probe (4-pin) .....	142
4.2	Renewing LSU Lambda probe (6-pin) .....	142
4.3	Types of protective tube on uniform Lambda probes .....	143