



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	3
1.2 Securing engine to assembly stand	8
1.3 Installing engine	11
1.4 Assembly mountings	13
13 - Crankshaft group	14
1 Dismantling and assembling engine	14
1.1 Assembly overview - add-on parts	14
1.2 Assembly overview - chain drive	20
1.3 Removing and installing poly V-belt	24
1.4 Removing and installing exhauster pump for brake servo	25
2 Sealing flange and flywheel or drive plate	28
2.1 Assembly overview - sealing flange	28
2.2 Renewing crankshaft sealing flange - belt pulley end	29
2.3 Removing and installing valve timing housing	32
2.4 Removing and installing seal on gearbox side	35
2.5 Removing and installing drive plate	36
3 Crankshaft	38
3.1 Assembly overview - crankshaft	38
3.2 Crankshaft dimensions	39
3.3 Locking crankshaft	40
4 Pistons and conrods	43
4.1 Assembly overview - pistons and conrods	43
4.2 Separating new conrod	44
4.3 Checking pistons, piston rings and cylinder bores	45
4.4 Piston and cylinder dimensions	46
15 - Cylinder head, valve gear	47
1 Cylinder head	47
1.1 Assembly overview - cylinder head	47
1.2 Removing and installing cylinder head cover	49
1.3 Removing and installing chain guard cover	50
1.4 Renewing chain guard cover seal	54
1.5 Checking valve timing	56
1.6 Adjusting valve timing	57
1.7 Removing and installing cylinder head	61
1.8 Checking compression	67
2 Valve gear	69
2.1 Assembly overview - valve gear	69
2.2 Valve dimensions	71
2.3 Checking valve guides	71
2.4 Renewing valve stem seals	72
2.5 Removing and installing camshafts	75
17 - Lubrication	80



1	Parts of lubrication system	80
1.1	Engine oil	80
1.2	Assembly overview - parts of lubrication system	80
1.3	Assembly overview - oil filter bracket	82
1.4	Draining oil filter housing	83
1.5	Removing and installing lower part of sump	84
1.6	Removing and installing upper part of sump	85
1.7	Removing and installing oil pump, vehicles to model year 2007	88
1.8	Removing and installing oil pump, vehicles from model year 2008	92
1.9	Checking oil pressure and oil pressure switch	96
19	- Cooling	99
1	Parts of cooling system	99
1.1	Assembly overview - parts of cooling system, engine side	99
1.2	Assembly overview - parts of cooling system, body side	103
1.3	Coolant hose schematic diagram	104
1.4	Draining and filling with coolant	105
1.5	Removing and installing coolant pump	108
1.6	Removing and installing thermostat	115
1.7	Removing and installing fan shroud with radiator fans V7	117
1.8	Removing and installing radiator	118
1.9	Checking cooling system for leaks	120
1.10	Checking radiator fan	123
20	- Fuel supply system	125
1	Parts of fuel supply system - engine code BPS (plastic fuel tank)	125
1.1	Safety precautions when working on fuel supply system	125
1.2	Rules for cleanliness	126
1.3	Assembly overview - fuel tank with attachments and fuel filter	126
1.4	Emptying fuel tank	129
1.5	Removing and installing fuel delivery unit	134
1.6	Removing and installing fuel gauge sender	136
1.7	Removing and installing fuel tank	136
1.8	Assembly overview - fuel filter with attachments	139
1.9	Removing and installing fuel filter	140
1.10	Checking fuel pump	141
1.11	Bleeding fuel system	149
2	Parts of fuel supply system - engine code BPR (metal fuel tank)	153
2.1	Safety precautions when working on fuel supply system	153
2.2	Rules for cleanliness	154
2.3	Assembly overview - fuel tank with attachments and fuel filter	154
2.4	Emptying fuel tank	157
2.5	Removing and installing fuel delivery unit	160
2.6	Removing and installing fuel gauge sender	163
2.7	Removing and installing fuel tank	163
2.8	Removing and installing fuel filter	166
2.9	Checking fuel pump	167
2.10	Bleeding fuel system	175
3	Electronic power control (EPC)	179
3.1	Function of EPC system	179
3.2	Assembly overview - accelerator module	179
4	Activated charcoal filter system	181
4.1	Function	181
4.2	Overview of activated charcoal filter system	182
4.3	Assembly overview - parts of activated charcoal filter system	185



4.4	Removing and installing activated charcoal filter and fuel system diagnostic pump V144	187
4.5	Checking fuel system for leaks	188
24	Mixture preparation - injection	196
1	Injection system	196
1.1	General notes regarding injection	196
1.2	Safety precautions	197
1.3	Rules for cleanliness	197
1.4	Technical data	198
1.5	Overview of fitting locations	198
1.6	Assembly overview - intake manifold with attachments	201
1.7	Assembly overview - fuel rail with injectors	203
1.8	Assembly overview - air filter	204
1.9	Removing and installing throttle valve module J338	205
1.10	Removing and installing intake manifold	206
1.11	Removing and installing injectors	209
2	Checking components	212
2.1	Checking injectors for leaks and quantity injected	212
2.2	Checking fuel pressure regulator and holding pressure, engine code BPS	214
2.3	Checking fuel pressure regulator and holding pressure, engine code BPR	217
3	Engine control unit	222
3.1	Reading and erasing engine control unit fault memory	222
3.2	Removing and installing engine control unit	223
26	Exhaust system	224
1	Parts of the exhaust system	224
1.1	Assembly overview - exhaust manifold with attachments	226
1.2	Removing and installing exhaust manifold	226
1.3	Assembly overview - front exhaust pipe with catalytic converter and attachments, engine code BPS	228
1.4	Assembly overview - front exhaust pipe with catalytic converter and attachments, engine code BPR	230
1.5	Assembly overview - silencers with mountings	232
1.6	Removing and installing front exhaust pipe with catalytic converter	233
1.7	Separating and joining front and rear silencers	234
1.8	Aligning exhaust system free of stress	235
2	Secondary air system	237
2.1	Function	237
2.2	Assembly overview - secondary air system	237
2.3	Removing and installing secondary air pump motor V101	239
2.4	Checking secondary air inlet valve N112	240
28	Ignition system	242
1	Ignition system	242
1.1	General notes on ignition system	242
1.2	Safety precautions	242
1.3	Assembly overview - ignition system	242
1.4	Removing and installing ignition coils with output stage	244
1.5	Test data, spark plugs	245