

001 - Basic equipment, left-hand drive	1-18
1. Basic equipment, left-hand drive	1-2
2. Fuses, battery, ignition/starter switch, X contact relief relay	3
3. Fuses, immobilizer reading coil, dash panel insert	4
4. Fuses, speedometer sender, dash panel insert	5
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	6
6. Light switch	7
7. Hazard warning light switch, column switch trim, bonnet contact switch	8
8. Fuses, front lighting, front turn signals	9
9. Headlight range control, illumination regulator, horn plate	10
10. Illumination rear, rear turn signals, rear fog light bulb, brake light switch, high level brake light bulb	11-12
11. Reversing light switch, reversing light bulb, right, number plate light, connection for radio	13
12. Fuses, cigarette lighter, socket	14
13. Fuses, exterior mirror turn signal bulb, heated rear window	15
14. Fuses, fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	16
15. Fuses, windscreen wiper	17
16. Fuses, diagnostic connector, glove box light, socket	18
002 - Basic equipment, right-hand	19-35
1. Basic equipment, right-hand	19-20
2. Fuses, battery, ignition/starter switch, X contact relief relay	21
3. Fuses, immobilizer reading coil, dash panel insert	22
4. Fuses, speedometer sender, dash panel insert	23
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	24
6. Light switch	25
7. Hazard warning light switch, steering column switch trim, bonnet contact switch, headlight dipper/flasher relay	26
8. Fuses, front lighting, front turn signals	27
9. Headlight range control, illumination regulator, horn plate	28
10. Illumination rear, rear turn signals, rear fog light bulb, brake light switch, high level brake light bulb	29
11. Reversing light switch, reversing light bulb, right, number plate light, connection for radio	30
12. Fuses, cigarette lighter, socket, cigarette lighter relay	31
13. Fuses, exterior mirror turn signal bulb, heated rear window	32
14. Fuses, fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	33
15. Fuses, windscreen wiper	34
16. Fuses, diagnostic connector, glove box light, socket	35
003 - Convenience system, with electric window regulator, left-hand drive	36-54
1. Convenience system, with electric window regulator, left-hand drive	36
2. Fuses	37
3. Fuses	38
4. Rear lid remote release switch, tank filler flap remote release switch, tank filler flap locking motor	39
5. Window regulator switch	40
6. Mirror adjustment motor (driver side), folding mirror motor, exterior mirror turn signal bulb, heated exterior mirror	41
7. Mirror adjustment and interior locking switch (driver side)	42
8. Driver side central locking lock unit, central locking warning lamp, left door warning lamp	43
9. Window regulator switch	44
10. Exterior mirror turn signal bulb, mirror adjustment motor (front passenger side), folding mirror motor, heated exterior mirror	45
11. interior locking switch, central locking deadlock function warning lamp, front passenger side central locking lock unit	46
12. Front interior light, illuminated vanity mirror	47
13. Interior monitor send and receive module, ambient temperature sensor, digital clock	48
14. Interior monitor deactivation switch, interior monitor send and receive module	49
15. Rear left door control unit, rear right door control unit	50
16. Luggage compartment light, rear lid contact switch, rear lid release motor	51
17. Control unit with display in dash panel insert	52
18. Bonnet contact switch	53
19. Alarm horn, central locking and anti-theft alarm system aerial	54
004 - Convenience system with window lifter, right-hand drive	55-73
1. Convenience system with window lifter, right-hand drive	55
2. Fuses	56

3. Fuses	57
4. Boot lid/tailgate remote control switch, tank filler flap remote release switch, tank filler flap release motor	58
5. Rear left window lifter switch	59
6. Exterior mirror turn signal bulb, driver's side, mirror adjustment motor, exterior mirror turn signal bulb, Heated exterior mirror	60
7. Mirror adjustment switch and interior locking (driver s side)	61
8. Central locking lock unit (driver's side), central locking warning lamp - door warning lamp left	62
9. Rear left window lifter switch	63
10. Exterior mirror turn signal bulb, mirror adjustment motor, front passenger s side, folding mirror motor, heated exterior mirror	64
11. Interior locking switch, central locking warning lamp -SAFE-, central locking lock unit, front passenger s side	65
12. Front interior light, illumination for vanity mirrors	66
13. Interior monitor sender/receiver module, ambient temperature sensor, digital clock	67
14. Interior monitor switch, interior monitor sender/receiver module	68
15. Door control unit, rear left, door control unit, rear right	69
16. Luggage compartment light, tailgate/boot lid contact switch, tailgate/boot lid release motor	70
17. Control unit with display in dash panel insert	71
18. Bonnet contact switch	72
19. Alarm horn, central locking and anti-theft alarm system aerial	73
005 - Switches and instruments - lighting control	74-76
1. Switches and instruments - lighting control	74-75
2. Headlight range control, illumination regulator	76
006 - Trailer	77-80
1. Trailer	77
2. Reversing light left, tail light left, brake lights, rear fog light	78
3. Trailer socket, rear fog light switch-off	79
4. Brake and tail light bulb, right, turn signal bulb, rear right, trailer operation warning lamp, dash panel insert	80
007 - Seat heating	81-83
1. Seat heating	81
2. Heated driver seat regulator, Driver seat temperature sensor, X-contact relief relay, Heated driver seat control unit, Heated seat cushion for driver seat, Heated backrest for driver seat	82
3. Heated front passenger seat regulator, Front passenger seat temperature sensor, Heated front passenger seat control unit, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	83
008 - 2.0 I- Motronic/85 kW, engine codes AZJ	84-99
1. 2.0 I- Motronic/85 kW, engine codes AZJ	84-85
2. Alternator, starter, fuses	86-87
3. Motronic control unit, ignition transformer, fuses	88
4. Motronic control unit, Motronic current supply relay, coolant temperature sender, heater element (crankcase breather), intake manifold change-over valve	89
5. Motronic control unit, throttle valve control unit, accelerator pedal position senders, intake manifold change-over valve 2	90
6. Motronic control unit, engine speed sender, knock sensor I, knock sensor II	91
7. Motronic control unit, cruise control system switch, Hall sender	92
8. Motronic control unit, clutch pedal switch, brake light switch	93
9. Motronic control unit, injectors, secondary air pump motor	94
10. Motronic control unit, lambda probe, lambda probes after catalyst	95
11. Motronic control unit, air mass meter, fuel shut- off control unit, activated charcoal filter system solenoid valve 1	96
12. Fuses, fuel pump, coolant shortage indicator sender	97
13. Control unit with display in dash panel insert, oil pressure switch, speedometer sender, oil level/oil temperature sender	98
14. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer, diagnostic connector	99
009 - 1.6 I/75 kW Simos, engine code BFS	100-115
1. 1.6 I/75 kW Simos, engine code BFS	100
2. Alternator, starter, fuses	101-102
3. Current supply relay for Simos control unit, fuses	103
4. Simos control unit, throttle valve module, ignition system	104
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	105
6. Simos control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve. variable intake manifold change-over valve	106

7. Simos control unit, secondary air pump motor, vacuum pump for brakes	107
8. Simos control unit, injectors	108
9. Simos control unit, throttle valve drive angle sender, lambda probe	109
10. Simos control unit, cruise control system switch (GND)	110
11. Simos control unit, brake light switch, clutch pedal switch	111
12. Simos control unit, lambda probe after catalytic converter, air mass meter, activated charcoal filter system solenoid valve, fuel shut-off valve control unit	112
13. Fuel pump, fuel gauge sender, heater element for crankcase breather, coolant shortage indicator sender	113
14. Oil pressure switch, speedometer sender, oil level and oil temperature sender, control unit with display in dash panel insert	114
15. Coolant temperature gauge, fuel gauge, speedometer sender, alternator warning lamp, diagnostic connector, control unit with display in dash panel insert	115
010 - Starter inhibitor relay (clutch pedal switch)	116-118
1. Starter inhibitor relay (clutch pedal switch)	116-117
2. Starter inhibitor relay, clutch pedal switch	118
011 - 1.4 l /55 kW Motronic, engine codes BCA	119-132
1. 1.4 l /55 kW Motronic, engine codes BCA	119-120
2. Alternator, starter, fuses	121
3. Motronic control unit, fuses, ignition coils with output stages	122
4. Motronic control unit, hall sender, ignition coils with output stages, coolant temperature sender, intake manifold temperature sender, intake manifold pressure sender	123
5. Motronic control unit, Hall sender, exhaust gas recirculation valve, fuses	124
6. Motronic control unit, knock sensor, engine speed sender, injectors	125
7. Motronic control unit, throttle valve control unit	126
8. Motronic control unit, accelerator pedal position sender, lambda probe	127
9. Motronic control unit, cruise control system switch (CCS), clutch pedal switch	128
10. Motronic control unit, brake light switch, lambda probe after catalyst, fuel shut-off control unit (crash), activated charcoal filter system solenoid valve	129
11. Fuel pump, fuel gauge sender, coolant shortage indicator sender, heater element (crankcase breather)	130
12. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	131
13. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp, diagnostic connector	132
012 - Daytime driving lights without headlight range control	133-140
1. Daytime driving lights without headlight range control	133-134
2. Dash panel insert, turn signal switch, headlight dipper/flasher switch, parking light switch	135
3. Front left bulb, headlight dipper/flasher switch, exterior mirror turn signal bulb	136
4. Bulb front right, fog light relay, fog light bulb left and right, exterior mirror turn signal bulb	137
5. Lighting switch, rear fog light switch, switches and instruments, lighting control	138
6. Brake light left, rear fog light, reversing light right, reversing light left, tail light left, turn signal rear left	139
7. Brake lights, tail light right, glove box light, number plate light, rear right turn signal,	140
013 - Automatic anti-dazzle interior mirror, rain sensor	141-145
1. Automatic anti-dazzle interior mirror, rain sensor	141-142
2. Fuses, front interior light, automatic anti-dazzle interior mirror, reversing light switch	143
3. Automatic intermittent wash/wipe relay, intermittent wiper control, rain sensor	144
4. Automatic intermittent wash/wipe relay, intermittent wiper switch, windscreen and rear window washer pump, windscreen wiper motor	145
014 - Daytime driving lights with headlight range control	146-153
1. Daytime driving lights with headlight range control	146
2. Dash panel insert, turn signal switch, headlight dipper/flasher switch, parking light switch	147
3. Front left bulb, headlight dipper/flasher switch, exterior mirror turn signal bulb	148
4. Bulb front right, fog light bulb, left and right, exterior mirror turn signal bulb	149
5. Lighting switch, rear fog light switch, switches and instruments, lighting control	150
6. Brake light left, rear fog light, reversing light right, reversing light left, tail light left, turn signal rear left	151
7. Brake lights, tail light right, glove box light, number plate light, rear right turn signal,	152
8. Headlight range control, illumination regulator	153
015 - Telephone	154-156
1. Telephone	154
2. Telephone microphone, mobile telephone, earth connection	155
3. Aerial for radio, telephone, fuses	156
016 - Radio systems	157-161

1. Radio systems	157
2. Radio, CD changer	158
3. Radio, front loudspeakers	159
4. Radio, rear loudspeakers	160
5. Radio, aerial, fuses	161
017 - Headlights with gas discharge lamps	162-169
1. Headlights with gas discharge lamps	162-163
2. Vehicle level sender	164
3. Headlights with left gas discharge lamp	165
4. Headlights with right gas discharge lamp	166
5. Light switch, fuses, control unit with display in dash panel insert	167
6. Light switch, fuses, control unit with display in dash panel insert, headlight dipper/flasher relay	168
7. Fog lights	169
018 - Air conditioner (radiator fan, 2-speed)	170-174
1. Air conditioner (radiator fan, 2-speed)	170
2. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	171
3. Radiator fan control unit, air conditioner switch, high pressure sender, engine control units	172
4. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling, continued coolant circulation pump	173
5. Radiator fan control unit, radiator fan thermo-switch	174
019 - Headlights without headlight range control	175-180
1. Headlights without headlight range control	175-176
2. Light switch, fog light relay	177
3. Fuses, hazard warning light switch, steering column switch, headlight dipper/flasher switch	178
4. Fuses, front lighting, front turn signals, exterior mirror turn signal bulb	179
5. Fuses, front lighting, front turn signals, exterior mirror turn signal bulb	180
020 - Radiator fan, 2-speed	181-182
1. Radiator fan, 2-speed	181
2. Radiator fan, 2 speed	182
021 - Parking aid	183-185
1. Parking aid	183
2. Parking aid control unit, reversing light switch	184
3. Parking aid control unit, rear parking aid sender	185
022 - Heated washer jets	186-187
1. Heated washer jets	186
2. Heated washer jets	187
023 - 2.0 I- Motronic/85 kW, engine codes AZJ	188-203
1. 2.0 I- Motronic/85 kW, engine codes AZJ	188-189
2. Alternator, starter, fuses	190-191
3. Motronic control unit, ignition transformer, fuses	192
4. Motronic control unit, Motronic current supply relay, coolant temperature sender, heater element (crankcase breather), intake manifold change-over valve	193
5. Motronic control unit, throttle valve control unit, accelerator pedal position senders, intake manifold change-over valve 2	194
6. Motronic control unit, engine speed sender, knock sensor I, knock sensor II	195
7. Motronic control unit, cruise control system switch, Hall sender	196
8. Motronic control unit, clutch pedal switch, brake light switch	197
9. Motronic control unit, injectors, secondary air pump motor	198
10. Motronic control unit, lambda probe, lambda probes after catalyst	199
11. Motronic control unit, air mass meter, fuel shut- off control unit, activated charcoal filter system solenoid valve 1	200
12. Fuses, fuel pump, coolant shortage indicator sender	201
13. Control unit with display in dash panel insert, oil pressure switch, speedometer sender, oil level/oil temperature sender	202
14. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer, diagnostic connector	203
024 - 1.6 I/75 kW Simos, engine codes BFS	204-219
1. 1.6 I/75 kW Simos, engine codes BFS	204
2. Alternator, starter, fuses	205-206
3. Current supply relay for Simos control unit, fuses	207
4. Simos control unit, throttle valve control unit, ignition system	208
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	209
6. Simos control unit. Hall sender. exhaust gas recirculation potentiometer. exhaust gas	210

recirculation valve, intake manifold change-over valve	
7. Simos control unit, secondary air pump motor, vacuum pump for brakes	211
8. Simos control unit, injectors	212
9. Simos control unit, angle sender for throttle valve drive, lambda probe	213
10. Simos control unit, cruise control system switch (CCS)	214
11. Simos control unit, clutch pedal switch, brake light switch	215
12. Simos control unit, lambda probe after catalytic converter, air mass meter, activated charcoal filter system solenoid valve, fuel shut-off control unit	216
13. Fuel pump, fuel gauge sender, heater element (crankcase breather), coolant shortage indicator sender	217
14. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	218
15. Coolant temperature gauge, fuel gauge, speedometer, alternator warning lamp, diagnostic connector, control unit with display in dash panel insert	219
025 - 6-speed automatic gearbox (AG6)	220-227
1. 6-speed automatic gearbox (AG6)	220-221
2. Starter inhibitor	222
3. Automatic gearbox control unit, multi-function switch	223
4. Automatic gearbox control unit, gearbox speed sender, gearbox oil temperature sender, hydraulic pressure sender	224
5. Automatic gearbox control unit, solenoid valves	225
6. Automatic gearbox control unit, Tiptronic switch, selector lever lock solenoid	226
7. Light switch, Tiptronic switch, fuses	227
026 - Convertible top operation	228-233
1. Convertible top operation	228
2. Convertible top operation fuse, hydraulic pump	229
3. Convertible top operating switch, convertible top stowed switch, convertible top front switch	230
4. Button to open convertible top right lock, tonneau cover switch	231
5. Convertible top right lock motor, diagnostic connector, central switch for window regulators	232
6. Linkage flap sender, linkage flap motor	233
027 - Airbag system	234-238
1. Airbag system	234
2. Airbag control unit, airbag coil connector, airbag igniter front, side airbag crash sensors	235
3. Airbag control unit, side airbag igniter, front airbag crash sensor, roll-over bar solenoid	236
4. Airbag warning lamp, airbag disabling key switch, belt tensioner igniter	237
5. Airbag control unit, self-diagnosis connection, belt switch	238
028 - Anti-lock brake system (ABS) MK60	239-247
1. Anti-lock brake system (ABS) MK60	239-240
2. Fuses, TCS/ESP button	241
3. Steering angle sender, ABS valves	242
4. Speed sensor, ABS valves	243
5. Lateral acceleration sender, yaw rate sender, brake pressure sender -1-, ABS valves	244
6. Control unit with display in dash panel insert, handbrake warning switch, brake fluid level warning contact	245-246
7. Control unit with display in dash panel insert, brake lining/pad wear sender, data bus diagnostic interface	247
029 - CAN bus network	248-253
1. CAN bus network	248
2.	249
3.	250
4.	251
5.	252
6.	253
030 - 6-speed automatic gearbox with Tiptronic, 09G	254-261
1. 6-speed automatic gearbox with Tiptronic, 09G	254
2. X-contact relief relay, starter inhibitor and reversing light relay	255
3. Fuses	256
4. Multifunction switch, automatic gearbox control unit	257
5. Automatic gearbox control unit, solenoid valves	258
6. Gearbox oil temperature sender, gearbox input speed sender, automatic gearbox hydraulic pressure sender 1, automatic gearbox hydraulic pressure sender 2, gearbox output speed sender, automatic gearbox control unit	259
7. Tiptronic switch, automatic gearbox control unit, selector lever lock solenoid	260
8. Blocking diode, automatic gearbox control unit	261
031 - 1.9 l/74 kW Turbo diesel engine with unit injectors, engine codes AXR	262-275
1. 1.9 l/74 kW Turbo diesel engine with unit injectors. engine codes AXR	262-263

2. Alternator, starter, fuse box/battery	264
3. Diesel direct injection system control unit, fuses, glow plugs (engine), voltage supply relay	265
4. Diesel direct injection system control unit, kick-down switch, idling switch, accelerator pedal position sender, engine speed sender	266
5. Diesel direct injection system control unit, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, heater element (crankcase breather)	267
6. Diesel direct injection system control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, intake manifold change-over valve	268
7. Diesel direct injection system control unit, Hall sender, unit injector solenoid valves	269
8. Diesel direct injection system control unit, air mass meter, exhaust gas recirculation valve, charge pressure control solenoid valve, intake manifold flap motor	270
9. Diesel direct injection system control unit, clutch pedal switch, cruise control system switch, fuel temperature sender	271
10. Diesel direct injection system control unit, brake light switch, coolant heating elements	272
11. Fuses, fuel pump, coolant shortage indicator sender	273
12. Oil pressure switch, speedometer sender, oil level/oil temperature sender, fuse, control unit with display in dash panel insert	274
13. Fuel gauge, coolant temperature gauge, speedometer, control unit with display in dash panel insert	275
032 - Radiator fan, 2-speed	276-278
1. Radiator fan, 2-speed	276-277
2. Radiator fan, 2 speed	278
033 - Basic equipment, left-hand drive	279-296
1. Basic equipment, left-hand drive	279-280
2. Fuses, battery, ignition/starter switch, X contact relief relay	281
3. Fuses, immobilizer reading coil, dash panel insert	282
4. Fuses, speedometer sender, dash panel insert	283
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	284
6. Light switch	285
7. Hazard warning light switch, column switch trim, bonnet contact switch	286
8. Fuses, front lighting, front turn signals	287
9. Headlight range control, illumination regulator, horn plate	288
10. Illumination rear, rear turn signals, rear fog light bulb, brake light switch, high level brake light bulb	289-290
11. Reversing light switch, reversing light bulb, right, number plate light, connection for radio	291
12. Fuses, cigarette lighter, socket	292
13. Fuses, exterior mirror turn signal bulb, heated rear window	293
14. Fuses, fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	294
15. Fuses, windscreen wiper	295
16. Fuses, diagnostic connector, glove box light, socket	296
034 - Basic equipment, right-hand	297-313
1. Basic equipment, right-hand	297-298
2. Fuses, battery, ignition/starter switch, X contact relief relay	299
3. Fuses, immobilizer reading coil, dash panel insert	300
4. Fuses, speedometer sender, dash panel insert	301
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	302
6. Light switch	303
7. Hazard warning light switch, steering column switch trim, bonnet contact switch, headlight dipper/flasher relay	304
8. Fuses, front lighting, front turn signals	305
9. Headlight range control, illumination regulator, horn plate	306
10. Illumination rear, rear turn signals, rear fog light bulb, brake light switch, high level brake light bulb	307
11. Reversing light switch, reversing light bulb, right, number plate light, connection for radio	308
12. Fuses, cigarette lighter, socket, cigarette lighter relay	309
13. Fuses, exterior mirror turn signal bulb, heated rear window	310
14. Fuses, fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	311
15. Fuses, windscreen wiper	312
16. Fuses, diagnostic connector, glove box light, socket	313
035 - Airbag systems	314-318
1. Airbag systems	314
2. Airbag coil connector and return ring with slip ring, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Horn plate, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	315

3. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Driver side roll-over bar solenoid	316
4. Ignition/starter switch, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Front passenger side roll-over bar solenoid	317
5. Driver side belt switch, Key operated switch to deactivate front passenger side airbag, Airbag control unit, Control unit in dash panel insert, Convenience system central control unit, Data bus diagnostic interface, Dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp	318
036 - 1.8 l/110 kW Motronic, engine codes AWU	319-334
1. 1.8 l/110 kW Motronic, engine codes AWU	319
2. Alternator, starter, fuses	320
3. Motronic control unit, ignition coils with output stages	321
4. Motronic control unit, fuses, Motronic current supply relay, charge air pressure sender, Hall sender,	322
5. Motronic control unit, throttle valve control unit, intake air temperature sender, coolant temperature sender	323
6. Motronic control unit, engine speed sender, knock sensor I, knock sensor II	324
7. Motronic control unit, fuses, air mass meter, injectors	325
8. Motronic control unit, lambda probe, lambda probe after catalyst, activated charcoal filter system solenoid valve 1, secondary air inlet valve	326
9. Motronic control unit, accelerator pedal position sender, continued coolant circulation pump	327
10. Motronic control unit, fuel shut-off control unit, charge pressure control solenoid valve, inlet camshaft timing adjustment valve -1-, turbocharger divert air valve, diagnostic pump	328
11. Motronic control unit, fuses, cruise control system switch	329
12. Motronic control unit, clutch pedal switch, brake light switch	330
13. Motronic control unit, secondary air pump motor, secondary air pump relay	331
14. Fuel pump, coolant shortage indicator sender, fuses	332
15. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	333
16. Fuel gauge, coolant temperature gauge, speedometer, control unit with display in dash panel insert	334
037 - Cigarette lighter, 12V socket	335-337
1. Cigarette lighter, 12V socket	335
2. Cigarette lighter, 12V socket	336-337
038 - Electrically operated convertible roof	338-342
1. Electrically operated convertible roof	338
2. Convertible roof actuation control unit	339
3. Convertible roof actuation button, convertible roof stowed switch, convertible roof front switch, convertible roof actuation control unit	340
4. Button to open/close left lock for convertible roof, button to open/close right lock for convertible roof, tonneau cover switch, convertible roof actuation control unit, convertible roof left lock motor, convertible roof right lock motor	341
5. Convertible roof actuation control unit, convertible roof actuation hydraulic pump relay, hydraulic pump relay 2 for convertible roof, convertible roof actuation hydraulic pump	342
039 - Manual convertible roof actuation	343-346
1. Manual convertible roof actuation	343
2. Convertible roof front switch, button to close left lock for convertible roof, convertible roof actuation control unit	344
3. Button to close right lock for convertible roof, convertible roof actuation control unit	345
4. Convertible roof actuation control unit, luggage compartment light	346
040 - Radio "Monsoon" (with CD changer)	347-352
1. Radio "Monsoon" (with CD changer)	347
2. Radio, CD changer, antenna	348
3. Radio, fuses	349
4. Amplifier	350
5. Amplifier, front loudspeakers	351
6. Amplifier, loudspeaker, front, loudspeaker, rear	352
041 - Basic equipment	353-370
1. Basic equipment	353
2. Battery, Ignition/starter switch	354
3. Alternator, Immobiliser reader coil, Lights switched on warning buzzer, Control unit in dash panel insert	355
4. Rev. counter, Speedometer sender, Control unit in dash panel insert	356
5. Handbrake warning switch, Brake fluid level warning contact, Control unit in dash panel insert, Data bus diagnostic interface. Main beam warning lamp	357

6. Light switch, Front and rear fog light switch, Light switch illumination bulb	358
7. Turn signal switch, Hazard warning light switch, Headlight dipper and flasher switch	359
8. Left headlight twin filament bulb, Left fog light bulb, Left side light bulb, Front left turn signal bulb, Front right turn signal bulb	360
9. Dual tone horn relay, Right fog light bulb, Right side light bulb	361
10. Horn plate, Rear left turn signal bulb	362
11. Reversing light switch, Rear left fog light bulb, Rear right turn signal bulb, Right reversing light bulb, High-level brake light bulb	363
12. Radio, Number plate light	364
13. Convenience system central control unit, Ashtray illumination bulb, Cigarette lighter illumination bulb, Electric socket, Cigarette lighter	365
14. Heated rear window switch illumination bulb, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	366
15. Fresh air and air recirculation flap switch, Fresh air blower	367
16. Blocking diode, Cigarette lighter illumination bulb, Cigarette lighter, Rear cigarette lighter, 12 V socket 2	368
17. Intermittent wiper switch, Intermittent wiper regulator	369
18. Glove compartment light switch	370
042 - 1.4 l/55 kW Motronic, engine code BCA	371-383
1. 1.4 l/55 kW Motronic, engine code BCA	371
2. Starter, alternator, fuses	372
3. Motronic control unit, ignition coils with output stage, fuses	373
4. Coolant temperature display sender, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, Motronic control unit, in centre plenum chamber, ignition coils with output stage, spark plug connector, spark plugs	374
5. Hall sender, exhaust gas recirculation potentiometer, Motronic control unit, exhaust gas recirculation valve	375
6. Engine speed sender, knock sensor 1, Motronic control unit, injectors	376
7. Throttle valve drive for electric throttle, Motronic control unit	377
8. Lambda probe, accelerator position sender, accelerator position sender 2, Motronic control unit, lambda probe heater	378
9. Cruise control system switch, cruise control system (CCS) SET button, clutch pedal switch, Motronic control unit	379
10. Brake light switch, brake pedal switch, lambda probe after catalytic converter, Motronic control unit, fuel shut-off control unit for crash, activated charcoal filter solenoid valve 1, lambda probe 1 heater after catalytic converter	380
11. Fuel gauge sender, fuel system pressurisation pump, coolant shortage indicator sender, heater element for crankcase breather	381
12. Oil pressure switch, speedometer sender, oil level and oil temperature sender, control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil level warning lamp	382
13. Fuel gauge, coolant temperature gauge, rev. counter, speedometer, buzzer and gong, control unit in dash panel insert, data bus diagnostic interface, alternator warning lamp, reserve fuel warning lamp	383
043 - 1.6 l/75 kW Simos, engine code BFS	384-398
1. 1.6 l/75 kW Simos, engine code BFS	384
2. Starter, alternator, voltage regulator, fuses	385
3. Current supply relay for Simos control unit, fuses	386
4. Throttle valve potentiometer, Simos control unit, ignition transformer, spark plug connector, spark plugs	387
5. Power assisted steering pressure switch, coolant temperature display sender, engine speed sender, knock sensor 1, coolant temperature sender, Simos control unit	388
6. Hall sender, exhaust gas recirculation potentiometer, Simos control unit, exhaust gas recirculation valve, variable intake manifold change-over valve	389
7. Secondary air pump relay, Simos control unit, secondary air pump motor, vacuum pump for brakes	390
8. Simos control unit, injectors	391
9. Lambda probe, throttle valve drive angle sender 1 for electric throttle, throttle valve drive angle sender 2 for electric throttle, Simos control unit, lambda probe heater	392
10. Cruise control system switch, cruise control system (CCS) SET button, Simos control unit	393
11. Brake light switch, clutch pedal switch, brake pedal switch, Simos control unit	394
12. Air mass meter, lambda probe after catalytic converter, Simos control unit, fuel shut-off control unit for crash, activated charcoal filter solenoid valve 1, lambda probe 1 heater after catalytic converter	395
13. Fuel gauge sender, fuel system pressurisation pump, heater element for crankcase breather, coolant shortage indicator sender	396
14. Oil pressure switch, speedometer sender, oil level and oil temperature sender, control unit in	397

	dash panel insert	
	15. Fuel gauge, coolant temperature gauge, rev. counter, speedometer, control unit in dash panel insert, data bus diagnostic interface, alternator warning lamp, reserve fuel warning lamp	398
044	- 1.8 l/110 kW Motronic, engine code AWU	399-414
	1. 1.8 l/110 kW Motronic, engine code AWU	399
	2. Starter, alternator, fuses	400
	3. Motronic control unit, ignition coils with output stage	401
	4. Charge air pressure sender, Hall sender 2, Motronic control unit, Motronic current supply relay	402
	5. Coolant temperature display sender, intake air temperature sender, coolant temperature sender, throttle valve drive for electric throttle, Motronic control unit	403
	6. Engine speed sender, knock sensor 1, knock sensor 2, Motronic control unit	404
	7. Air mass meter, Motronic control unit, injectors	405
	8. Lambda probe, lambda probe after catalytic converter, Motronic control unit, activated charcoal filter system solenoid valve 1, secondary air inlet valve, lambda probe heater, lambda probe 1 heater after catalytic converter	406
	9. Accelerator position sender, accelerator position sender 2, Motronic control unit, continued coolant circulation pump	407
	10. Motronic control unit, fuel shut-off control unit for crash, charge pressure control solenoid valve, inlet camshaft control valve 1-, turbocharger air recirculation valve	408
	11. Cruise control system switch, cruise control system (CCS) SET button, Motronic control unit	409
	12. Brake light switch, cruise control system brake pedal switch, cruise control system brake pedal switch, Motronic control unit	410
	13. Motronic control unit, secondary air pump relay, vacuum pump relay, secondary air pump motor, vacuum pump for brakes	411
	14. Fuel gauge sender, fuel system pressurisation pump, coolant shortage indicator sender, fuses	412
	15. Oil pressure switch, speedometer sender, oil level and oil temperature sender, control unit in dash panel insert	413
	16. Fuel gauge, coolant temperature gauge, speedometer, control unit in dash panel insert, data bus diagnostic interface	414
045	- 1.9 l/77 kW - Turbo diesel engine with unit injectors, engine code BSW	415-426
	1. 1.9 l/77 kW - Turbo diesel engine with unit injectors, engine code BSW	415
	2. Starter, alternator, fuses	416
	3. Kickdown switch, idling speed switch, accelerator position sender, glow plug relay, diesel direct injection system control unit, engine glow plug	417
	4. Coolant temperature display sender, engine speed sender, hall sender, coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, diesel direct injection system control unit	418
	5. Fuel temperature sender, diesel direct injection system control unit, unit injector valve	419
	6. Diesel direct injection system control unit, terminal 30 voltage supply relay, exhaust gas recirculation valve, charge pressure control solenoid valve, variable intake manifold flap change-over valve	420
	7. Cruise control system switch, cruise control system (CCS) SET button, diesel direct injection system control unit	421
	8. Brake light switch, clutch pedal switch, diesel direct injection system control unit	422
	9. Fuel pump relay, diesel direct injection system control unit, low heat output relay, high heat output relay, heater element for crankcase breather, coolant heating element	423
	10. Fuel gauge sender, fuel system pressurisation pump, coolant shortage indicator sender, fuses	424
	11. Oil pressure switch, speedometer sender, control unit in dash panel insert	425
	12. Fuel gauge, coolant temperature gauge, speedometer, oil level and oil temperature sender, control unit in dash panel insert, data bus diagnostic interface	426
046	- 2.0 l/85 kW Motronic, engine code AZJ	427-440
	1. 2.0 l/85 kW Motronic, engine code AZJ	427
	2. Starter, alternator, fuses	428
	3. Motronic control unit, ignition transformer, spark plug connector, spark plugs, fuses	429
	4. Coolant temperature sender, coolant temperature sender, Motronic control unit, Motronic current supply relay, heater element for crankcase breather, variable intake manifold change-over valve	430
	5. Accelerator position sender, accelerator position sender 2, Motronic control unit, throttle valve module, variable intake manifold change-over valve 2	431
	6. Engine speed sender, knock sensor 1, knock sensor 2, Motronic control unit	432
	7. Cruise control system switch, cruise control system (CCS) SET button, Hall sender, Motronic control unit	433
	8. Brake light switch, clutch pedal switch, brake pedal switch, Motronic control unit	434
	9. Motronic control unit, secondary air pump relay, injectors, secondary air pump motor	435
	10. Lambda probe, lambda probe after catalytic converter, Motronic control unit, lambda probe heater, lambda probe 1 heater after catalytic converter	436
	11. Air mass meter. Motronic control unit. fuel shut-off control unit for crash. activated charcoal	437

filter solenoid valve 1	
12. Fuel gauge sender, fuel system pressurisation pump, coolant shortage indicator sender, fuses	438
13. Oil pressure switch, speedometer sender, oil level and oil temperature sender, control unit in dash panel insert	439
14. Fuel gauge, coolant temperature gauge, rev. counter, speedometer, control unit in dash panel insert, data bus diagnostic interface	440
047 - Air conditioning system (radiator fan, 2nd speed (8Z5/8Z7))	441-445
1. Air conditioning system (radiator fan, 2nd speed (8Z5/8Z7))	441
2. Fresh air blower switch, fresh air and air recirculation flap switch, fresh air blower series resistor with overheating fuse, fresh air blower, fresh air and air recirculation flap control motor	442
3. Selector lever for retarder brake, high-pressure sender, radiator fan control unit, engine control units	443
4. Radiator fan control unit, air conditioning system magnetic coupling, radiator fan, continued coolant circulation pump	444
5. Radiator fan thermal switch, thermal switch for air conditioning system shut-off, radiator fan control unit	445
048 - Radiator fan, 2nd speed	446-447
1. Radiator fan, 2nd speed	446
2. Radiator fan thermal switch, radiator fan	447
049 - Radiator fan, 2nd speed	448-450
1. Radiator fan, 2nd speed	448-449
2. Thermal switch for radiator fan, radiator fan run-on control unit, radiator fan	450
050 - Radiator fan, 2nd speed	451-453
1. Radiator fan, 2nd speed	451
2. Radiator fan control unit, radiator fan, right fan for radiator	452
3. Radiator fan thermal switch, radiator fan control unit	453
051 - Basic equipment, right-hand drive	454-471
1. Basic equipment, right-hand drive	454
2. Battery, fuses, ignition/starter switch, X-contact relief relay	455
3. Immobilizer reader coil, fuses, dash panel insert	456
4. Speedometer sender, fuses, dash panel insert	457
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	458
6. Light switch	459
7. Turn signal switch, hazard warning light switch, headlight dipper/flasher switch, bonnet contact switch, headlight dipper and flash relay	460
8. Fuses, front illumination bulb, front turn signal	461
9. Switches and instruments illumination regulator, headlight range control regulator, horn plate, treble tone horn, bass tone horn	462
10. Rear illumination, rear turn signal, brake light switch, brake pedal switch, rear right fog light bulb, high-level brake light bulb	463-464
11. Reversing light switch, left reversing light bulb, radio, number plate light	465
12. Fuses, socket, cigarette lighter	466
13. Heated rear window switch illumination bulb, driver side exterior mirror turn signal bulb, front passenger side exterior mirror turn signal bulb, heated rear window	467
14. Fresh air blower switch, fresh air and air recirculation flap switch, fresh air blower series resistor with overheating fuse, fuses, fresh air and air recirculation flap control motor	468
15. Blocking diode, 12 V socket 2	469
16. Intermittent wipe regulator, automatic intermittent wash and wipe relay, fuse, wiper motor	470
17. Fuses, diagnostic connector, trailer socket, glove compartment light	471
052 - Convenience system, with electric window regulator, right-hand drive	472-490
1. Convenience system, with electric window regulator, right-hand drive	472
2. Fuses	473
3. Fuses	474
4. Rear lid remote release switch, tank filler flap remote release switch, driver door control unit, fuel tank flap release relay, tank filler flap locking motor	475
5. Window regulator switch, door control unit, driver side	476
6. Driver side fold-in mirror contact switch, driver door control unit, driver side mirror adjustment motor, driver side fold-in mirror motor, driver side mirror adjustment motor, heated exterior mirror on driver side	477
7. Mirror adjustment switch, mirror adjustment change-over switch, driver side interior locking switch, exterior mirror heater button, fold-in mirror switch, driver door control unit	478
8. Driver side central locking lock unit, driver door control unit, central locking deadlock function warning lamp -SAFE-, driver side window regulator motor	479
9. Window regulator switch in front passenger door, front passenger door control unit, window regulator switch illumination bulb	480
10. Front passenger side fold-in mirror contact switch, front passenger door control unit, front	481

passenger side mirror adjustment motor, front passenger side fold-in mirror motor, front passenger side mirror adjustment motor, front passenger side heated exterior mirror	
11. Front passenger side central locking lock unit, front passenger door control unit, central locking deadlock function warning lamp -SAFE-, front passenger side window regulator motor	482
12. Driver vanity mirror contact switch, front passenger vanity mirror contact switch, front interior light, front passenger side illuminated vanity mirror, driver side illuminated vanity mirror, digital clock	483
13. Ambient temperature sensor, interior monitor send and receive module 3, interior monitor send and receive module 4, digital clock	484
14. Interior monitor deactivation switch, interior monitor send and receive module 1, 2	485
15. Rear left door control unit, rear right door control unit, rear left window regulator motor, rear right window regulator motor	486
16. Luggage compartment light switch, convenience system central control unit, rear lid release motor, luggage compartment light	487
17. Control unit in dash panel insert, convenience system central control unit	488
18. Bonnet contact switch, convenience system central control unit	489
19. Anti-theft alarm system horn, alarm horn, convenience system central control unit, central locking and anti-theft alarm system aerial	490
053 - Convenience system, with electric window regulator, left-hand drive	491-509
1. Convenience system, with electric window regulator, left-hand drive	491
2. Fuses	492
3. Fuses	493
4. Rear lid remote release switch, tank filler flap remote release switch, driver door control unit, fuel tank flap release relay, remote release switch illumination bulb, tank filler flap locking motor	494
5. Window regulator switch, driver door control unit	495
6. Driver side fold-in mirror contact switch, driver door control unit, driver side exterior mirror turn signal bulb, driver side mirror adjustment motor, driver side fold-in mirror motor, driver side mirror adjustment motor, heated exterior mirror on driver side	496
7. Mirror adjustment switch, mirror adjustment change-over switch, driver side interior locking switch, exterior mirror heater button, fold-in mirror switch, driver door control unit	497
8. Driver side central locking lock unit, driver door control unit, central locking deadlock function warning lamp -SAFE-, driver side window regulator motor	498
9. Window regulator switch, front passenger door control unit, window regulator switch illumination bulb	499
10. Front passenger side fold-in mirror contact switch, front passenger door control unit, front passenger side exterior mirror turn signal bulb, front passenger side mirror adjustment motor, front passenger side fold-in mirror motor, front passenger side mirror adjustment motor, front passenger side heated exterior mirror	500
11. Front passenger side central locking lock unit, front passenger door control unit, central locking deadlock function warning lamp -SAFE-, front passenger side window regulator motor	501
12. Driver vanity mirror contact switch, front passenger vanity mirror contact switch, front passenger side illuminated vanity mirror, driver side illuminated vanity mirror, digital clock	502
13. Ambient temperature sensor, interior monitor send and receive module 3, interior monitor send and receive module 4, digital clock	503
14. Interior monitor deactivation switch, interior monitor send and receive module 1, 2	504
15. Rear left door control unit, rear right door control unit, rear left window regulator motor, rear right window regulator motor	505
16. Luggage compartment light switch, convenience system central control unit, rear lid release motor, luggage compartment light	506
17. Control unit in dash panel insert, convenience system central control unit	507
18. Bonnet contact switch, convenience system central control unit	508
19. Anti-theft alarm system horn, convenience system central control unit, central locking and anti-theft alarm system aerial	509
054 - Air conditioning system (radiator fan, 2nd speed)	510-514
1. Air conditioning system (radiator fan, 2nd speed)	510
2. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air and air recirculation flap control motor	511
3. Air conditioning system switch, high pressure sender, radiator fan control unit	512
4. Radiator fan control unit, air conditioning system magnetic coupling, radiator fan, radiator fan on right of radiator	513
5. Radiator fan control unit, radiator fan, thermal switch for radiator fan	514
055 - Air conditioning system (radiator fan, 2nd speed)	515-519
1. Air conditioning system (radiator fan, 2nd speed)	515
2. Fresh air blower switch, fresh air and air recirculation flap switch, fresh air blower, fresh air and air recirculation flap control motor	516

3. Air conditioning system switch, high pressure sender, radiator fan control unit	517
4. Radiator fan control unit, in front left engine compartment, air conditioning system magnetic clutch, radiator fan, right fan for radiator	518
5. Radiator fan thermal switch, thermal switch for air conditioning system shut-off, radiator fan control unit	519
056 - Air conditioning system (radiator fan, 2nd speed)	520-524
1. Air conditioning system (radiator fan, 2nd speed)	520
2. Fresh air blower switch, fresh air and air recirculation flap switch, fresh air blower, fresh air and air recirculation flap control motor	521
3. Radiator fan control unit, air conditioning system switch, high pressure sender, air conditioning system warning lamp	522
4. Radiator fan control unit, air conditioning system magnetic coupling	523
5. Radiator fan thermal switch, thermal switch for air conditioning system shut-off, radiator fan control unit	524
057 - Radio-system with AUX-in	525-528
1. Radio-system with AUX-in	525
2. Radio, rear right bass loudspeaker	526
3. Radio, rear left bass loudspeaker, front left treble loudspeaker, front left bass loudspeaker, front right treble loudspeaker, front right bass loudspeaker	527
4. Radio, aerial, aerial amplifier, connection for external audio source	528
058 - Convenience system, with electric window regulator, right-hand drive	529-548
1. Convenience system, with electric window regulator, right-hand drive	529-530
2. Fuses	531
3. Fuses	532
4. Rear lid remote release switch, tank filler flap remote release switch, driver door control unit, fuel tank flap release relay, tank filler flap locking motor	533
5. Window regulator switch, driver door control unit	534
6. Driver side fold-in mirror contact switch, driver door control unit, driver side mirror adjustment motor, driver side fold-in mirror motor, driver side mirror adjustment motor, heated exterior mirror on driver side	535
7. Mirror adjustment switch, mirror adjustment change-over switch, driver side interior locking switch, exterior mirror heater button, fold-in mirror switch, driver door control unit	536
8. Driver side central locking lock unit, driver door control unit, central locking deadlock function warning lamp -SAFE-, driver side window regulator motor	537
9. Window regulator switch in front passenger door, front passenger door control unit, window regulator switch illumination bulb	538
10. Front passenger side fold-in mirror contact switch, front passenger door control unit, front passenger side mirror adjustment motor, front passenger side fold-in mirror motor, front passenger side mirror adjustment motor, front passenger side heated exterior mirror	539
11. Front passenger side central locking lock unit, front passenger door control unit, central locking deadlock function warning lamp -SAFE-, front passenger side window regulator motor	540
12. Driver vanity mirror contact switch, front passenger vanity mirror contact switch, front interior light, front passenger side illuminated vanity mirror, driver side illuminated vanity mirror, digital clock	541
13. Ambient temperature sensor, interior monitor send and receive module 3, interior monitor send and receive module 4, digital clock	542
14. Interior monitor deactivation switch, interior monitor send and receive module 1, 2	543
15. Rear left window regulator control unit, rear right window regulator control unit, rear left window regulator motor, rear right window regulator motor	544
16. Luggage compartment light switch, convenience system central control unit, rear lid release motor, luggage compartment light	545
17. Control unit in dash panel insert, convenience system central control unit	546
18. Bonnet contact switch, convenience system central control unit	547
19. Anti-theft alarm system horn, alarm horn, convenience system central control unit, central locking and anti-theft alarm system aerial	548
059 - Convenience system, with electric window regulator, left-hand drive	549-568
1. Convenience system, with electric window regulator, left-hand drive	549-550
2. Fuses	551
3. Fuses	552
4. Rear lid remote release switch, tank filler flap remote release switch, driver door control unit, fuel tank flap release relay, tank filler flap locking motor	553
5. Window regulator switch, driver door control unit	554
6. Driver side fold-in mirror contact switch, driver door control unit, driver side exterior mirror turn signal bulb, driver side mirror adjustment motor, driver side fold-in mirror motor, driver side mirror adjustment motor, heated exterior mirror on driver side	555
7. Mirror adjustment switch, mirror adjustment change-over switch, driver side interior locking	556

switch, exterior mirror heater button, fold-in mirror switch, driver door control unit	
8. Driver side central locking lock unit, driver door control unit, central locking deadlock function warning lamp -SAFE-, driver side window regulator motor	557
9. Window regulator switch in front passenger door, front passenger door control unit	558
10. Front passenger side fold-in mirror contact switch, front passenger door control unit, front passenger side exterior mirror turn signal bulb, front passenger side mirror adjustment motor, front passenger side fold-in mirror motor, front passenger side mirror adjustment motor, front passenger side heated exterior mirror	559
11. Front passenger side central locking lock unit, front passenger door control unit, front passenger side window regulator motor	560
12. Driver vanity mirror contact switch, front passenger vanity mirror contact switch, front passenger side illuminated vanity mirror, driver side illuminated vanity mirror, digital clock	561
13. Ambient temperature sensor, interior monitor send and receive module 3, interior monitor send and receive module 4, digital clock	562
14. Interior monitor deactivation switch, interior monitor send and receive module 1, 2	563
15. Rear left window regulator control unit, rear right window regulator control unit, rear left window regulator motor, rear right window regulator motor	564
16. Luggage compartment light switch, convenience system central control unit, rear lid release motor, luggage compartment light	565
17. Control unit in dash panel insert, convenience system central control unit	566
18. Bonnet contact switch, convenience system central control unit	567
19. Anti-theft alarm system horn, convenience system central control unit, central locking and anti-theft alarm system aerial	568
060 - Radio Gamma with CD drive	569-573
1. Radio Gamma with CD drive	569
2. Radio, CD changer	570
3. Radio, front loudspeakers	571
4. Radio, rear loudspeaker	572
5. Radio, aerial, fuses	573
061 - Connection for iPod	574-575
1. Connection for iPod	574
2. Radio, iPod holder	575
062 - 2.0l petrol engine , BER,BEV	576-588
1. 2.0l petrol engine , BER,BEV	576
2. Starter, Alternator, Voltage regulator, X-contact relief relay, Fuel shut-off control unit for crash	577
3. Ignition/starter switch, Fuel shut-off control unit for crash	578
4. Motronic control unit, Ignition transformer, Spark plug connector, Spark plugs	579
5. Accelerator position sender, Accelerator position sender 2, Motronic control unit, Heater element for crankcase breather	580
6. Coolant temperature display sender, Hall sender, Knock sensor 1, Coolant temperature sender, Knock sensor 2, Motronic control unit	581
7. Engine speed sender, Motronic control unit	582
8. Lambda probe, Motronic control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	583
9. Brake light switch, Clutch pedal switch, Brake pedal switch, Motronic control unit, Main relay, Activated charcoal filter solenoid valve 1	584
10. Cruise control system switch, Cruise control system (CCS) SET button, Motronic control unit, Throttle valve module	585
11. Charge pressure sender, Motronic control unit, Throttle valve module	586
12. Oil pressure switch, Fuel gauge sender, Coolant temperature gauge, Fuel system pressurisation pump, Speedometer sender, Coolant shortage indicator sender, Control unit in dash panel insert, Dash panel insert	587
13. Fuel gauge, Coolant temperature gauge, Speedometer, Data bus diagnostic interface, Dash panel insert	588
063 - Air conditioning system (radiator fan, 2nd speed (8Z5/8Z7))	589-594
1. Air conditioning system (radiator fan, 2nd speed (8Z5/8Z7))	589-590
2. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/recirculated air flap control motor, fresh air blower series resistor with overheating fuse	591
3. Radiator fan control unit, air conditioning system switch, high pressure sender, engine control unit	592
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, continued coolant circulation pump	593
5. Radiator fan control unit, radiator fan, thermal switch for radiator fan, thermal switch for air conditioning system shut-off	594
064 - Anti-lock brake system -MK60- (ABS)	595-601

1. Anti-lock brake system -MK60- (ABS)	595
2. TCS and ESP button, fuses	596
3. Steering angle sender, valves for ABS	597
4. Speed sensor, valves for ABS	598
5. Lateral acceleration sender, yaw rate sender, ESP sensor unit	599
6. Handbrake warning switch, brake fluid level warning contact, control unit in dash panel insert	600
7. Front left brake pad wear sender, control unit in dash panel insert, data bus diagnostic interface	601
065 - Radio systems	602-605
1. Radio systems	602
2. Radio, left loudspeaker	603
3. Radio, right loudspeaker	604
4. Radio, aerial, aerial amplifier	605
066 - Radio systems	606-609
1. Radio systems	606
2. Radio, CD changer	607
3. Radio, loudspeaker	608
4. Radio, aerial, aerial amplifier	609
067 - Radio systems	610-614
1. Radio systems	610
2. Radio, CD changer	611
3. Radio, left loudspeaker	612
4. Radio, right loudspeaker	613
5. Radio, aerial, aerial amplifier	614
069 - Telephone preparation for mobile telephone	615-617
1. Telephone preparation for mobile telephone	615
2. Mobile telephone operating electronics control unit, telephone microphone, mobile telephone	616
3. Mobile telephone operating electronics control unit, radio, radio and telephone aerial	617
070 - Garage door operation - Homelink	618-619
1. Garage door operation - Homelink	618
2. Driver vanity mirror contact switch, garage door operation control unit	619
071 - Starter inhibitor relay (clutch pedal switch)	620-621
1. Starter inhibitor relay (clutch pedal switch)	620
2. Clutch pedal switch for engine start, starter inhibitor relay (clutch pedal switch)	621
072 - Anti-lock brake system -MK60- (ABS)	622-628
1. Anti-lock brake system -MK60- (ABS)	622
2. Fuses	623
3. Steering angle sender, valves for ABS	624
4. Speed sensor, valves for ABS	625
5. TCS and ESP button, brake pressure sender 1, ESP sensor unit, ABS control unit, ABS hydraulic pump	626
6. Handbrake warning switch, brake fluid level warning contact, control unit in dash panel insert	627
7. Front left brake pad wear sender, control unit in dash panel insert, data bus diagnostic interface	628
073 - Airbag systems	629-633
1. Airbag systems	629
2. Airbag coil connector and return ring with slip ring, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Horn plate, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	630
3. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, ABS control unit, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Driver side roll-over bar solenoid, Front passenger side roll-over bar solenoid	631
4. Ignition/starter switch, Airbag control unit, Convenience system central control unit, Front passenger side airbag deactivated warning lamp, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	632
5. Driver side belt switch, Key operated switch to deactivate front passenger side airbag, Airbag control unit, Control unit in dash panel insert, Data bus diagnostic interface	633
074 - Parking aid	634-636
1. Parking aid	634
2. Parking aid control unit, reversing light switch	635
3. Parking aid control unit, rear parking aid sender	636
075 - Radiator fan, 2nd speed	637-638
1. Radiator fan, 2nd speed	637
2. Radiator fan thermal switch, radiator fan run-on control unit, radiator fan	638
076 - Basic equipment, right-hand drive	639-656

1. Basic equipment, right-hand drive	639
2. Battery, ignition/starter switch, X-contact relief relay, fuses	640
3. Immobilizer reader coil, fuses, dash panel insert	641
4. Speedometer sender, fuses, dash panel insert	642
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	643
6. Light switch	644
7. Turn signal switch, hazard warning light switch, headlight dipper/flasher switch, bonnet contact switch, headlight dipper and flash relay	645
8. Fuses, front illumination bulb, front turn signal	646
9. Switches and instruments illumination regulator, headlight range control regulator, horn plate, treble tone horn, bass tone horn	647
10. Rear illumination, rear turn signal, brake light switch, brake pedal switch, rear right fog light bulb, high-level brake light bulb	648-649
11. Reversing light switch, left reversing light bulb, radio, number plate light	650
12. Fuses	651
13. Heated rear window switch illumination bulb, driver side exterior mirror turn signal bulb, front passenger side exterior mirror turn signal bulb, heated rear window	652
14. Fresh air blower switch, fresh air and air recirculation flap switch, fresh air blower series resistor with overheating fuse, fuses, fresh air and air recirculation flap control motor	653
15. Blocking diode, 12 V socket 2	654
16. Intermittent wipe regulator, automatic intermittent wash and wipe relay, fuse, wiper motor, washer pump	655
17. Fuses, diagnostic connector, trailer socket, glove compartment light	656
077 - Cigarette lighter, 12 V socket	657-658
1. Cigarette lighter, 12 V socket	657
2. Blocking diode, cigarette lighter, 12 V socket 2	658
078 - Basic equipment, left-hand drive	659-678
1. Basic equipment, left-hand drive	659
2. Battery, ignition/starter switch, X-contact relief relay, fuses	660
3. Immobilizer reader coil, control unit in dash panel insert, fuses	661
4. Rev. counter, speedometer sender, control unit in dash panel insert, odometer display	662
5. Handbrake warning switch, brake fluid level warning contact, control unit in dash panel insert, data bus diagnostic interface	663
6. Light switch, front and rear fog light switch	664
7. Turn signal switch, hazard warning light switch, headlight dipper/flasher switch, parking light switch, bonnet contact switch	665
8. Front illumination bulb, front turn signal, fuses	666
9. Front illumination bulb, fuses	667
10. Switch and instrument illumination regulator, headlight range control regulator, horn plate, treble tone horn, bass tone horn, dual tone horn relay, left headlight range control motor, right headlight range control motor	668
11. Brake light switch, brake pedal switch, rear illumination, rear turn signal, rear left fog light bulb, high-level brake light bulb	669-670
12. Reversing light switch, right reversing light bulb, radio, number plate light	671
13. Fuses	672
14. Heated rear window switch, exterior mirror turn signal bulb, luggage compartment light, heated rear window	673
15. Fresh air blower switch, fresh air and air recirculation flap switch, fresh air blower series resistor with overheating fuse, fresh air blower, fresh air and air recirculation flap control motor	674
16. Blocking diode, cigarette lighter, electric socket	675
17. Intermittent wiper switch, intermittent wipe regulator, automatic intermittent wash and wipe relay, windscreen wiper motor, washer pump	676
18. Glove compartment light switch, fuses, diagnostic connector, glove compartment light	677
19. Earth connections	678
201 - -Fitting locations: Position of relays and fuses, from August 2002 - 3	679-702
1. Position of relays and fuses, from August 2002	679-702
1.1 Position of relays and fuses, from August 2002	679
1.1.1 Overview of fuses and relay locations	679
1.2 Position of relays and fuses, from August 2002	680
1.2.1 Overview of fuses and relay locations	680
1.3 Position of fuses on fuse holder/battery	681-682
1.4 Position of relays, in protective housing on left in engine compartment	683
1.5 J321 - Convertible roof actuation hydraulic pump relay	684
1.6 J588 - Hydraulic pump relay 2 for convertible roof	684
1.7 Position of relays and fuses on relay plate	685
1.8 Position of relays and fuses on relay plate	686

1.9 Relay positions on 13 position additional relay carrier, left-hand drive	687
1.10 Relay positions on 13 position additional relay carrier, left-hand drive	688
1.11 Position of fuses on 13 position additional relay carrier, left-hand drive	689
1.12 Relay positions on 13 position additional relay carrier, left-hand drive	690
1.13 Relay positions on 13 position additional relay carrier, right-hand drive	691
1.14 Relay positions on 13 position additional relay carrier, right-hand drive	692
1.15 Relay positions on 13 position additional relay carrier, right-hand drive	693
1.16 Position of fuses on 13 position additional relay carrier, right-hand drive	694
1.17 Position of fuses on fuse holder, left dash panel	695-702
1.17.1 Fuse colours	695-702
202 - -Fitting locations: Position of relays and fuses, from July 2005 - 3	703-723
1. Position of relays and fuses, from July 2005	703-723
1.1 Position of relays and fuses, from July 2005	703
1.1.1 Overview of fuses and relay locations	703
1.2 Relay positions on 13 position additional relay carrier, left-hand drive	704
1.3 Position of relays and fuses, from July 2005	705-706
1.3.1 Overview of fuses and relay locations	705-706
1.4 Position of fuses on fuse holder/battery	707-708
1.5 J321 - Convertible roof actuation hydraulic pump relay	709
1.6 J588 - Hydraulic pump relay 2 for convertible roof	709
1.7 Position of relays and fuses on relay plate	710
1.8 Position of relays and fuses on relay plate	711
1.9 Relay positions on 13 position additional relay carrier, left-hand drive	712
1.10 Relay positions on 13 position additional relay carrier, left-hand drive	713
1.11 Position of fuses on 13 position additional relay carrier, left-hand drive	714
1.12 Position of fuses on fuse holder, left dash panel	715-718
1.12.1 Fuse colours	715-718
1.13 Relay positions on 13 position additional relay carrier, right-hand drive	719
1.14 Relay positions on 13 position additional relay carrier, right-hand drive	720
1.15 Relay positions on 13 position additional relay carrier, right-hand drive	721
1.16 Position of fuses on 13 position additional relay carrier, right-hand drive	722-723
203 - -Fitting locations: Position of relays and fuses, from July 2005 - 3	724-743
1. Position of relays and fuses	724-743
1.1 Fuse holder/battery	724
1.2 Micro-central electrics	725
1.3 Micro-central electrics	726
1.4 13 position additional relay carrier	727
1.4.1 Relay positions:	727
1.5 13 position additional relay carrier	728
1.5.1 Relay positions:	728
1.6 13 position additional relay carrier	729-730
1.6.1 Relay positions:	729
1.6.2 Fuse locations:	730
1.7 13 position additional relay carrier	731
1.7.1 Relay positions:	731
1.8 13 position additional relay carrier	732-733
1.8.1 Relay positions:	732
1.8.2 Fuse locations:	733
1.9 Position of fuses in fuse holder	734-743
1.9.1 Fuse holder	734
1.9.2 Fuse locations:	734
1.9.4 Fuse locations:	735
1.9.6 Fuse locations:	736
1.9.8 Fuse locations:	737
1.9.10 Fuse locations:	738
1.9.12 Fuse locations:	739
1.9.14 Fuse locations:	740
1.9.16 Fuse locations:	741
1.9.18 Fuse locations:	742
1.9.20 Fuse locations:	743
801 - -Fitting Locations: Fuses - 3	744-763
1. Fuses	744-763
1.1 Overview of fuses	744
1.2 Fuses (S) on fuse holder/battery	745
1.2.1 Torque settings	745
1.3 Position of fuses on fuse holder/battery	746

1.4 Fuses on the 13 position additional relay carrier above the relay plate, from August 2002	747-749
1.5 Fuses (S) in fuse holder, left dash panel	750
1.5.1 Torque settings	750
1.6 Position of fuses on fuse holder, left dash panel, from August 2002	751-757
1.7 Position of fuses on fuse holder, left dash panel, from July 2005	758-763
802 - -Fitting Locations: Relay - 3	764-773
1. Relay	764-773
1.1 Overview of relay carrier	764
1.2 Relay positions of relay carrier, in protective housing on left in engine compartment (from model year 2002 up to model year 2005)	765
1.3 Relay positions on the 13 position additional relay carrier above the relay plate, left-hand drive	766-768
1.4 Relay positions on the 13 position additional relay carrier above the relay plate, right-hand drive	769-771
1.5 Relay positions - relay on relay plate	772
1.6 Convertible roof actuation hydraulic pump relay	773