

603 - 6-speed automatic gearbox 09G , AWW,BDC,BEV,BGD,BKF	1-7
1. 6-speed automatic gearbox 09G , AWW,BDC,BEV,BGD,BKF	1
2. Starter, Ignition/starter switch, X-contact relief relay, Starter inhibitor relay	2
3. Multifunction switch, Steering angle sender, ABS control unit, Automatic gearbox control unit, Radiator fan control unit, Right reversing light bulb	3
4. Gearbox oil temperature sender, Gearbox input speed sender, Automatic gearbox control unit, Motronic control unit, Control unit in dash panel insert, Data bus diagnostic interface	4
5. Automatic gearbox hydraulic pressure sender 1, Automatic gearbox hydraulic pressure sender 2, Gearbox output speed sender, Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 2, Solenoid valve 3, Solenoid valve 5, Solenoid valve 9, Solenoid valve 10	5
6. Light switch, Tiptronic switch, Blocking diode, Automatic gearbox control unit, Selector lever position P/N warning lamp, Solenoid valve 1, Solenoid valve 4, Solenoid valve 6, Selector lever lock solenoid	6
7. Vacuum pump for brakes	7
622 - 2.0l petrol engine , BEV	8-20
1. 2.0l petrol engine , BEV	8
2. Battery, Starter, Alternator, Voltage regulator, Ignition/starter switch, X-contact relief relay, Starter inhibitor relay (clutch pedal switch), Fuse 29 in fuse holder, Fuse 37 in fuse holder	9
3. X-contact relief relay, Motronic control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plugs, 10-pin connector, Vacuum pump or brakes	10
4. Selector lever for retarder brake, Coolant temperature display sender, Coolant temperature sender, X-contact relief relay, Motronic control unit, 14-pin connector, Connection 1, in air conditioning system wiring harness	11
5. Lambda probe, Lambda probe after catalytic converter, X-contact relief relay, Motronic control unit, Secondary air pump relay, Secondary air pump motor	12
6. Hall sender, Knock sensor 1, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, X-contact relief relay, Motronic control unit, Throttle valve module	13
7. Engine speed sender, Knock sensor 2, X-contact relief relay, Motronic control unit, Main relay	14
8. Air mass meter, X-contact relief relay, Motronic control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	15
9. Accelerator position sender, Accelerator position sender 2, X-contact relief relay, Motronic control unit, Activated charcoal filter solenoid valve 1, Fuel system diagnostic pump	16
10. Cruise control system switch, Cruise control system (CCS) SET button, Brake light switch, Clutch pedal switch, Brake pedal switch, X-contact relief relay, Motronic control unit	17
11. Fuel gauge sender, Fuel system pressurisation pump, X-contact relief relay, Heater element for crankcase breather	18
12. Oil pressure switch, Speedometer sender, Control unit in dash panel insert	19
13. Control unit in dash panel insert	20
629 - 2.5l petrol engine , BPS	21-38
1. 2.5l petrol engine , BPS	21
2. Starter, Alternator	22
3.	23
4.	24
5.	25
6.	26
7.	27
8. Cruise control system switch	28
9.	29
10. Hall sender, Knock sensor 1	30
11. Engine speed sender	31
12. Activated charcoal filter solenoid valve 1	32
13. Accelerator position sender 2	33
14.	34
15. Brake light switch	35
16. Coolant shortage indicator sender	36
17. Oil pressure switch, Dash panel insert	37
18. Dash panel insert	38
655 - 2.5l petrol engine , BPR	39-56
1. 2.5l petrol engine , BPR	39
2. Starter, Alternator	40
3.	41
4.	42
5.	43
6.	44

7. Cruise control system switch	45
8.	46
9.	47
10. Hall sender, Knock sensor 1	48
11.	49
12. Engine speed sender	50
13. Accelerator position sender 2	51
14.	52
15. Brake light switch, Activated charcoal filter solenoid valve 1	53
16.	54
17. Oil pressure switch, Coolant shortage indicator sender, Dash panel insert	55
18. Dash panel insert	56
660 - Powertrain CAN bus network and convenience system	57-62
1. Powertrain CAN bus network and convenience system	57
2. Handbrake warning switch, Steering angle sender, Blocking diode, ABS control unit, Motronic control unit, Control unit in dash panel insert, Data bus diagnostic interface, Diagnostic connection	58
3. Steering angle sender, Automatic gearbox control unit, Motronic control unit, Airbag control unit	59
4. Motronic control unit, Diesel direct injection system control unit, Simos control unit, Convenience system central control unit	60
5. Rear left window regulator control unit, Rear right window regulator control unit, Driver door control unit, Front passenger door control unit	61
6. Convertible roof actuation control unit, Front passenger door control unit	62
806 - -Fitting locations: Earth points - 3	63
1. Earth points	63
1.1 Overview of earth points	63