



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Running gear .....	1
1.2 Wheels, tyres .....	1
<b>40 - Front suspension</b> .....	<b>2</b>
<b>1 Electrical/electronic components and locations</b> .....	<b>2</b>
1.1 Vehicle level sender on vehicles with dynamic headlight range control ..	2
1.2 Front left vehicle level sender G78 on front axle .....	3
1.3 Rear left vehicle level sender G76 on rear axle .....	4
<b>2 Torque settings for front axle</b> .....	<b>6</b>
<b>3 Repairing front suspension</b> .....	<b>9</b>
3.1 Overview - front axle .....	9
3.2 I: Assembly overview: subframe, anti-roll bar and suspension link .....	10
3.3 Checking swivel joint .....	12
3.4 Removing and installing swivel joint .....	13
3.5 Removing and installing suspension link .....	15
3.6 Renewing bonded rubber bush for suspension link .....	17
3.7 Removing and installing subframe .....	20
3.8 Renewing bonded rubber bushes in subframe .....	23
3.9 Repairing threads in longitudinal member .....	24
3.10 II: Assembly overview: wheel bearing .....	25
3.11 Removing and installing front wheel bearing with wheel bearing housing installed .....	31
3.12 III: Assembly overview: coil spring strut .....	35
3.13 Removing and installing suspension strut .....	36
3.14 Repairing front suspension strut .....	38
<b>4 Repairing drive shafts</b> .....	<b>41</b>
4.1 Overview - drive shafts .....	41
4.2 Removing and installing constant velocity joint shaft and triple roller joint shaft AAR 2000 and AAR 2900 .....	42
4.3 Removing and installing triple roller joint drive shaft AAR 3300i .....	45
4.4 I - Repairing front drive shaft with constant velocity joint .....	49
4.5 Removing, checking and installing outer constant velocity joint .....	55
4.6 Removing, checking and installing inner constant velocity joint .....	56
4.7 II - Repairing front drive shaft with triple roller joint AAR 2000 .....	58
4.8 Dismantling and assembling triple roller joint .....	61
4.9 IV - Repairing front drive shaft with triple roller joint AAR 2900 .....	63
4.10 Dismantling and assembling triple roller joint AAR 2900 .....	67
4.11 IV - Repairing drive shaft with triple roller joint AAR 3300i .....	71
4.12 Dismantling and assembling triple roller joint AAR 3300i .....	75
<b>42 - Rear suspension</b> .....	<b>77</b>
<b>1 Rear axle in unladen position</b> .....	<b>77</b>
<b>2 Torque settings for rear axle</b> .....	<b>79</b>
<b>3 Repairing rear axle</b> .....	<b>80</b>
3.1 Removing and installing rear axle .....	80
3.2 Assembly overview - rear axle beam .....	83
3.3 Removing and installing bonded rubber bush .....	86
3.4 Removing and installing hydraulic bonded rubber bush .....	90
3.5 Removing and installing spring/shock absorber .....	96
3.6 Assembly overview - shock absorber on vehicle with front-wheel drive .....	98
<b>4 Repairing wheel bearing</b> .....	<b>100</b>



4.1	Repairing wheel bearing, front-wheel drive vehicles	100
4.2	Removing and installing wheel bearing/wheel hub on vehicles with disc brakes	101
<b>44</b>	<b>- Wheels, tyres, vehicle geometry</b>	<b>104</b>
<b>1</b>	<b>Specified torque for wheel bolts</b>	<b>104</b>
<b>2</b>	<b>Protecting wheel centring seat against corrosion</b>	<b>105</b>
<b>3</b>	<b>Wheels, tyres</b>	<b>106</b>
3.1	Models with breakdown set	106
3.2	Removing a tyre	106
<b>4</b>	<b>Wheel alignment</b>	<b>108</b>
4.1	General	108
4.2	Test prerequisites:	109
4.3	Test preparations	109
4.4	Vehicle data sticker	110
4.5	Wheel alignment specifications	111
4.6	Adjusting camber at front axle	113
4.7	Adjusting camber on rear axle	114
4.8	Adjusting toe setting on rear axle (front-wheel drive vehicles)	114
4.9	Adjusting front axle toe	115
4.10	Checking left and right-hand wheel lock	115
<b>48</b>	<b>- Steering</b>	<b>117</b>
<b>1</b>	<b>Connecting VAS 5051 A and selecting functions</b>	<b>117</b>
<b>2</b>	<b>Torque settings for steering system</b>	<b>119</b>
2.1	Torque settings for steering column	119
2.2	Torque settings for steering rack	120
2.3	Torque settings for vane pump	120
2.4	Torque settings for pressure line/suction hose to engine	121
2.5	Torque settings for pressure line fixtures on manual and automatic gearboxes	123
<b>3</b>	<b>Steering column</b>	<b>126</b>
3.1	Removing and installing steering column	126
3.2	Checking steering column for damage	133
3.3	Removing and installing steering lock housing	134
3.4	Assembly overview - steering column cross member for New Beetle saloon	135
3.5	Assembly overview - steering column cross member for New Beetle Cabriolet	136
3.6	Steering column variations	137
3.7	Removing and installing locking cable for ignition with key removal lock	139
3.8	Checking ignition key removal lock	140
<b>4</b>	<b>Repairing power steering</b>	<b>141</b>
4.1	Removing and installing power-assisted steering rack	141
4.2	Assembly overview - power steering rack (LHD)	145
4.3	Assembly overview - power steering rack (RHD)	147
4.4	Removing and installing track rod	149
4.5	Revised track rod ball joints	150
4.6	Revised track rods	151
4.7	Checking play, tightness and bellows of track rod ball joints	151
4.8	Determining centre position of steering rack	152
4.9	Adjusting steering rack	152
<b>5</b>	<b>Bottom-mounted vane pump</b>	<b>153</b>
5.1	Assembly overview	153
5.2	Checking delivery pressure of vane pump	154
5.3	Removing and installing vane pump	156
<b>6</b>	<b>Top-mounted vane pump</b>	<b>160</b>
6.1	Assembly overview	160



6.2	Checking delivery pressure of vane pump	161
6.3	Removing and installing vane pump	164
<b>7</b>	<b>Top-mounted vane pump (vehicles with 2.5 l 5-cylinder engine)</b>	<b>168</b>
7.1	Assembly overview	168
7.2	Checking delivery pressure of vane pump	169
7.3	Removing and installing vane pump	171
<b>8</b>	<b>Vane pump, reservoir, hydraulic lines (vehicles with 1.4 l engine)</b>	<b>174</b>
8.1	Assembly overview	174
<b>9</b>	<b>Vane pump, reservoir, hydraulic lines (vehicles with 1.6 l, 1.8 l, 2.0 l or TDI engine)</b>	<b>178</b>
9.1	Assembly overview	178
<b>10</b>	<b>Vane pump, reservoir, hydraulic lines (vehicles with 2.3 l V5 engine)</b>	<b>185</b>
10.1	Assembly overview	185
<b>11</b>	<b>Vane pump, reservoir, hydraulic lines (vehicles with 2.5 l 5-cyl. engine)</b>	<b>188</b>
11.1	Assembly overview	188
<b>12</b>	<b>Securing pressure line on manual and automatic gearboxes</b>	<b>191</b>
12.1	Securing pressure line on 5-speed manual gearbox 02T	191
12.2	Securing pressure line on 5-speed manual gearbox 02J	192
12.3	Securing pressure line on 5-speed manual gearbox 0A4	194
12.4	Securing pressure line on 6-speed manual gearbox 02M	196
12.5	Securing pressure line on automatic gearbox 01M	197
12.6	Assembly overview: vane pump with hydraulic lines (vehicles with automatic gearbox 09G)	198
12.7	Assembly overview: vane pump with hydraulic lines (vehicles with dual clutch gearbox 02E)	202
<b>13</b>	<b>Bleeding steering system, checking for leaks and checking fluid level</b>	<b>206</b>
13.1	Bleeding steering system	206
13.2	Checking steering system for leaks	206
13.3	Checking power steering fluid level	207