



Contents

27 - Starter, current supply, CCS	1
1 Battery A	1
1.1 Fundamentals for batteries A	1
1.2 Types of battery	1
1.3 Warning notices and safety regulations	2
1.4 Battery terminal connection	4
2 Checking battery A	5
2.1 Visual check	5
2.2 Test of colour display of magic eye	6
2.3 Checking low maintenance battery A	8
2.4 Checking no-load voltage of battery A (stock and stored vehicles)	11
2.5 Battery test using battery tester with printer VAS 5097 A	12
2.6 Battery tester with printer VAS 6161	17
2.7 Current draw test	23
3 Charging battery A	25
3.1 Battery charger VAS 5095 A	25
3.2 Battery charger VAS 5900	31
3.3 Battery charger VAS 5903	42
3.4 Battery charger VAS 5906	52
3.5 Solar panel VAS 6102 A	55
3.6 Totally discharged batteries A	56
4 Disconnecting and connecting battery A	58
4.1 Disconnecting battery A	58
4.2 Connecting battery A	59
5 Removing and installing battery A	61
5.1 Vehicles with 4-cylinder engine (petrol/diesel)	61
5.2 Vehicles with 5-cyl. 2.5l petrol engine	63
6 Starter B	66
6.1 Removing and installing starter B , 4-cylinder engines (petrol/diesel)	66
6.2 Removing and installing starter B , 5-cylinder petrol engine	69
6.3 Specified torques: starter B	71
7 Alternator C	72
7.1 Assembly overview - 4-cyl. 1.6l/1.8l/2.0l petrol engine	72
7.2 Assembly overview - 5-cylinder petrol engine with power steering/air conditioner compressor	73
7.3 4-cylinder diesel engine with power steering - Assembly overview	74
7.4 Assembly overview - 4-cylinder diesel engine with power steering/air conditioner compressor	75
7.5 Removing and installing alternator C	76
7.6 Removing air conditioner compressor on vehicles with an air conditioning system	80
7.7 Securing battery positive wire on alternator C	81
7.8 Checking poly V-belt	82
7.9 Removing and installing voltage regulator C1	82
7.10 Checking carbon brushes	84
7.11 Removing and installing poly-V belt pulley on alternator C	84
8 Cruise control system (CCS)	88
8.1 Activating/deactivating cruise control system (CCS)	88
8.2 CCS switch E45	88
90 - Gauges, instruments	89
1 Dash panel insert	89
1.1 Renewing dash panel insert	89



1.2	Removing and installing dash panel insert	90
1.3	Installing adapter cable	90
1.4	Warning lamp symbols in dash panel insert	93
1.5	Multi-pin connector on dash panel insert up to 04.99	95
1.6	Multi-pin connector on dash panel insert from 05.99	98
2	Service interval display	101
2.1	Service table	101
2.2	Service interval display: resetting, up to 04.99	101
2.3	Service interval display, from 05.99	102
2.4	Service interval display: resetting, from 05.99	103
92	Windscreen wash/wipe system	105
1	Windscreen wiper system	105
1.1	Assembly overview - windscreen wiper system	105
1.2	Removing and installing windscreen wiper system	105
1.3	Adjusting wiper blade park position	108
1.4	Removing and installing wiper rubber	109
2	Window washer system	111
2.1	Assembly overview - windscreen washer system	111
2.2	Adjusting spray fields for window spray jets	111
2.3	Removing and installing window washer system spray jet	112
3	Headlight washer system	113
3.1	Assembly overview - headlight washer system	113
3.2	Removing and installing spray jet carrier with spray jets	113
3.3	Removing and installing headlight washer system supplementary reservoir	114
94	Lights, bulbs, switches - exterior	115
1	Headlight with halogen bulbs	115
1.1	Assembly overview up to 06.05	115
1.2	Assembly overview from 07.05	116
1.3	Adjusting headlights	116
1.4	Converting headlights from driving on the right to driving on the left and visa versa	117
1.5	Removing and installing headlight, up to 06.05	119
1.6	Removing and installing headlight, from 07.05	120
1.7	Removing and installing headlight mounting plate, from 07.05	122
1.8	Replacing bulbs up to 06.05	123
1.9	Replacing bulbs from 07.05	126
1.10	Removing and installing headlight range control motor, up to 06.05	129
1.11	Removing and installing headlight range control motor, from 07.05	130
2	Headlights with gas discharge bulbs	132
2.1	Operation and safety notes for gas discharge bulbs	132
2.2	Assembly overview	134
2.3	Renewing bulbs	136
2.4	Removing and installing headlight	139
2.5	Adjusting headlights	139
2.6	Removing and installing gas discharge bulb control unit	140
2.7	Removing and installing front left vehicle level sender G78	141
2.8	Removing and installing rear left vehicle level sender G76 :	142
2.9	Removing and installing headlight range control unit J431	142
2.10	Removing and installing headlight range control motor	143
3	Fog lights	144
3.1	Removing and installing fog light, up to 11.99	144
3.2	Removing and installing fog light, from 12.99	144
3.3	Removing and installing fog light, from 07.05	145
3.4	Adjusting fog light height adjustment	146



3.5	Renewing fog light bulb	147
4	Front turn signals	149
4.1	Removing and installing front turn signals, up to 06.05	149
4.2	Removing and installing front turn signals, from 07.05	149
4.3	Renewing turn signal bulb	151
4.4	Removing and installing front turn signals (Sport Edition)	152
4.5	Renewing turn signal bulb (Sport Edition)	153
5	Side turn signals	154
5.1	Removing and installing turn signal repeater	154
5.2	Removing and installing turn signal lights (Sport Edition)	155
5.3	Renewing turn signal bulb (Sport Edition)	155
6	Turning signal lights in exterior mirror	157
6.1	Removing and installing turn signal repeater bulb	157
7	Tail lights	159
7.1	Assembly overview up to 06.05	159
7.2	Assembly overview from 07.05	160
7.3	Removing and installing tail light, up to 06.05	160
7.4	Removing and installing tail light, from 07.05	161
7.5	Renewing tail light bulbs, up to 06.05	164
7.6	Renewing tail light bulbs, from 07.05	164
8	Reversing light	167
8.1	Removing and installing reversing light, up to 06.05	167
8.2	Removing and installing reversing light, from 07.05	167
8.3	Renewing reversing light bulb, up to 06.05	168
8.4	Renewing reversing light bulb, from 07.05	169
9	Rear fog light	170
9.1	Removing and installing rear fog light, up to 06.05	170
9.2	Removing and installing rear fog light, from 07.05	170
9.3	Renewing rear fog light bulb, up to 06.05	170
9.4	Renewing rear fog light bulb, from 07.05	171
10	Number plate lights	172
10.1	Removing and installing number plate light, up to 06.05	172
10.2	Removing and installing number plate light, from 07.05	172
10.3	Renewing number plate light bulb, from 07.05	173
11	Additional brake lights	174
11.1	Removing and installing high-level brake light, limousine	174
11.2	Removing and installing high-level brake light, Cabriolet, from 07.05	174
12	Steering column switch	176
12.1	Removing and installing steering column switch	176
12.2	Pin assignment on steering column switch	177
13	Ignition/starter switch D and lock cylinder	179
13.1	Removing and installing lock cylinder	179
13.2	Removing and installing ignition/starter switch D	180
13.3	Pin assignment for ignition/starter switch D	181
14	Parking aid	182
14.1	General description	182
14.2	Assembly overview - 4-channel parking aid	182
14.3	Removing and installing parking aid control unit J446 saloon	183
14.4	Removing and installing parking aid control unit J446 Cabriolet	184
14.5	Coding parking aid control unit J446	184
14.6	Adapting parking aid control unit J446	185
14.7	Removing and installing rear parking aid senders	185
14.8	Renewing rear parking aid senders	187
14.9	Bonding sender bracket in bumper cover	188



14.10	Testing parking aid senders	189
14.11	Removing and installing rear parking aid warning buzzer H15 - saloon	190
14.12	Removing and installing rear parking aid warning buzzer H15 convertible	190
14.13	Checking rear parking aid warning buzzer H15	191
96	- Lights, bulbs, switches - interior	192
1	Interior lights and switches	192
1.1	Removing and installing light switch E1	192
1.2	Removing and installing headlight range control/illumination regulators	193
1.3	Removing and installing window regulator switch, up to 05.08	193
1.4	Removing and installing window regulator switch, up to 05.08	194
1.5	Removing and installing mirror adjuster switch/change-over switches	194
1.6	Removing and installing front passenger side interior locking switch E198	195
1.7	Removing and installing tank filler flap/rear lid remote release switches	196
1.8	Removing and installing adjustable rear spoiler switch E127	196
1.9	Removing and installing hazard warning light switch E3 / front passenger front airbag deactivated warning lamp K145 , from 06.03	198
1.10	Removing and installing switches in centre of dash panel	198
1.11	Removing and installing door contact switch	199
1.12	Removing and installing luggage compartment light switch F5	200
1.13	Removing and installing bonnet contact switch F266	200
1.14	Removing and installing front interior light W1	200
1.15	Removing and installing glove compartment light W6	201
1.16	Removing and installing illuminated vanity mirrors	201
1.17	Removing and installing rear reading lights	202
1.18	Removing and installing luggage compartment light W3	203
1.19	Removing and installing door warning lamps	203
1.20	Removing and installing convertible roof switch Cabriolet	204
2	Immobiliser	207
2.1	General description	207
2.2	Removing and installing immobiliser control unit J362	208
2.3	Adapting immobiliser control unit J362	208
2.4	Immobiliser reader coil D2	210
2.5	Ignition key	210
2.6	Adapting ignition keys	210
3	Anti-theft alarm (ATA) and interior monitoring	213
3.1	Assembly overview saloon	213
3.2	Assembly overview Cabriolet	215
3.3	Checking Cabriolet anti-theft alarm components	216
3.4	Checking anti-theft alarm components	216
3.5	Checking anti-theft alarm function	217
3.6	Anti-theft alarm sensors saloon	217
3.7	Anti-theft alarm sensors Cabriolet	218
3.8	Removing and installing interior monitoring switch E183	220
3.9	Removing and installing alarm horn H12	221
4	Horn	223
4.1	Removing and installing treble horn H2 / bass horn H7	223
97	- Wiring	224
1	Vehicle diagnosis tester	224
1.1	Connecting vehicle diagnostic tester	224
2	Removing and installing fuse holder and relay carrier	226
2.1	Removing and installing fuse holder on left of dash panel	226
2.2	Removing and installing relay plate and 13-position relay carrier	227
2.3	A-pillar coupling station	227



2.4	Removing and installing fuse holder on battery A	228
2.5	Removing and installing relay protective housing in engine compartment	228
2.6	Removing and installing cable duct in engine compartment	228
3	Control units	230
3.1	Tyre pressure monitor control unit J502	230
3.2	Convenience system central control unit J393	231
4	Repairs to wiring harnesses and connectors	234
4.1	Notes on safety	234
4.2	General notes concerning repairs to vehicle electrical system	234
4.3	Notes on repairs to wiring harnesses and connectors	235
4.4	Crimp connector	236
4.5	CAN bus line repair	238
4.6	Repairs to airbag and belt tensioner wiring	238
4.7	Optical fibre lines (OFL)	239
4.8	Wiring harness repair set VAS 1978 B	239
4.9	Release tool set VAS 1978/35	240
4.10	Crimping pliers V.A.S 1978/9A	246
5	Cleaning contact surfaces with contact surface cleaning set VAS 6410	250
5.1	Repairing ring terminals	250
5.2	Repairing threaded connections	251
5.3	Cleaning battery terminals	252
5.4	Anti-corrosion treatment	253
6	Renewal of aerial wiring	255
6.1	General description	255
6.2	Assembly overview - aerial wire	255
6.3	Installing a new aerial wire	255