



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Vehicle identification data</b>	<b>1</b>
1.1 Vehicle identification number	1
1.2 Identification plate	1
1.3 Vehicle data sticker	1
<b>2 Safety instructions</b>	<b>2</b>
<b>3 Body foam insulation</b>	<b>3</b>
<b>4 Galvanized body parts</b>	<b>4</b>
<b>5 Strengthened steel body panels</b>	<b>5</b>
<b>6 Body panel gaps/shut lines</b>	<b>6</b>
6.1 Body - front	6
6.2 Body - rear	7
<b>7 Body dimensions</b>	<b>9</b>
7.1 Body - front	9
7.2 Body - centre	12
7.3 Body - rear	15
7.4 Floor group - front	18
7.5 Floor group - centre	19
7.6 Floor group - rear	20
<b>8 Alignment jig</b>	<b>21</b>
8.1 Overview	21
8.2 Portal gauge	32
<b>50 - Body - front</b>	<b>34</b>
<b>1 Removing and installing engine bracket</b>	<b>34</b>
1.1 Removing	34
1.2 Installing	35
<b>2 Removing and installing intermediate piece</b>	<b>36</b>
2.1 Removing	36
2.2 Installing	37
<b>3 Removing and installing wing connecting plate</b>	<b>38</b>
3.1 Removing	38
3.2 Installing	39
<b>4 Removing and installing headlight mounting</b>	<b>40</b>
4.1 Removing	40
4.2 Installing	41
<b>5 Removing and installing longitudinal member for upper wheel housing</b>	<b>42</b>
5.1 Removing	42
5.2 Installing	43
<b>6 Removing and installing front wheel housing</b>	<b>44</b>
6.1 Removing	44
6.2 Installing	45
<b>7 Removing and installing front wheel housing - part section</b>	<b>46</b>
7.1 Removing	46
7.2 Installing	47
<b>8 Removing and installing front longitudinal member</b>	<b>48</b>
8.1 Removing	48
8.2 Installing	49
<b>9 Removing and installing front longitudinal member - part section</b>	<b>50</b>
9.1 Removing	50



9.2	Installing	51
<b>10</b>	<b>Removing and installing front part of longitudinal member</b>	<b>52</b>
10.1	Removing	52
10.2	Installing	53
<b>51 - Body - centre</b>		<b>55</b>
<b>1</b>	<b>Renewing roof</b>	<b>55</b>
1.1	Removing	55
1.2	Installing	56
<b>2</b>	<b>Renewing front roof cross member</b>	<b>58</b>
2.1	Removing	58
2.2	Installing	59
<b>3</b>	<b>Renewing middle roof cross member</b>	<b>60</b>
3.1	Removing	60
3.2	Installing	61
<b>4</b>	<b>Renewing rear roof cross member</b>	<b>62</b>
4.1	Removing	62
4.2	Installing	63
<b>5</b>	<b>Removing and installing A-pillar</b>	<b>64</b>
5.1	Removing	64
5.2	Installing	65
<b>6</b>	<b>Removing and installing A-pillar reinforcement</b>	<b>67</b>
6.1	Removing	67
6.2	Installing	68
<b>7</b>	<b>Removing and installing B-pillar reinforcement</b>	<b>70</b>
7.1	Removing	70
7.2	Installing	71
<b>8</b>	<b>Removing and installing outer side member</b>	<b>73</b>
8.1	Removing	73
8.2	Installing	74
<b>9</b>	<b>Removing and installing middle side member</b>	<b>76</b>
9.1	Removing	76
9.2	Installing	77
<b>10</b>	<b>Removing and installing side member reinforcement - part section</b>	<b>79</b>
10.1	Removing	79
10.2	Installing	80
<b>11</b>	<b>Removing and installing floor panel - part section</b>	<b>82</b>
11.1	Removing	82
11.2	Installing	83
<b>53 - Body - rear</b>		<b>84</b>
<b>1</b>	<b>Removing and installing rear cross panel</b>	<b>84</b>
1.1	Removing	84
1.2	Installing	85
<b>2</b>	<b>Removing and installing corner reinforcement</b>	<b>87</b>
2.1	Removing	87
2.2	Installing	88
<b>3</b>	<b>Removing and installing rear lock carrier</b>	<b>89</b>
3.1	Removing	89
3.2	Installing	90
<b>4</b>	<b>Removing and installing lower corner part</b>	<b>91</b>
4.1	Removing	91
4.2	Installing	92



<b>5</b>	<b>Removing and installing cover plate</b> .....	<b>94</b>
5.1	Removing .....	94
5.2	Installing .....	95
<b>6</b>	<b>Removing and installing rear longitudinal member - part section</b> .....	<b>96</b>
6.1	Removing .....	96
6.2	Installing .....	97
<b>7</b>	<b>Removing and installing side panel - part section</b> .....	<b>98</b>
7.1	Removing .....	98
7.2	Installing .....	99
<b>8</b>	<b>Removing and installing spare wheel well</b> .....	<b>101</b>
8.1	Removing .....	101
8.2	Installing .....	102
<b>9</b>	<b>Removing and installing spare wheel well - part section</b> .....	<b>103</b>
9.1	Removing .....	103
9.2	Installing .....	104