



## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b> . . . . .  | <b>1</b>  |
| <b>1 Gearbox identification</b> . . . . .   | <b>1</b>  |
| 1.1 Gearbox identification . . . . .  | 1         |
| 1.2 Identification code, assembly allocation, ratios, capacities . . . . .  | 2         |
| <b>2 Power transmission diagram</b> . . . . .   | <b>4</b>  |
| 2.1 Power transmission diagram . . . . .  | 4         |
| <b>3 Calculating the demultiplication ratio "i"</b> . . . . .   | <b>6</b>  |
| 3.1 Calculating the demultiplication ratio "i" . . . . .  | 6         |
| <b>4 General notes on the repair</b> . . . . .  | <b>6</b>  |
| 4.1 General notes on the repair . . . . .   | 6         |
| <b>30 - Clutch</b> . . . . .  | <b>9</b>  |
| <b>1 Clutch mechanism: repairing</b> . . . . .  | <b>9</b>  |
| 1.1 Clutch mechanism: repairing . . . . .   | 9         |
| 1.2 General assembly diagram- pedal gear . . . . .  | 10        |
| 1.3 Removing and installing neutral retaining spring . . . . .  | 14        |
| 1.4 Clutch pedal: removing and installing . . . . .   | 16        |
| 1.5 Assembly overview - hydraulics . . . . .  | 18        |
| 1.6 Clutch pump: Removal and installation . . . . .   | 21        |
| 1.7 Clutch pump: removal and installation . . . . .   | 25        |
| 1.8 Pipe unit and hose: removal and installation . . . . .  | 27        |
| 1.9 Bleed clutch system: . . . . .  | 29        |
| <b>2 Declutching unit: repairing</b> . . . . .  | <b>30</b> |
| 2.1 Declutching unit: repairing . . . . .   | 30        |
| <b>3 Repairing clutch</b> . . . . .   | <b>33</b> |
| 3.1 Repairing clutch . . . . .  | 33        |
| <b>34 - Controls, Housing</b> . . . . .   | <b>38</b> |
| <b>1 Servicing gear drive mechanism</b> . . . . .   | <b>38</b> |
| 1.1 Servicing gear drive mechanism . . . . .  | 38        |
| 1.2 Gear drive mechanism mounting position . . . . .  | 38        |
| 1.3 Gear lever dust cover and knob: removal and installation . . . . .  | 41        |
| 1.4 Gear lever and protective cover: repairing . . . . .  | 43        |
| 1.5 Drive mechanism cables: disassembly and reassembly; - general assembly diagram . . . . .  | 47        |
| 1.6 Removing and installing gear selector mechanism . . . . .   | 50        |
| 1.7 Gear drive mechanism: adjustment . . . . .  | 54        |
| <b>2 Gearbox: removal and installation</b> . . . . .  | <b>58</b> |
| 2.1 Gearbox: removal and installation . . . . .   | 58        |
| 2.2 Modifying support rail VW 457/1 . . . . .   | 60        |
| <b>3 Gear oil level: checking</b> . . . . .   | <b>73</b> |
| 3.1 Gear oil level: checking . . . . .  | 73        |
| <b>4 Dismantling and assembling gearbox</b> . . . . .   | <b>75</b> |
| 4.1 Dismantling and assembling gearbox . . . . .  | 75        |
| 4.2 Gearbox assembly overview . . . . .   | 75        |
| 4.3 The installation and removal of the gearbox housing and 5th gear . . . . .  | 78        |
| 4.4 Clutch housing: removing and installing . . . . .   | 81        |
| 4.5 Input shaft, secondary shaft (thrust sprocket shaft), differential, drive mechanism and gearbox brackets: removing and installing . . . . . | 83        |
| 4.6 Installation sequence . . . . .   | 87        |
| 4.7 Gearbox support 3221: modify . . . . .  | 89        |
| <b>5 Repairing gearbox housing and clutch housing</b> . . . . .   | <b>97</b> |
| 5.1 Repairing gearbox housing and clutch housing . . . . .  | 97        |



|   |   |            |
|---|---|------------|
| <b>6</b>                                    | <b>Gear drive mechanism: dismantling and assembling</b> .....                             | <b>105</b> |
| 6.1   | Gear drive mechanism: dismantling and assembling .....                                    | 105        |
| <b>7</b>                                    | <b>Dismantling and assembling selector forks</b> .....                                    | <b>108</b> |
| 7.1   | Dismantling and assembling selector forks .....   | 108        |
| 7.2   | Dismantling and assembling selector forks: Gearbox codes FNT, FLU, GEQ, GAH, GEW<br>..... | 109        |
| 7.3   | Dismantling and assembling selector forks: Gearbox codes GSE, GSG .....                   | 115        |
| <b>35 - Gears, Shafts</b> .....             |   | <b>124</b> |
| <b>1</b>                                    | <b>Dismantling and assembling input shaft</b> .....                                       | <b>124</b> |
| 1.1   | Dismantling and assembling input shaft .....  | 124        |
| <b>2</b>                                    | <b>Dismantling and assembling output shaft</b> .....                                      | <b>141</b> |
| 2.1   | Dismantling and assembling output shaft .....   | 141        |
| <b>39 - Final drive, Differential</b> ..... |   | <b>155</b> |
| <b>1</b>                                    | <b>Oil seal for flanged shaft: renew</b> .....  | <b>155</b> |
| 1.1   | Oil seal for flanged shaft: renew .....   | 155        |
| 1.2   | Renewing oil seal for left flanged shaft: Gearbox codes FNT, FLU, GAH .....               | 155        |
| 1.3   | Renewing oil seal for left flanged shaft: Gearbox codes GEQ, GSE, GEW, GSG .....          | 158        |
| 1.4   | Renewing oil seal for right flanged shaft: Gearbox codes FNT, FLU, GAH .....              | 161        |
| 1.5   | Renewing oil seal for right flanged shaft: Gearbox codes GEQ, GSE, GEW, GSG .....         | 164        |
| <b>2</b>                                    | <b>Dismantling and assembling differential</b> .....                                      | <b>166</b> |
| 2.1   | Dismantling and assembling differential .....   | 166        |
| 2.2   | Dismantling and assembling differential: Gearbox codes: FNT, FLU, GAH .....               | 166        |
| 2.3   | Dismantling and assembling differential: Gearbox codes: GEQ, GSE, GEW, GSG .....          | 179        |
| <b>3</b>                                    | <b>Adjusting differential</b> .....   | <b>192</b> |
| 3.1   | Adjusting differential .....  | 192        |
| 3.2   | Adjusting differential: Gearbox codes FNT, FLU, GAH .....                                 | 192        |
| 3.3   | Adjusting differential: Gearbox codes GEQ, GSE, GEW, GSG .....                            | 197        |