



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
2 Information on "Automatic gearbox 01M"	2
2.1 Information on "Automatic gearbox 01M"	2
3 Codes, gearbox allocation, ratios, equipment	3
3.1 Codes, gearbox allocation, ratios, equipment	3
4 Capacities	8
4.1 Capacities	8
5 Repair using an exchange component	8
5.1 Repair using an exchange component	8
6 General notes on the repair	16
6.1 General notes on the repair	16
32 - Torque converter	19
1 Torque converter	19
1.1 Torque converter	19
1.2 Assembly overview	19
1.3 Identification of torque converter	20
1.4 Allocation of torque converter	21
1.5 Draining torque converter	21
1.6 Removing plain bearing bush from turbine shaft	22
1.7 Removing and installing torque converter oil	23
1.8 Checking torque converter	25
1.9 Installing torque converter	25
37 - Controls, Housing	27
1 Connecting VAS 5051 and selecting function	27
1.1 Connecting VAS 5051 and selecting function	27
2 Electrical/electronic components and their locations	29
2.1 Electrical/electronic components and their locations	29
3 Gear drive mechanism: repairing	43
3.1 Gear drive mechanism: repairing	43
3.2 Checking selector mechanism	44
3.3 Checking and adjusting selector lever cable	44
3.4 Checking function of ignition key withdrawal lock	46
3.5 Dismantling and assembling selector mechanism	47
3.6 Removing and installing selector lever handle	56
3.7 Removing and installing selector lever lock solenoid (magnet) -N110-	57
3.8 Removing and installing selector lever cable	60
3.9 Removing and installing selector lever	63
3.10 Removing and installing locking cable	66
3.11 Adjusting locking cable	68
4 Checking gearbox	70
4.1 Checking gearbox	70
4.2 Fault finding table for "4-speed automatic gearbox"	70
4.3 Checking shift points	71
4.4 Checking stall speed	71
4.5 Measuring main pressure	71
5 Gearbox: removal and installation	75
5.1 Gearbox: removal and installation	75
5.2 Transporting the gearbox	95



5.3	Securing gearbox to assembly stand	97
6	Checking ATF level and replenishing	99
6.1	Checking ATF level and replenishing	99
7	Gearbox with selector elements	105
7.1	Gearbox with selector elements	105
7.2	Position of selector elements	106
8	Dismantling and assembling gearbox	108
8.1	Dismantling and assembling gearbox	108
8.2	Removing and installing ATF cooler and ATF filler tube	108
8.3	Dismantling and assembling planet gearbox -Overview-	110
8.4	I-Removing and installing ATF pump to supporting tube	111
8.5	II - Removing and installing reverse gear clutch -K2- to large sun gear	115
8.6	III-Removing and installing freewheel and reverse gear brake -B1-	119
8.7	IV - Planet carrier and gearbox housing input gear and cover	122
8.8	Dismantling planet gearbox	125
8.9	Assembling planet gearbox	135
8.10	Installing exchange component	146
8.11	Overview of all planet gearbox adjustments	157
8.12	Adjusting planet carrier	158
8.13	Adjusting reverse gear brake -B1-	165
8.14	Adjusting clutch play between -K1- and -K2-	171
8.15	2. and 4th gear brake -B2- adjustment	177
38 - Gears, Hydraulic controls		184
1	Dismantling and assembling ATF pump	184
1.1	Dismantling and assembling ATF pump	184
2	Dismantling and assembling freewheel with -B1- piston	189
2.1	Dismantling and assembling freewheel with -B1- piston	189
3	1. to 3rd gear clutch -K1-, dismantling and assembling	192
3.1	1. to 3rd gear clutch -K1-, dismantling and assembling	192
4	Dismantling and assembling reverse gear clutch -K2-	198
4.1	Dismantling and assembling reverse gear clutch -K2-	198
5	3. and 4th gear clutch -K3- with turbine shaft, dismantling and assembling	202
5.1	3. and 4th gear clutch -K3- with turbine shaft, dismantling and assembling	202
6	Removing and installing oil pan	208
6.1	Removing and installing oil pan	208
7	Removing and installing oil strainer	210
7.1	Removing and installing oil strainer	210
8	Removing and installing valve body	210
8.1	Removing and installing valve body	210
9	Removing and installing conductor foil with gearbox oil temperature sender -G93-	225
9.1	Removing and installing conductor foil with gearbox oil temperature sender -G93-	225
10	Dismantling and assembling parking lock	228
10.1	Dismantling and assembling parking lock	228
11	Renewing vehicle speed sender -G68-	239
11.1	Renewing vehicle speed sender -G68-	239
39 - Final drive, Differential		243
1	Checking gear oil in final drive	243
1.1	Checking gear oil in final drive	243
1.2	Models with no control plug in final drive cover	243
1.3	Models with a control plug in final drive cover	245
2	Removing and installing drive flange seal	246
2.1	Removing and installing drive flange seal	246



3	Dismantling and assembling final drive251
3.1	Dismantling and assembling final drive251
3.2	Repair overview of final drive251
3.3	Removing and installing input gear253
3.4	Removing and installing drive pinion260
3.5	Removing and installing differential272
3.6	Dismantling and assembling differential285
4	Adjusting final drive299
4.1	Adjusting final drive299
4.2	Overview of adjustments299
4.3	Adjustments when renewing individual components301
4.4	Adjusting drive pinion303
4.5	Adjusting input gear305
4.6	Adjusting differential307
5	Definitions308
5.1	Definitions308