



## Contents

<b>01 - Self-diagnosis, Electrical check</b> .....	<b>1</b>
<b>1 Self-diagnosis function</b> .....	<b>1</b>
1.1 Self-diagnosis function .....	1
1.2 Technical data of self-diagnosis .....	3
1.3 Self-diagnosis - Guide .....	3
<b>2 Locations of electrical/electronic components</b> .....	<b>4</b>
2.1 Locations of electrical/electronic components .....	4
<b>3 Performing self-diagnosis</b> .....	<b>18</b>
3.1 Performing self-diagnosis .....	18
3.2 Connecting fault reader V.A.G 1551 and selecting functions .....	19
3.3 List of selectable functions .....	21
3.4 Interrogating fault memory .....	21
3.5 Fault table .....	22
3.6 Erasing fault memory .....	28
3.7 Initiating basic setting .....	29
3.8 Read measured value block .....	29
3.9 Test table .....	31
<b>4 Gearbox: Electrical check</b> .....	<b>41</b>
4.1 Gearbox: Electrical check .....	41
4.2 Electrical check .....	42
4.3 Test table .....	44
<b>5 Definitions</b> .....	<b>51</b>
5.1 Definitions .....	51