



Contents

01 - Self-diagnosis, Electrical check	1
1 Self-diagnosis function	1
1.1 Self-diagnosis function	1
1.2 Technical data of self-diagnosis	2
2 General notes on the repair	2
2.1 General notes on the repair	2
3 Electrical/electronic components and their locations	4
3.1 Electrical/electronic components and their locations	4
4 Performing self-diagnosis	16
4.1 Performing self-diagnosis	16
4.2 Safety precautions	17
4.3 Connecting VAS 5051 and selecting function	17
4.4 List of selectable functions	19
4.5 Interrogate fault memory	20
4.6 Fault table	20
4.7 Fault codes 00258...01236	21
4.8 Fault codes 16988...65535	27
4.9 Initiate basic setting	37
4.10 Erase fault memory	38
4.11 Code control unit	39
4.12 Read measured value (data) block	39
4.13 Test table	42
5 Gearbox: Electrical check	52
5.1 Gearbox: Electrical check	52
5.2 Test table	54