



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>5</b>
<b>1 Removing and installing engine</b>	<b>5</b>
1.1 Notes on removing	6
1.2 Aligning engine and gearbox mountings	10
1.3 Notes on installation	11
1.4 Specified torques	13
1.5 Aligning engine and gearbox mountings	14
1.6 Assembly mountings	14
1.7 Additional notes and assembly work for vehicles with air conditioner	15
<b>13 - Crankshaft group</b>	<b>17</b>
<b>1 Dismantling and assembling engine</b>	<b>17</b>
1.1 Assembly overview	17
1.2 Removing and installing poly V-belt	21
<b>2 Sealing flange and flywheel/drive plate</b>	<b>23</b>
2.1 Assembly overview	23
2.2 Renewing crankshaft oil seal -belt pulley end-	26
2.3 Removing and installing sealing flange -belt pulley end-	28
2.4 Removing and installing drive plate	31
<b>3 Crankshaft</b>	<b>33</b>
3.1 Assembly overview	33
3.2 Crankshaft dimensions	37
<b>4 Dismantling and assembling pistons and conrods</b>	<b>39</b>
4.1 Assembly overview	39
4.2 Piston and cylinder dimensions	46
<b>15 - Cylinder head, valve gear</b>	<b>47</b>
<b>1 Cylinder head</b>	<b>47</b>
1.1 Assembly overview	47
1.2 Removing, installing and tensioning toothed belt	51
1.3 Checking semi-automatic toothed belt tensioning roller	56
1.4 Removing and installing cylinder head	56
1.5 Checking compression pressure	61
<b>2 Repairing valve gear</b>	<b>64</b>
2.1 Assembly overview	64
2.2 Renewing camshaft oil seal	67
2.3 Checking hydraulic bucket tappets	70
2.4 Removing and installing camshaft	70
2.5 Renewing valve stem seals	73
2.6 Checking valve guides	76
2.7 Renewing valve guides	77
2.8 Reworking valve seats	78
<b>17 - Lubrication</b>	<b>80</b>
<b>1 Parts of lubrication system</b>	<b>80</b>
1.1 Engine oil	80
1.2 Assembly overview	81



1.3	Removing and installing oil pump	92
1.4	Oil pump with balancer shaft gear assembly	92
1.5	Removing and installing oil sump	97
1.6	Checking oil pressure and oil pressure switch	101
<b>19</b>	<b>- Cooling system</b>	<b>104</b>
<b>1</b>	<b>Parts of cooling system</b>	<b>104</b>
1.1	Assembly overview - parts of cooling system, body side	104
1.2	Assembly overview - parts of cooling system, engine side	107
1.3	Coolant hose schematic diagram	111
1.4	Draining and filling coolant	113
1.5	Removing and installing radiator	117
1.6	Removing and installing coolant pump	118
1.7	Removing and installing thermostat	120
1.8	Checking radiator fan	122
<b>20</b>	<b>- Fuel supply system</b>	<b>124</b>
<b>1</b>	<b>Parts of fuel system</b>	<b>124</b>
1.1	Safety precautions when working on fuel supply system	124
1.2	Rules for cleanliness	125
1.3	Assembly overview - fuel tank with attachments and fuel filter	125
1.4	Removing and installing fuel delivery unit	132
1.5	Removing and installing fuel gauge sender	135
1.6	Removing and installing fuel tank	135
1.7	Crash fuel shut-off	138
1.8	Checking fuel pump	139
1.9	Bleeding fuel system (engine codes BEV and BGD only)	153
<b>2</b>	<b>Repairing accelerator mechanism</b>	<b>156</b>
2.1	Vehicles without electronic power control (EPC)	156
2.2	Vehicles with electronic power control (EPC)	159
<b>3</b>	<b>Activated charcoal filter system</b>	<b>161</b>
3.1	Functional description	161
3.2	Parts of the activated charcoal filter system - Assembly overview	162
3.3	Overview of activated charcoal filter system, engine codes AEG, AVH, AZG, BDC, BEV, BGD only	163
3.4	Checking fuel tank breather	165
<b>24</b>	<b>- Mixture preparation, injection</b>	<b>170</b>
<b>1</b>	<b>Repairing injection system</b>	<b>170</b>
1.1	General notes on injection	170
1.2	Safety precautions	171
1.3	Rules for cleanliness	171
1.4	Component location overview	172
1.5	Intake manifold upper part - Assembly overview	184
1.6	Removing and installing upper section of intake manifold	190
1.7	Intake manifold lower part, fuel rail, injectors - Assembly overview	195
1.8	Dismantling and assembling fuel rail with injectors	203
1.9	Assembly overview - air filter	204
1.10	Technical data	205
<b>2</b>	<b>Checking components</b>	<b>206</b>
2.1	Checking injectors for leaks and quantity injected	206
2.2	Checking fuel pressure regulator and holding pressure	211
2.3	Checking intake manifold change-over, only for vehicles with intake manifold change-over	218
<b>3</b>	<b>Engine control unit</b>	<b>220</b>
3.1	Replacing engine control unit	220



3.2	Adapting functions and components	221
3.3	Reading and erasing engine control unit fault memory	223
<b>26</b>	<b>- Exhaust system</b>	<b>225</b>
1	<b>Parts of exhaust system</b>	<b>225</b>
1.1	Exhaust manifold, front exhaust pipe with catalytic converter and attachments - Assembly overview	225
1.2	Assembly overview - silencers with mountings	230
1.3	Removing and installing exhaust manifold	232
2	<b>Secondary air system</b>	<b>233</b>
2.1	Functional description	233
2.2	Parts of the secondary air system - Assembly overview	233
2.3	Checking combination valve	238
2.4	Removing and installing combi-valve	240
<b>28</b>	<b>- Ignition system</b>	<b>242</b>
1	<b>Servicing ignition system</b>	<b>242</b>
1.1	General notes on ignition system	242
1.2	Safety precautions	242
1.3	Parts of the ignition system - Assembly overview	243
1.4	Spark plug test data	246