

Contents

01	Self-diagnosis	Page
	General to self-diagnosis	01-1
	- Features of self-diagnosis	01-1
	- Technical data of self-diagnosis	01-3
	- Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	01-5
	Fault memory	01-10
	- Interrogating and erasing fault memory	01-10
	Fault table: V.A.G codes and SAE P0 codes	01-15
	Fault table: Fault codes P1176...P1851	01-29
	Final control diagnosis	01-38
	- Performing final control diagnosis	01-38
	Readiness code	01-51
	- Read-out readiness code	01-52
	- Generating readiness code	01-54
	Measured value blocks	01-66
	- Safety precautions	01-66
	- Read measured value block	01-66
	Evaluating measured value block, Display group numbers 000...009 -Basic functions-	01-70
	Evaluating measured value block, Display groups 010...029 -Ignition-	01-87
	Evaluating measured value block, Display group 030...049 -Lambda regulation-	01-98
	Evaluating measured value block, Display groups 050...069 -Speed regulation-	01-114
	Evaluating measured value block, Display group 070...079 -Reducing emissions-	01-123
	Evaluating measured value block, Display group 080...100 -Readiness code-	01-125
24	Mixture preparation, Injection	Page
	Servicing injection system	24-1
	- Fitting locations overview	24-1
	- General notes on injection	24-5
	- Removing and installing parts of the injection system	24-7
	- Dismantling and assembling air cleaner	24-15
	- Dismantling and assembling intake manifold – lower part	24-16
	- Safety precautions	24-19
	- Rules for cleanliness	24-21
	- Technical data	24-22
	Checking components	24-23
	- Checking Lambda probe heating for Lambda probe before catalyst	24-23
	- Checking Lambda probe heater for Lambda probe after catalytic converter	24-29
	- Checking air mass meter	24-35
	- Checking throttle valve control part	24-39
	- Checking coolant temperature sender	24-61
	- Checking intake air temperature sender	24-71
	- Checking engine speed sender	24-79
	- Checking injectors	24-82
	- Checking fuel pressure regulator and holding pressure	24-92
	- Checking intake air system for leaks (unmetered air)	24-97
	Checking functions	24-101
	- Idling check	24-101
	- Adapting idling speed	24-107
	- Checking Lambda probe and Lambda regulation before catalytic converter	24-111
	- Checking Lambda probe and Lambda regulator after catalytic converter	24-122
	- Checking Lambda probe ageing Lambda probe 1	24-130
	- Checking engine operating mode	24-134

Contents

Engine control unit	24-138
- Checking control unit voltage supply	24-138
- Procedure after voltage supply open circuit	24-144
- Replacing engine control unit	24-146
- Coding engine control unit	24-149
- Matching engine control unit to throttle valve control part	24-152
- Matching engine control unit to electronic immobilizer	24-157
Checking additional signals	24-160
- Checking speed signal	24-160
- Checking air conditioner compressor signal	24-164
- Checking ignition retardation during gear selection	24-169
- Checking driving range signal	24-174
- Checking data bus	24-179
- Checking signal from clutch pedal switch	24-191
- Checking signal from brake light switch and brake pedal switch	24-193
28 Ignition system	Page
Servicing ignition system	28-1
- General notes on ignition system	28-1
- Removing and installing parts of the ignition	28-2
- Safety precautions	28-5
- Test data, spark plugs	28-6
- Checking Hall sender	28-7
- Checking ignition coils with output stage	28-9
- Checking knock sensor	28-15
- Checking misfire recognition	28-22