



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Notes on removing .....	4
1.3 Fastening the engine to the assembly stand .....	8
1.4 Notes on installation .....	8
1.5 Aligning engine and gearbox mountings .....	10
1.6 Tightening torques .....	11
1.7 Assembly mounting .....	11
<b>13 - Crankshaft group</b> .....	<b>13</b>
<b>1 Dismantling and assembling the engine</b> .....	<b>13</b>
1.1 Dismantling and assembling the engine .....	13
1.2 Removing and installing ribbed belt .....	22
<b>2 Removing and installing cylinder block, sealing flange and pressure plate/drive plate</b> . . .	<b>24</b>
2.1 Removing and installing cylinder block, sealing flange and pressure plate/drive plate . . .	24
2.2 Aluminium cylinder block .....	24
2.3 Renewing crankshaft oil seal -pulley end .....	28
2.4 Removing and installing pressure plate/drive plate .....	30
2.5 Renewing crankshaft sealing flange -flywheel end- .....	34
<b>3 Dismantling and assembling piston and conrod</b> .....	<b>43</b>
3.1 Dismantling and assembling piston and conrod .....	43
3.2 Piston and cylinder dimensions .....	49
<b>15 - Cylinder head, Valve gear</b> .....	<b>50</b>
<b>1 Cylinder head removing and installing</b> .....	<b>50</b>
1.1 Cylinder head removing and installing .....	50
1.2 Checking valve timing .....	54
1.3 Removing, installing and tensioning toothed belts .....	55
1.4 Checking semi-automatic toothed belt tensioning roller .....	62
1.5 Removing and installing camshaft housing .....	66
1.6 Cylinder head removing and installing .....	69
1.7 Checking compression pressure .....	75
<b>2 Servicing valve gear</b> .....	<b>77</b>
2.1 Servicing valve gear .....	77
2.2 Reworking valve seats .....	85
2.3 Renewing camshaft oil seals .....	87
2.4 Checking valve guides .....	89
2.5 Renewing valve guides .....	90
2.6 Renewing valve stem seals .....	91
<b>17 - Lubrication</b> .....	<b>94</b>
<b>1 Removing and installing parts of the lubrication system</b> .....	<b>94</b>
1.1 Removing and installing parts of the lubrication system .....	94
1.2 Removing and installing oil sump .....	102
1.3 Removing and installing oil pump .....	104
1.4 Checking oil pressure and oil pressure switch .....	107



<b>19 - Cooling system</b> . . . . .	<b>109</b>
<b>1 Removing and installing parts of cooling system</b> . . . . .	<b>109</b>
1.1 Removing and installing parts of cooling system . . . . .	109
1.2 Parts of cooling system body side . . . . .	110
1.3 Parts of cooling system engine side . . . . .	114
1.4 Coolant hose connection diagram . . . . .	119
1.5 Draining and filling cooling system . . . . .	120
1.6 Removing and installing the radiator . . . . .	122
1.7 Removing and installing coolant pump . . . . .	124
<b>20 - Fuel supply system</b> . . . . .	<b>126</b>
<b>1 Removing and installing parts of fuel supply system</b> . . . . .	<b>126</b>
1.1 Removing and installing parts of fuel supply system . . . . .	126
1.2 Removing and installing fuel tank with its attachments and fuel filter . . . . .	127
1.3 Safety precautions when working on the fuel supply system . . . . .	132
1.4 Rules for cleanliness . . . . .	133
1.5 Removing and installing fuel delivery unit . . . . .	133
1.6 Removing and installing fuel gauge sender . . . . .	135
1.7 Removing and installing fuel tank . . . . .	136
1.8 Crash fuel shut-off . . . . .	137
1.9 Checking fuel pump . . . . .	138
<b>2 Electronic power control (EPC)</b> . . . . .	<b>145</b>
2.1 Electronic power control (EPC) . . . . .	145
2.2 Function of EPC system . . . . .	145
2.3 Servicing parts of the electronic power control (EPC) . . . . .	146
2.4 Checking electronic accelerator warning lamp . . . . .	147
2.5 Checking accelerator pedal position sender . . . . .	149
<b>3 Activated charcoal filter system</b> . . . . .	<b>152</b>
3.1 Activated charcoal filter system . . . . .	152
3.2 Function . . . . .	152
3.3 Servicing parts of the activated charcoal filter system . . . . .	153
3.4 Checking activated charcoal filter solenoid valve 1 . . . . .	155
3.5 Checking fuel tank breather . . . . .	157
<b>26 - Exhaust system</b> . . . . .	<b>160</b>
<b>1 Removing and installing parts of exhaust system</b> . . . . .	<b>160</b>
1.1 Removing and installing parts of exhaust system . . . . .	160
1.2 Exhaust manifold, front exhaust pipe and catalyst with attachments . . . . .	161
1.3 Silencer with mountings . . . . .	167
1.4 Checking catalyst . . . . .	170
<b>2 Exhaust gas recirculation system</b> . . . . .	<b>173</b>
2.1 Exhaust gas recirculation system . . . . .	173
2.2 Servicing parts of exhaust gas recirculation system . . . . .	174
2.3 Checking potentiometer for exhaust gas recirculation (G212) . . . . .	176