

Contents

		Page
00	Technical data	Page
	Technical data	00-1
	- Engine number	00-1
	- Engine data	00-2
10	Removing and installing engine	Page
	Removing and installing engine	10-1
	- Notes on removing	10-3
	- Securing engine to assembly stand	10-9
	- Notes on installing	10-10
	- Tightening torques	10-14
	- Assembly mountings	10-15
	- Additional information and removal instructions for vehicles with air conditioner	10-16
13	Crankshaft group	Page
	Dismantling and assembling engine	13-1
	- Removing and installing ribbed belt	13-9
	- Removing, installing and tensioning toothed belt	13-12
	- Checking semi-automatic toothed belt tensioning roller	13-21
	Removing and installing sealing flange and pressure plate/drive plate	13-22
	- Renewing crankshaft oil seal -belt pulley end	13-25
	- Removing and installing front sealing flange	13-29
	- Removing and installing drive plate	13-33
	Removing and installing crankshaft	13-36
	- Crankshaft dimensions	13-40
	Dismantling and assembling pistons and conrods	13-41
	- Piston and cylinder dimensions	13-49
15	Cylinder head, Valve gear	Page
	Removing and installing cylinder head	15-1
	- Removing and installing cylinder head	15-6
	- Checking compression pressures	15-12
	Servicing valve gear	15-15
	- Reworking valve seats	15-22
	- Replacing camshaft oil seal	15-26
	- Removing and installing camshaft	15-30
	- Checking hydraulic bucket tappets	15-34
	- Checking valve guides	15-36
	- Renewing valve guides	15-37
	- Renewing valve stem seals	15-39
17	Lubrication	Page
	Removing and installing parts of the lubrication system	17-1
	- Removing and installing sump	17-11
	- Checking oil pressure and oil pressure switch	17-14
19	Cooling system	Page
	Removing and installing parts of cooling system	19-1
	- Parts of cooling system body side	19-2
	- Parts of cooling system engine side	19-7
	- Coolant hose connection diagram	19-10
	- Draining and filling cooling system	19-11
	- Removing and installing radiator	19-16
	- Removing and installing coolant pump	19-19
	- Removing and installing thermostat	19-22

- Electronically regulated cooling system	19-24
- Checking electronically regulated cooling system	19-25

20 Fuel supply system	Page
Removing and installing parts of fuel supply system	20-1
- Removing and installing fuel tank with its attachments and fuel filter	20-2
- Safety precautions when working on the fuel supply system	20-8
- Rules for cleanliness	20-9
- Removing and installing fuel delivery unit	20-10
- Removing and installing fuel gauge sender	20-13
- Removing and installing fuel tank	20-14
- Checking fuel pump	20-18
- Crash fuel shut-off	20-20
Checking electronic power control (EPC)	20-29
- Function of EPC system	20-30
- Checking electronic accelerator warning lamp	20-32
- Checking accelerator pedal position sender	20-33
Activated charcoal filter system	20-39
- Function	20-39
- Servicing parts of the activated charcoal filter system	20-41
- Checking activated charcoal filter solenoid valve 1	20-43

26 Exhaust system	Page
Removing and installing parts of exhaust system	26-1
- Exhaust manifold, front exhaust pipe and catalytic converter with attachments	26-2
- Silencer with mountings	26-6
- Checking catalytic converter	26-10
Secondary air system	26-14
- Function	26-14
- Removing and installing parts of the secondary air system	26-15
- Checking secondary air system	26-19
- Checking secondary air pump motor	26-23
Exhaust gas recirculation system	26-32
- Servicing parts of exhaust gas recirculation system	26-33
- Checking potentiometer for exhaust gas recirculation (G212)	26-36