



## Contents

<b>00 - Materials</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Notes on removing .....	4
1.3 Securing engine to assembly stand .....	8
1.4 Notes on installing .....	9
1.5 Aligning engine and gearbox mountings .....	11
1.6 Tightening torques .....	12
1.7 Additional information and removal instructions for vehicles with air conditioner .....	12
<b>13 - Crankshaft group</b> .....	<b>14</b>
<b>1 Dismantling and assembling engine</b> .....	<b>14</b>
1.1 Dismantling and assembling engine .....	14
1.2 Removing and installing ribbed belt .....	29
<b>2 Removing and installing sealing flange and dual mass flywheel/drive plate</b> .....	<b>31</b>
2.1 Removing and installing sealing flange and dual mass flywheel/drive plate .....	31
2.2 Renewing crankshaft oil seal -vibration damper end- .....	36
2.3 Removing and installing drive plate .....	39
<b>3 Removing and installing crankshaft</b> .....	<b>41</b>
3.1 Removing and installing crankshaft .....	41
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>46</b>
4.1 Dismantling and assembling pistons and conrods .....	46
4.2 Piston and cylinder dimensions .....	52
<b>15 - Cylinder head, Valve gear</b> .....	<b>53</b>
<b>1 Removing and installing cylinder head</b> .....	<b>53</b>
1.1 Removing and installing cylinder head .....	53
1.2 Removing and installing cover .....	61
1.3 Removing and installing cylinder head cover .....	65
1.4 Removing and installing cylinder head .....	69
1.5 Checking valve timing .....	76
1.6 Adjusting valve timing .....	78
1.7 Checking compression pressures .....	85
<b>2 Servicing valve gear</b> .....	<b>87</b>
2.1 Servicing valve gear .....	87
2.2 Reworking valve seats .....	98
2.3 Removing and installing camshafts .....	100
2.4 Checking camshaft adjustment .....	108
2.5 Checking valve guides .....	113
2.6 Renewing valve stem seals .....	114
<b>17 - Lubrication</b> .....	<b>117</b>
<b>1 Removing and installing parts of the lubrication system</b> .....	<b>117</b>
1.1 Removing and installing parts of the lubrication system .....	117
1.2 Dismantling and assembling oil filter housing .....	123
1.3 Dismantling and assembling oil pump .....	126
1.4 Removing and installing oil sump .....	129



1.5	Checking oil pressure and oil pressure switch . . . . .	132
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>135</b>
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>135</b>
1.1	Removing and installing parts of cooling system . . . . .	135
1.2	Parts of cooling system body side . . . . .	136
1.3	Parts of cooling system engine side . . . . .	139
1.4	Coolant hose connection diagram . . . . .	144
1.5	Dismantling and assembling coolant thermostat housing . . . . .	146
1.6	Draining and filling cooling system . . . . .	148
1.7	Removing and installing radiator and fans . . . . .	151
1.8	Removing and installing coolant pump . . . . .	154
1.9	Checking continued coolant circulation pump . . . . .	157
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>160</b>
<b>1</b>	<b>Removing and installing parts of fuel supply system . . . . .</b>	<b>160</b>
1.1	Removing and installing parts of fuel supply system . . . . .	160
1.2	Removing and installing fuel tank with its attachments and fuel filter . . . . .	161
1.3	Safety precautions when working on the fuel supply system . . . . .	168
1.4	Rules for cleanliness . . . . .	169
1.5	Crash fuel shut-off . . . . .	169
1.6	Removing and installing fuel delivery unit . . . . .	169
1.7	Removing and installing fuel gauge sender . . . . .	171
1.8	Removing and installing fuel tank . . . . .	171
1.9	Checking fuel pump . . . . .	174
<b>2</b>	<b>Electronic power control (EPC) . . . . .</b>	<b>181</b>
2.1	Electronic power control (EPC) . . . . .	181
2.2	Function of EPC system . . . . .	181
2.3	Servicing parts of electronic power control (EPC) . . . . .	182
2.4	Checking accelerator pedal position sender . . . . .	184
<b>3</b>	<b>Activated charcoal filter system . . . . .</b>	<b>187</b>
3.1	Activated charcoal filter system . . . . .	187
3.2	Function . . . . .	187
3.3	Servicing parts of the activated charcoal filter system . . . . .	188
3.4	Checking activated charcoal filter canister solenoid valve 1 . . . . .	190
3.5	Checking fuel tank breather . . . . .	192
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>195</b>
<b>1</b>	<b>Removing and installing parts of exhaust system . . . . .</b>	<b>195</b>
1.1	Removing and installing parts of exhaust system . . . . .	195
1.2	Exhaust manifold, front exhaust pipe and catalytic converter with attachments . . . . .	196
1.3	Silencer with mountings . . . . .	200
1.4	Checking catalytic converter . . . . .	204
<b>2</b>	<b>Secondary air system . . . . .</b>	<b>206</b>
2.1	Secondary air system . . . . .	206
2.2	Function . . . . .	206
2.3	Removing and installing parts of the secondary air system . . . . .	207
2.4	Checking secondary air system . . . . .	212
2.5	Checking secondary air pump motor . . . . .	214
2.6	Removing and installing secondary air pump motor . . . . .	216
2.7	Checking combi-valve . . . . .	217