

001 - Basic equipment	1-20
1. Basic equipment	1-2
2. Battery, ignition/starter switch, X-contact relief relay	3
3. Dash panel insert, immobilizer	4
4. Dash panel insert, rev. counter, odometer display	5
5. Dash panel insert, handbrake warning, brake fluid level warning contact, turn signal warning lamps, main beam warning lamp, rear fog light warning lamp	6
6. Turn signal switch, headlight dipper/flasher switch, parking light switch, front left bulbs	7
7. Hazard warning light switch, turn signal relay, front right bulbs	8
8. Brake light switch, brake light, rear fog light, left reversing light, left tail light	9
9. Right tail light, brake light, right reversing light, tank filler flap remote release switch	10
10. Connection for radio, front and rear cigarette lighter, socket	11
11. Light switch, rear fog light switch, ashtray illumination bulb	12
12. Dual tone horn, glove compartment light, number plate light	13
13. Headlight range control regulator, headlight range control motor, illumination regulators - switches and instruments	14
14. Fresh air blower switch, fresh air/air recirculation flap switch, fresh air blower, fresh air/recirculated air flap control motor	15
15. Heated rear window, heated exterior mirror, washer pump	16
16. Intermittent wiper switch, windscreen wiper motor	17
17. Front interior light, digital clock, ambient temperature sensor, left door warning lamp	18
18. Rear right and left reading light, right door warning lamp, right door contact switch	19
19. Self-diagnosis connection	20
002 - 2.0 ltr./85 kW Motronic, engine code AQY	21-30
1. 2.0 ltr./85 kW Motronic, engine code AQY	21
2. Alternator, starter	22
3. Motronic control unit, ignition system	23
4. Motronic control unit, throttle valve control unit, coolant temperature sender	24
5. Motronic control unit, engine speed sender, knock sensor I, knock sensor II	25
6. Motronic control unit, injectors, lambda probe II, heater element	26
7. Motronic control unit, air mass meter, activated charcoal filter system solenoid valve, Lambda probe I, secondary air pump relay, secondary air pump motor	27
8. Oil pressure switch, fuel pump, secondary air inlet valve, coolant shortage indicator sender, fuel system diagnosis pump	28
9. Fuel gauge sender, fuel pump (lift pump), speedometer sender, fuel pump relay, coolant shortage indicator sender	29
10. Dash panel insert, rev. counter, optic and acoustic oil pressure warning, coolant temperature gauge, fuel gauge, alternator warning lamp, oil pressure switch	30
003 - 1.9 ltr./66 kW Turbo diesel engine, engine code ALH	31-41
1. 1.9 ltr./66 kW Turbo diesel engine, engine code ALH	31
2. Alternator, starter	32
3. Diesel direct injection system control unit, kick-down switch, idling switch, accelerator pedal position sender, engine glow plugs	33
4. Diesel direct injection system control unit, coolant temperature sender, air mass meter, intake manifold pressure sender, intake manifold temperature sender, engine speed sender	34
5. Diesel direct injection system control unit, needle lift sender, fuel temperature sender, modulating piston movement sender, metering adjuster	35
6. Diesel direct injection system control unit, intake manifold flap change-over valve, exhaust gas recirculation valve, charge pressure control solenoid valve, commencement of injection valve, voltage supply relay	36
7. Diesel direct injection system control unit, cruise control system switch (CCS), clutch pedal switch, brake light switch, brake pedal switch	37
8. Diesel direct injection system control unit, coolant heater elements	38
9. Fuel gauge sender, coolant shortage indicator sender	39
10. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, glow period warning lamp, coolant temperature/coolant shortage warning lamp	40
11. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter	41
004 - Radio systems	42-45
1. Radio systems	42
2. Radio, CD changer, front loudspeakers	43
3. Radio, front loudspeakers, rear loudspeakers	44
4. Radio, aerial	45
005 - 4 Speed automatic gearbox (AG 4)	46-50
1. 4 Speed automatic gearbox (AG 4)	46
2. Starter inhibitor and reversing light relay	47
3. Automatic gearbox control unit. multi-function switch. kick-down switch	48

4. Automatic gearbox control unit, solenoid valve, gearbox speed sender	49
5. Automatic gearbox control unit, road speed sender, selector lever lock solenoid	50
006 - Airbag system	51-55
1. Airbag system	51-52
2. Airbag control unit, airbag coil connector, front airbag igniter, side airbag crash sensors	53
3. Airbag control unit, side airbag igniter, belt tensioner igniter	54
4. Airbag control unit, airbag warning lamp	55
007 - Cruise control system (CCS), for engine code AQY only	56-59
1. Cruise control system (CCS), for engine code AQY only	56
2. Brake light switch, brake pedal switch for CCS	57
3. Motronic control unit, switch for cruise control system (CCS), clutch pedal switch	58
4. Motronic control unit, throttle valve control part	59
008 - Anti-lock brake system (ABS), anti-lock brake system (ABS) with electronic differential lock (EDL), anti-lock brake system (ABS) with brake pad wear monitor	60-63
1. Anti-lock brake system (ABS), anti-lock brake system (ABS) with electronic differential lock (EDL), anti-lock brake system (ABS) with brake pad wear monitor	60
2. ABS for control unit, brake light switch	61
3. Control unit for ABS with EDL, ABS warning lamp, ABS hydraulic pump	62
4. ABS with EDL, speed sensor, brake pas wear sender	63
009 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	64-70
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	64
2. ABS with EDL/TCS/ESP control unit, TCS/ESP button	65
3. ABS with EDL/ TCS/ ESP control unit, steering angle sender, brake light suppression relay	66
4. ABS with EDL/TCS/ESP control unit, speed sensors	67
5. ABS with EDL/ TCS/ ESP control unit, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump	68
6. ABS with EDL/ TCS/ ESP control unit, longitudinal acceleration sender, brake pressure solenoid valve, brake detection switch, ESP	69
7. ABS with EDL/TCS/ESP control unit, hand brake warning switch, brake fluid level warning contact	70
010 - Radiator fan, 2 speed	71-72
1. Radiator fan, 2 speed	71
2. Radiator fan, 2 speed	72
011 - Heated washer jets	73-74
1. Heated washer jets	73
2. Heated washer jets	74
012 - Fog lights	75-76
1. Fog lights	75
2. Left fog light, right fog light, fog lights relay	76
013 - Heated front seats	77-79
1. Heated front seats	77
2. Heated driver's seat control unit, temperature sensor, heated driver's seat, heated driver's seat backrest	78
3. Heated front passenger's seat control unit, temperature sensor, heated front passenger's seat, heated front passenger's seat backrest	79
014 - Trailer towing	80-83
1. Trailer towing	80
2. Left reversing light, left tail lights, brake light, rear fog light	81
3. Trailer towing socket, rear fog light cut-off	82
4. Right tail light, brake light, right reversing light, trailer towing warning lamp	83
015 - Daylight driving lights	84-89
1. Daylight driving lights	84
2. Dash panel insert, turn signal switch, headlight dip and flasher switch, parking light switch	85
3. Front left bulbs, front right bulbs	86
4. Lighting switch, rear fog light switch, switches and instruments lightning control	87
5. Brake light, rear fog light, left reversing light, left tail light, rear right turn signal	88
6. brake light, right reversing light, right tail light, glove compartment light, registration plate light, rear right turn signal	89
016 - Air conditioning system	90-94
1. Air conditioning system	90
2. Fresh air blower switch , fresh air/air recirculation flap switch, fresh air blower, fresh air/air recirculation flap positioning motor	91
3. Radiator fan control unit, air conditioner switch, air conditioner shut-off thermo-switch, ambient temperature switch	92
4. Radiator fan control unit. radiator fan. air conditioner svstem maanetic couplina	93

5. Radiator fan control unit, radiator fan thermo-switch	94
017 - Convenience electrics	95-108
1. Convenience electrics	95
2. Door control unit (driver's side), driver's door electric window lifter, switch for interior locking (driver's side (LHD))	96
3. Door control unit (driver's side), central locking lock unit (driver's side (LHD)), central locking warning lamp	97
4. Door control unit (driver's side), driver's door electrically adjustable exterior mirror	98
5. Door control unit (driver's side (LHD)), mirror adjustment switch, mirror adjustment/fold-in function change-over switch	99
6. Door control unit (front passenger's side (LHD)), electric window switch, switch for central locking (front passenger's side)	100
7. Door control unit (front passenger's side (LHD)), electric window switch, switch for central locking (front passenger's side)	101
8. Front interior lights, digital clock, rear reading lights, anti-theft warning system ultra-sonic sensors, interior monitoring switch	102
9. Convenience system central control unit, luggage compartment light, luggage compartment light switch	103
10. Convenience system central control unit, tailgate/boot lid central locking motor, tank flap remote release	104
11. Convenience system central control unit, tailgate remote control switch, illuminated make-up mirror (driver's and front passenger's sides), self-diagnosis connection	105
12. Convenience system central control unit, contact switch in lock cylinder for tailgate anti-theft alarm system/central locking system	106
13. Convenience system central control unit, anti-theft alarm horn, aerial for central locking and anti-theft alarm system	107
14. Convenience system central control unit, control unit for sliding sunroof adjustment, regulator for sliding sunroof adjustment	108
018 - Convenience system (without electric windows)	109-122
1. Convenience system (without electric windows)	109-110
2. Central locking control unit, central locking lock unit (driver's side), interior locking switch	111
3. Central locking control unit, electrically adjustable exterior mirror for driver's door	112
4. Central locking control unit, mirror adjustment switch, mirror adjustment change-over switch/folding	113
5. Central locking system control unit, central locking lock unit (front passenger's side)	114
6. Central locking control unit, central locking motor tailgate/bootlid, flap remote release switch	115
7. Central locking control unit, interior locking switch, heated exterior mirrors for front passenger's door	116
8. Central locking control unit, remote release switches for tailgate/boot lid, illuminated vanity mirror (driver and front passenger side), self-diagnosis connection	117
9. Central locking control unit, anti-theft alarm system horn, central locking and anti-theft alarm system aerial	118
10. Central locking control unit, sliding sunroof adjustment control unit, sliding sunroof adjustment regulator, dash panel insert	119
11. Central locking control unit, luggage compartment light, luggage compartment light switch	120
12. Interior light, front, digital clock, rear reading lamps, anti-theft alarm ultra-sonic sensor, interior monitor switch	121
13. Control unit with display in dash panel insert	122
019 - 1.8 l/110 kW Motronic, engine codes AVC	123-136
1. 1.8 l/110 kW Motronic, engine codes AVC	123
2. Alternator, starter, voltage regulator	124
3. Motronic control unit, ignition system	125
4. Motronic control unit, coolant temperature sender, hall sender, charge air pressure sender	126
5. Motronic control unit, throttle valve control unit, intake air temperature sender, knock sensor	127
6. Motronic control unit, engine speed sender, knock sensor II	128
7. Motronic control unit, injectors, air mass meter	129
8. Motronic control unit, activated charcoal filter system solenoid valve, accelerator pedal position sender, lambda probe before catalyst	130
9. Motronic control unit, continued coolant circulation pump, lambda probe downstream of catalytic converter	131
10. Motronic control unit, charge pressure control solenoid valve, turbocharger divert air valve, fuel pump relay, fuel system diagnostic pump	132
11. Motronic control unit, cruise control system switch (CCS), clutch pedal switch, brake light switch, cruise control system brake pedal switch	133
12. Fuel pump, fuel gauge sender, coolant shortage indicator sender	134
13. Dash panel insert. optical and acoustical oil pressure warning. speedometer sender. coolant	135

temperature/coolant shortage warning lamp, electronic power control fault lamp	
14. Coolant temperature gauge, fuel gauge, rev. counter, oil level/oil temperature sender, oil level warning lamp, speedometer, self-diagnosis connection	136
020 - Airbag system	137-140
1. Airbag system	137
2. Airbag control unit, airbag coil connector, airbag igniter front, side airbag crash sensors	138
3. Airbag control unit, side airbag igniter, belt tensioner igniter	139
4. Airbag control unit, airbag warning lamp, self-diagnosis connection	140
021 - Anti-lock brake system (ABS), anti-lock brake system (ABS) with electronic differential lock (EDL) anti-lock brake system (ABS) with brake wear monitor (BVA)	141-144
1. Anti-lock brake system (ABS), anti-lock brake system (ABS) with electronic differential lock (EDL) anti-lock brake system (ABS) with brake wear monitor (BVA)	141
2. ABS for control unit, brake light switch	142
3. ABS with EDL/TCS/ESP control unit, ABS warning lamp, ABS hydraulic pump, self-diagnosis connection, dash panel insert	143
4. ABS with EDL control unit, speed sensors, brake lining/pad wear sender	144
022 - Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	145-152
1. Anti-lock brake system (ABS) with electronic differential lock (EDL), traction control system (TCS) and electronic stability program (ESP)	145-146
2. ABS with EDL/TCS/ESP control unit, TCS/ESP button	147
3. ABS with EDL/ TCS/ ESP control unit, steering angle sender, brake light suppression relay	148
4. ABS with EDL/TCS/ESP control unit, speed sensors	149
5. ABS with EDL/TCS/ESP control unit, lateral acceleration sender, brake pressure sender, yaw rate sender, ABS hydraulic pump	150
6. ABS with EDL/TCS/ESP control unit, hand brake warning switch, brake fluid level warning contact	151
7. ABS with EDL/TCS/ESP control unit, handbrake warning switch, brake fluid level warning contact	152
023 - 2.0 I - engine 85 kW Motronic, engine codes AQY	153-162
1. 2.0 I - engine 85 kW Motronic, engine codes AQY	153
2. Alternator, starter	154
3. Motronic control unit, ignition system	155
4. Motronic control unit, throttle valve control unit, coolant temperature sender	156
5. Motronic control unit, engine speed sender, knock sensors	157
6. Motronic control unit, injectors, lambda probe II, heater element, self-diagnosis connection	158
7. Motronic control unit, air mass meter, activated charcoal filter system solenoid valve, lambda probe I, secondary air pump relay, secondary air pump motor	159
8. Oil pressure switch, fuel pump, secondary air inlet valve, coolant shortage indicator sender, fuel system diagnostic pump	160
9. Fuel gauge sender, fuel gauge, fuel pump (pre-supply pump), speedometer sender, fuel pump relay, coolant shortage indicator sender	161
10. Dash panel insert, rev. counter, optical and acoustical oil pressure warning, coolant temperature gauge, fuel gauge, oil pressure switch, oil level thermo sender	162
024 - 1.9 I/66 kW - Turbodiesel engine, engine code ALH	163-173
1. 1.9 I/66 kW - Turbodiesel engine, engine code ALH	163
2. Alternator, starter	164
3. Diesel direct injection system control unit, kick-down switch, idling speed switch, accelerator position sender, glow plug - (engine)	165
4. Diesel direct injection system control unit, coolant temperature display sender, air mass meter, engine speed sender	166
5. Diesel direct injection system control unit, needle lift sender, fuel temperature sender, modulating piston movement sender, metering adjuster	167
6. Diesel direct injection system control unit, variable intake manifold flap change-over valve, exhaust gas recirculation valve, charge pressure control solenoid valve, commencement of injection valve, voltage supply relay	168
7. Diesel direct injection system control unit, brake light switch, brake pedal switch, cruise control system switch, clutch pedal switch	169
8. Diesel direct injection system control unit, coolant heating element	170
9. Fuel gauge sender, coolant shortage indicator sender	171
10. Dash panel insert, optical and acoustic oil pressure warning, speedometer sender, glow period warning lamp, coolant temperature/coolant shortage warning lamp	172
11. Dash panel insert, coolant temperature gauge, fuel gauge, oil level and oil temperature sender, oil level warning lamp, rev. counter	173
025 - Adjustable rear spoiler	174-176
1. Adjustable rear spoiler	174
2. Rear spoiler control unit	175
3. Rear spoiler control unit. control unit disolav. self-diaagnosis connection	176

026 - Basic equipment	177-197
1. Basic equipment	177-178
2. Battery, ignition/starter switch, X contact relief relay	179
3. Dash panel insert, immobilizer, bonnet contact switch	180
4. Dash panel insert, rev. counter, odometer display	181
5. Dash panel insert, handbrake warning, brake fluid level warning contact, turn signal warning lamps, rear fog light warning lamp	182
6. Turn signal switch, headlight dipper/flasher switch, parking light switch, front left bulb, headlight dipper/flasher relay, headlight main beam relay	183-184
7. Hazard warning light switch, turn signal relay, bulb front right	185
8. Brake light switch, brake light, rear fog light, tail light	186
9. Right tail lights, brake light, right reversing light, tank flap remote unlocking	187
10. Radio connection, front and rear cigarette lighter, socket	188
11. Lighting switch, rear fog light switch, ashtray light bulb	189
12. Dual tone horn, glove box light, number plate light	190
13. Headlight range control adjuster, headlight range control motor, switches and instruments - lighting control	191
14. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	192
15. Heated rear window, heated exterior mirrors, windscreen washer pump	193
16. Intermittent wiper operation switch, windscreen wiper motor	194
17. Front interior light, digital clock, ambient temperature sensor, left door warning light	195
18. Rear left and right reading light, right door warning light, right door contact switch, luggage compartment light	196
19. Self-diagnosis connection	197
027 - 1.6 ltr./74 kW Simos, engine code AWH	198-213
1. 1.6 ltr./74 kW Simos, engine code AWH	198
2. Alternator, starter	199
3. Current supply relay for Simos control unit	200
4. Simos control unit, throttle valve control unit, ignition system	201
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	202
6. Simos control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, intake manifold change-over valve	203
7. Simos control unit, heater element (crankcase breather)	204
8. Simos control unit, injectors	205
9. Simos control unit, throttle valve drive angle sender, Lambda probe	206
10. Simos control unit, switch for cruise control system (CCS)	207
11. Simos control unit, secondary air pump motor, clutch pedal switch, brake pedal switch for CCS, brake light switch	208
12. Simos control unit, Lambda probe after catalyst, air mass meter, fuel pump relay, activated charcoal filter system solenoid valve	209
13. Fuel pump, fuel gauge sender, coolant shortage indicator sender	210
14. Dash panel insert, oil pressure warning lamp, oil level/oil temperature warning lamp, speedometer sender, coolant temperature/coolant shortage warning lamp	211
15. Dash panel insert, coolant temperature gauge, fuel gauge, speedometer, rev. counter, alternator warning lamp	212
16. Dash panel insert, electronic power control fault lamp, self-diagnosis connection	213
028 - Air conditioner	214-218
1. Air conditioner	214
2. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	215
3. Radiator fan control unit, air conditioner switch, air conditioner pressure switch, air conditioner shut-off thermo-switch, ambient temperature switch	216
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, radiator fan thermo-switch, third speed, radiator fan 3rd speed relay	217
5. Radiator fan control unit, radiator fan thermo-switch, continued coolant circulation pump	218
029 - Radiator fan, 3 speed	219-221
1. Radiator fan, 3 speed	219
2. Radiator fan control unit, radiator fan thermo-switch	220
3. Radiator fan control unit, radiator fan, radiator fan thermo-switch, third speed, radiator fan 3rd speed relay	221
030 - CAN bus drive network	222-224
1. CAN bus drive network	222
2. Dash panel insert, diagnosis interface for data bus, self-diagnosis connection	223
3. Dash panel insert. immobilizer	224

031 - Convenience system with electric window regulators	225-237
1. Convenience system with electric window regulators	225
2. Fuses in fuse holder	226
3. Rear lid remote release switch, Tank filler flap remote release switch	227
4. Front left window regulator switch, Front right window regulator switch in driver door, Driver side interior locking switch	228
5. Mirror adjustment switch, Exterior mirror heater button, Driver side mirror adjustment motor, Driver side mirror adjustment motor, Heated exterior mirror on driver side	229
6. Driver side central locking lock unit, Left door warning lamp	230
7. Front passenger side interior locking switch, Front passenger side mirror adjustment motor, Front passenger side mirror adjustment motor, Heated exterior mirror on front passenger side	231
8. Window regulator switch in front passenger door, Front passenger side central locking lock unit, Right door warning lamp	232
9. Ambient temperature sensor, Front interior light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	233
10. Left ultrasonic sensor for anti-theft alarm system, Right ultrasonic sensor for anti-theft alarm system, Rear left reading light, Rear right reading light	234
11. Control unit in dash panel insert, Luggage compartment light	235
12. Sliding sunroof adjustment regulator, Bonnet contact switch, Sliding sunroof adjustment control unit, Rear lid central locking motor, Tank filler flap locking motor	236
13. Anti-theft alarm system horn, Alarm horn, Central locking and anti-theft alarm system aerial	237
032 - Central locking with convenience features	238-250
1. Central locking with convenience features	238
2. Fuses	239
3. Fuses	240
4. Front interior light, illuminated vanity mirror, ambient temperature sensor	241
5. Reading lights, ultrasonic sensors	242
6. Electrically adjustable and heated exterior mirrors (driver side)	243
7. Electrically adjustable and heated exterior mirrors (front passenger side)	244
8. Driver side interior locking switch, tank filler flap remote release switch	245
9. Driver side central locking lock unit, warning lamp (driver side)	246
10. Front passenger side interior locking switch, central locking lock unit, warning lamp (front passenger)	247
11. Luggage compartment light, control unit with display in dash panel insert	248
12. Sliding/tilting sunroof, central locking motor (rear lid)	249
13. Anti-theft alarm, tank filler flap locking motor	250
033 - Air conditioner	251-255
1. Air conditioner	251
2. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	252
3. Radiator fan control unit, air conditioner switch, air conditioner pressure switch, air conditioner shut-off thermo-switch, ambient temperature switch	253
4. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling	254
5. Radiator fan control unit, radiator fan thermo-switch	255
034 - Basic equipment	256-278
1. Basic equipment	256-257
2. Fuses, battery, ignition/starter switch, X contact relief relay	258
3. Fuses, immobilizer reading coil, dash panel insert	259
4. Fuses, speedometer sender, dash panel insert	260
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	261
6. Lighting switch	262
7. Hazard warning light switch, column switch trim	263
8. Fuses, front lighting, front turn signals	264
9. Headlight range control, switches and instruments-lighting control, horn plate	265
10. Lighting rear, turn signal bulb rear	266
11. Lighting rear, radioconnection	267
12. Fuses, cigarette lighter, socket	268
13. Fuses, interior light front, ambient temperature sensor	269
14. Reading light rear, illuminated vanity mirror	270
15. Fuses, door warning lamp, luggage compartment light, sliding/tilting sunroof	271
16. Exterior mirror driver's door, mirror adjustment switch	272
17. Exterior mirror front passenger's side, tank filler flap remote release	273
18. Tailgate/boot lid release, luggage compartment light switch	274
19. Fuses, heated rear window, high level brake	275
20. Fuses, fresh air blower, fresh air/air recirculating flap	276
21. Fuses. wiper	277

22. Fuses, diagnostic connector, glove box light, socket	278
035 - Convenience system, with electric window lifter	279-293
1. Convenience system, with electric window lifter	279
2. Fuses	280
3. Fuses	281
4. Bootlid/tailgate remote control switch (driver's side), tank filler flap remote release switch (driver's side), tank filler flap release motor	282
5. Window lifter switch (driver's side), exterior mirror (driver's side), electrically adjustable and heated	283
6. Mirror adjustment switch and interior locking (driver's side)	284
7. Central locking lock unit, door warning lamp (driver's side)	285
8. Exterior mirror (front passenger's side), electrically adjustable and heated, interior locking switch	286
9. Window lifter switch, central locking lock unit, warning lamp (front passenger's side)	287
10. Interior lighting, illuminated make-up mirror, ambient temperature sensor	288
11. Reading lights, ultra-sonic sensor	289
12. Luggage compartment light, tailgate/bootlid contact switch, tailgate/bootlid release motor	290
13. Control unit with display in dash panel insert	291
14. Sliding/tilting sunroof, bonnet contact switch	292
15. Alarm horn, central locking and anti-theft alarm system aerial	293
036 - Central locking system confort characteristics	294-307
1. Central locking system confort characteristics	294
2. Fuses	295
3. Fuses	296
4. Vehicle interior lighting, illuminated vanity mirror, ambient temperature sensor	297
5. Reading lamps, ultra-sonic sensors	298
6. Exterior mirror (driver's side), electrically heated and adjustable	299
7. Exterior mirror (front passenger's side), electrically adjustable and heated	300
8. Interior locking switch (driver's side), remote release switches for tailgate/bootlid and tank filler flap	301
9. Central locking lock unit, warning lamp (driver's side)	302
10. Interior locking switch, central locking lock unit, door warning lamp (front passenger's side)	303
11. Luggage compartment light, contact switch (in tailgate), tailgate/boot lid release motor	304
12. Control unit with display in dash panel insert	305
13. Sliding/tilting sunroof, bonnet contact switch	306
14. Alarm horn, central locking and anti-theft alarm system aerial	307
037 - Adjustable rear spoiler	308-311
1. Adjustable rear spoiler	308
2. Adjustable rear spoiler control unit, rear spoiler switch	309
3. Adjustable rear spoiler control unit, fuses	310
4. Display unit control unit, adjustable rear spoiler control unit, self-dianosis connection	311
038 - Headlights with gas discharge lamps	312-316
1. Headlights with gas discharge lamps	312
2. Vehicle level sender	313
3. Headlights with left gas discharge lamp	314
4. Headlights with right gas discharge lamp	315
5. Lighting switch, fuses, control unit with display in dash panel insert	316
039 - 2.3 litre Motronic/125 kW, engine codes AQN	317-332
1. 2.3 litre Motronic/125 kW, engine codes AQN	317
2. Starter, alternator	318-319
3. Motronic control unit, ignition coils, fuses	320
4. Motronic control unit, ignition coils, accelerator pedal position sender	321
5. Motronic control unit, heater element (crankcase breather), coolant temperature sender, Hall sender, Intake manifold change-over valve, inlet camshaft timing adjustment valve	322
6. Motronic control unit, throttle valve control unit, knock sensors	323
7. Motronic control unit, engine speed sender	324
8. Motronic control unit, injectors, fuse	325
9. Motronic control unit, cruise control system switch, continued circulation of coolant pump	326
10. Motronic control unit, brake light switch, clutch pedal switch, secondary air pump motor, fuse	327-328
11. Motronic control unit, lambda probes, air mass meter, fuel pump relay, activated charcoal filter system solenoid valve	329
12. Fuel pump, coolant shortage indicator sender, fuses	330
13. Control unit with display in dash panel insert, oil pressure switch, speedometer sender, fuses	331
14. Oil level/oil temperature sender, control unit with display in dash panel insert, diagnostic connector	332
040 - Air conditioner	333-336

1. Air conditioner	333
2. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	334
3. Radiator fan control unit, air conditioner switch, air conditioner pressure switch, air conditioner shut-off thermo-switch, ambient temperature switch	335
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, continued circulation of coolant pump	336
041 - Radiator fan	337-339
1. Radiator fan	337
2. Voltage supply	338
3. Radiator fan control unit, radiator fan, continued circulation of coolant pump, thermo-switch	339
042 - Anti-locking brake system -MK60- (ABS)	340-345
1. Anti-locking brake system -MK60- (ABS)	340
2. Fuses, TCS/ESP button	341
3. Steering angle sender, ABS valves	342
4. Speed sensor, ABS valves	343
5. Lateral acceleration sender, yaw rate sender, brake pressure sender -1-, ABS valves	344
6. Handbrake warning switch, brake fluid level warning contact, brake lining/pad wear sender, control unit with display in dash panel insert	345
043 - Diagnostic connector	346-347
1. Diagnostic connector	346
2. Diagnostic connector	347
044 - 1.6 litre/75 kW Simos, engine codes AYD	348-364
1. 1.6 litre/75 kW Simos, engine codes AYD	348
2. Alternator, starter, battery fuse box	349-350
3. Current supply relay for Simos control unit	351
4. Simos control unit, throttle valve control unit, ignition system	352
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	353
6. Simos control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, intake manifold change-over valve	354
7. Simos control unit, heater element (crankcase breather)	355
8. Simos control unit, injectors	356
9. Simos control unit, angle sender for throttle valve drive, lambda probe	357
10. Simos control unit, cruise control system switch (CCS)	358
11. Simos control unit, secondary air pump motor, clutch pedal switch, cruise control system brake pedal switch, brake light switch	359
12. Simos control unit, lambda probe after catalyst, air mass meter, fuel pump relay, activated charcoal filter system solenoid valve	360
13. Fuel pump, fuel gauge sender, coolant shortage indicator sender	361
14. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	362
15. Coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp, control unit with display in dash panel insert	363
16. Electronic power control fault lamp, self-diagnosis connection, control unit with display in dash panel insert	364
045 - 1.6 litre/75 kW Simos, engine codes AYD	365-382
1. 1.6 litre/75 kW Simos, engine codes AYD	365
2. Alternator, starter, battery fuse box	366-367
3. Current supply relay for Simos control unit, fuses	368
4. Simos control unit, throttle valve control unit, ignition system	369
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	370
6. Simos control unit, hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, intake manifold change-over valve	371
7. Simos control unit, heater element (crankcase breather), secondary air pump motor, vacuum pump for brakes	372
8. Simos control unit, injectors	373
9. Simos control unit, angle sender for throttle valve drive, lambda probe	374
10. Simos control unit, cruise control system switch (CCS)	375
11. Simos control unit, clutch pedal switch, brake light switch	376-377
12. Simos control unit, lambda probe after catalyst, air mass meter, fuel pump relay, activated charcoal filter system solenoid valve	378
13. Fuel pump, fuel gauge sender, coolant shortage indicator sender	379
14. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	380

15. Coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp, control unit with display in dash panel insert	381
16. Electronic power control fault lamp, self-diagnosis connection, control unit with display in dash panel insert	382
046 - 1.9l/110 kW - Turbo diesel engine with unit injectors, engine code ATD	383-395
1. 1.9l/110 kW - Turbo diesel engine with unit injectors, engine code ATD	383
2. Alternator, starter, fuse holder on battery	384
3. Fuses, glow plugs - (engine), voltage supply relay, diesel direct injection system control unit	385
4. Kickdown switch, idling speed switch, accelerator position sender, engine speed sender, diesel direct injection system control unit	386
5. Coolant temperature sender, intake manifold pressure sender, intake manifold temperature sender, heater element for crankcase breather, diesel direct injection system control unit	387
6. Diesel direct injection system control unit, Hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, variable intake manifold change-over valve	388
7. Hall sender, unit injector valves, diesel direct injection system control unit	389
8. Air mass meter, fuel temperature sender, solenoid valves, diesel direct injection system control unit	390
9. Clutch pedal switch, cruise control system switch, diesel direct injection system control unit	391
10. Brake light switch, glow plugs, coolant, diesel direct injection system control unit	392
11. Fuses, fuel pump, coolant shortage indicator sender	393
12. Oil pressure switch, speedometer sender, oil level and oil temperature sender, fuses, control unit with display in dash panel insert	394
13. Fuel gauge, coolant temperature gauge, speedometer sender, control unit with display in dash panel insert	395
047 - 2.0 l /85 kW Motronic, engine codes AQY	396-411
1. 2.0 l /85 kW Motronic, engine codes AQY	396
2. Alternator, starter, fuse box/battery	397-398
3. Ignition transformer, fuses, Motronic control unit	399
4. Coolant temperature sender, hall sender, Motronic control unit	400
5. Throttle valve control unit, Motronic control unit	401
6. Engine speed sender, knock sensor I, knock sensor II, Motronic control unit	402
7. Cruise control system switch, Motronic control unit	403
8. Clutch pedal switch, brake light switch, Motronic control unit	404-405
9. Injectors, secondary air pump motor, Motronic control unit	406
10. Lambda probe, lambda probe II, Motronic control unit	407
11. Air mass meter, fuel shut-off control unit, activated charcoal filter system solenoid valve 1, motronic control unit	408
12. Fuses, fuel pump, coolant shortage indicator sender	409
13. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	410
14. Fuel gauge, coolant temperature gauge, speedometer, control unit with display in dash panel insert	411
048 - 1.8 l/110 kW Motronic, engine codes AVC	412-430
1. 1.8 l/110 kW Motronic, engine codes AVC	412-413
2. Alternator, starter, fuse box/battery	414-415
3. Ignition coils with output stages, Motronic control unit	416
4. Fuses, Motronic current supply relay, charge air pressure sender, hall sender, Motronic control unit	417
5. Throttle valve control unit, intake air temperature sender, coolant temperature sender, Motronic control unit	418
6. Engine speed sender, knock sensor I, knock sensor II, Motronic control unit	419
7. Fuses, air mass meter, injectors, Motronic control unit	420
8. Lambda probe, lambda probe downstream of catalytic converter, activated charcoal filter system solenoid valve 1, secondary air inlet valve, Motronic control unit	421
9. Accelerator pedal position sender, Motronic control unit	422
10. Fuel shut-off control unit, charge pressure control solenoid valve, inlet camshaft timing adjustment valve -1-, turbocharger divert air valve, diagnostic pump, Motronic control unit	423
11. Fuses, cruise control system switch, Motronic control unit	424
12. Clutch pedal switch, brake light switch, Motronic control unit	425-426
13. Vacuum pump for brakes, secondary air pump motor, secondary air pump relay, motronic control unit	427
14. Fuel pump, coolant shortage indicator sender, fuses	428
15. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	429
16. Fuel gauge, coolant temperature gauge, speedometer, control unit with display in dash panel insert	430

049 - Four-speed automatic gearbox (AG4)	431-435
1. Four-speed automatic gearbox (AG4)	431
2. Starter inhibitor and reversing light relay	432
3. Automatic gearbox control unit, multi-function switch, kick-down switch	433
4. Automatic gearbox control unit, solenoid valve, gearbox speed sender	434
5. Automatic gearbox control unit, vehicle speed sender, selector lever lock solenoid	435
050 - 2.0 l - Motronic/85 kW, engine code AZJ	436-451
1. 2.0 l - Motronic/85 kW, engine code AZJ	436
2. Alternator, starter, fuses	437-438
3. Motronic control unit, ignition transformer, fuses	439
4. Motronic control unit, Motronic current supply relay, coolant temperature sender, heater element (crankcase breather), intake manifold change-over valve	440
5. Motronic control unit, throttle valve control unit, accelerator pedal position senders, intake manifold change-over valve 2	441
6. Motronic control unit, engine speed sender, knock sensor I, knock sensor II	442
7. Motronic control unit, cruise control system switch, hall sender	443
8. Motronic control unit, clutch pedal switch, brake light switch	444-445
9. Motronic control unit, injectors, secondary air pump motor	446
10. Motronic control unit, lambda probe, lambda probes downstream of catalytic converter	447
11. Motronic control unit, air mass meter, fuel shut-off control unit, activated charcoal filter system solenoid valve 1	448
12. Fuses, fuel pump, coolant shortage indicator sender	449
13. Control unit with display in dash panel insert, oil pressure switch, speedometer sender, oil level/oil temperature sender	450
14. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer, diagnostic connector	451
051 - 1.4 l /55 kW Motronic, engine codes BCA	452-464
1. 1.4 l /55 kW Motronic, engine codes BCA	452
2. Alternator, starter, fuses	453
3. Motronic control unit, fuses, ignition coils with output stages	454
4. Motronic control unit, hall sender, ignition coils with output stages, coolant temperature sender, intake manifold temperature sender, intake manifold pressure sender	455
5. Motronic control unit, hall sender, exhaust gas recirculation valve, fuses	456
6. Motronic control unit, knock sensor, engine speed sender, injectors	457
7. Motronic control unit, throttle valve control unit	458
8. Motronic control unit, accelerator pedal position sender, lambda probe	459
9. Motronic control unit, cruise control system switch (CCS), clutch pedal switch	460
10. Motronic control unit, brake light switch, lambda probe downstream of catalytic converter, fuel pump relay, activated charcoal filter system solenoid valve, fuel shut-off control unit (crash)	461
11. Fuel pump, fuel gauge sender, coolant shortage indicator sender, heater element (crankcase breather)	462
12. Dash panel insert, oil pressure warning, oil level/oil temperature sender, speedometer sender, coolant temperature/coolant shortage warning lamp	463
13. Dash panel insert, coolant temperature gauge, fuel gauge, rev. counter, speedometer, alternator warning lamp, diagnostic connector	464
052 - 1.6 litre/75 kW Simos, engine codes AYD	465-481
1. 1.6 litre/75 kW Simos, engine codes AYD	465
2. Alternator, starter, fuses	466-467
3. Current supply relay for Simos control unit, fuses	468
4. Simos control unit, throttle valve control unit, ignition system	469
5. Simos control unit, engine speed sender, power assisted steering pressure switch, coolant temperature sender, knock sensor	470
6. Simos control unit, hall sender, exhaust gas recirculation potentiometer, exhaust gas recirculation valve, intake manifold change-over valve	471
7. Simos control unit, secondary air pump motor, vacuum pump for brakes	472
8. Simos control unit, injectors	473
9. Simos control unit, angle sender for throttle valve drive, lambda probe	474
10. Simos control unit, cruise control system switch (CCS)	475
11. Simos control unit, clutch pedal switch, brake light switch	476-477
12. Simos control unit, lambda probe after catalyst, air mass meter, fuel pump relay, activated charcoal filter system solenoid valve	478
13. Fuel pump, fuel gauge sender, heater element (crankcase breather), coolant shortage indicator sender	479
14. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	480
15. Coolant temperature gauge, fuel gauge, speedometer, alternator warning lamp, diagnostic	481

connector, control unit with display in dash panel insert	
053 - 1.9 l /66 kW turbo-diesel engine, engine codes ALH	482-493
1. 1.9 l /66 kW turbo-diesel engine, engine codes ALH	482
2. Alternator, starter, fuses	483
3. Diesel direct injection system control unit, kick-down switch, idling switch, accelerator pedal position sender, glow plugs-engine, fuse	484
4. Diesel direct injection system control unit, coolant temperature sender, air mass meter, engine speed sender, intake manifold pressure sender, intake manifold temperature sender	485
5. Diesel direct injection system control unit, needle lift sender, fuel temperature sender, modulating piston movement sender, metering adjuster	486
6. Diesel direct injection system control unit, intake manifold flap change-over valve, exhaust gas recirculation valve, charge pressure control solenoid valve, commencement of injection valve, voltage supply relay	487
7. Diesel direct injection system control unit, fuse, cruise control system switch (CCS)	488
8. Diesel direct injection system control unit, clutch pedal switch, brake light switch	489
9. Diesel direct injection system control unit, heater element (crankcase breather), coolant heater element	490
10. Fuel gauge sender, coolant shortage indicator sender, fuses	491
11. Oil pressure switch, speedometer sender, control unit with display in dash panel insert	492
12. Coolant temperature gauge, fuel gauge, speedometer, diagnostic connector, warning lamps, oil level/oil temperature sender, control unit with display in dash panel insert	493
054 - 1.8 l/110 kW Motronic, engine codes AWU	494-511
1. 1.8 l/110 kW Motronic, engine codes AWU	494
2. Alternator, starter, fuses	495-496
3. Motronic control unit, ignition coils with output stages	497
4. Motronic control unit, fuses, Motronic current supply relay, charge air pressure sender, hall sender,	498
5. Motronic control unit, throttle valve control unit, intake air temperature sender, coolant temperature sender	499
6. Motronic control unit, engine speed sender, knock sensor I, knock sensor II	500
7. Motronic control unit, fuses, air mass meter, injectors	501
8. Motronic control unit, lambda probe, lambda probe downstream of catalytic converter, activated charcoal filter system solenoid valve 1, secondary air inlet valve	502
9. Motronic control unit, accelerator pedal position senders	503
10. Motronic control unit, fuel shut-off control unit, charge pressure control solenoid valve, inlet camshaft timing adjustment valve -1-, turbocharger divert air valve, diagnostic pump	504
11. Motronic control unit, fuses, cruise control system switch	505
12. Motronic control unit, clutch pedal switch, brake light switch	506-507
13. Motronic control unit, vacuum pump for brakes, secondary air pump motor, secondary air pump relay	508
14. Fuel pump, coolant shortage indicator sender, fuses	509
15. Oil pressure switch, speedometer sender, oil level/oil temperature sender, control unit with display in dash panel insert	510
16. Fuel gauge, coolant temperature gauge, speedometer, control unit with display in dash panel insert	511
055 - 2.3 l Motronic/125 kW, engine codes AQN	512-527
1. 2.3 l Motronic/125 kW, engine codes AQN	512
2. Alternator, starter, fuses	513-514
3. Motronic control unit, ignition coils, fuses	515
4. Motronic control unit, ignition coils, accelerator pedal position sender	516
5. Motronic control unit, heater element (crankcase breather), coolant temperature sender, hall sender, Intake manifold change-over valve, inlet camshaft timing adjustment valve	517
6. Motronic control unit, throttle valve control unit, knock sensors	518
7. Motronic control unit, engine speed sender	519
8. Motronic control unit, injectors, fuse	520
9. Motronic control unit, cruise control system switch, continued circulation of coolant pump	521
10. Motronic control unit, brake light switch, clutch pedal switch, secondary air pump motor, fuse	522-523
11. Motronic control unit, lambda probes, air mass meter, fuel pump relay, activated charcoal filter system solenoid valve	524
12. Fuel pump, coolant shortage indicator sender, fuses	525
13. Control unit with display in dash panel insert, oil pressure switch, speedometer sender, fuses	526
14. Oil level/oil temperature sender, control unit with display in dash panel insert, diagnostic connector	527
056 - Parking aid	528-530
1. Parking aid	528
2. Parking aid control unit. reversind light switch	529

3. Parking aid control unit, rear parking aid sender	530
057 - Automatic anti-dazzle interior mirror, rain sensor	531-534
1. Automatic anti-dazzle interior mirror, rain sensor	531
2. Interior light front, automatic anti-dazzle interior mirror	532
3. Automatic intermittent wash/wipe relay, intermittent wiper control, rain sensor	533
4. Automatic intermittent wash/wipe relay, intermittent wiper switch, windscreen and rear window washer pump, windscreen wiper motor	534
058 - Air conditioner (radiator fan, 2-speed, 8Z5/8Z7)	535-540
1. Air conditioner (radiator fan, 2-speed, 8Z5/8Z7)	535-536
2. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	537
3. Radiator fan control unit, air conditioner switch, high pressure sender, engine control units	538
4. Radiator fan control unit, radiator fan, air conditioner system magnetic coupling, continued coolant circulation pump	539
5. Radiator fan control unit, radiator fan thermo-switch	540
059 - Air conditioner (radiator fan, 3-speed)	541-545
1. Air conditioner (radiator fan, 3-speed)	541
2. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	542
3. Radiator fan control unit, air conditioner switch, air conditioner pressure switch, air conditioner shut-off thermo-switch, ambient temperature switch	543
4. Radiator fan control unit, radiator fan, air conditioning system magnetic coupling, radiator fan thermo-switch, third speed, continued coolant circulation pump	544
5. Radiator fan control unit, radiator fan thermo-switch	545
060 - Radiator fan, 2-speed	546-547
1. Radiator fan, 2-speed	546
2. Radiator fan, 2 speed	547
061 - Radiator fan, 2-speed	548-550
1. Radiator fan, 2-speed	548-549
2. Radiator fan, 2 speed	550
062 - Radiator fan, 3-speed	551-554
1. Radiator fan, 3-speed	551-552
2. Radiator fan control unit, radiator fan thermo-switch	553
3. Radiator fan control unit, radiator fan, radiator fan thermo-switch, third speed, radiator fan 3rd speed relay, continued coolant circulation pump	554
063 - Radiator fan, 2-speed	555-557
1. Radiator fan, 2-speed	555
2. Radiator fan control unit, radiator fan thermo-switch	556
3. Radiator fan control unit, radiator fan, continued coolant circulation pump	557
064 - Trailer	558-561
1. Trailer	558
2. Reversing light left, tail light left, brake lights, rear fog light	559
3. Trailer socket, rear fog light switch-off	560
4. Tail light left, brake light, reversing light right, trailer operation warning lamp	561
065 - Basic equipment, left-hand drive	562-585
1. Basic equipment, left-hand drive	562-563
2. Fuses, battery, ignition/starter switch, X contact relief relay	564
3. Fuses, immobilizer reading coil, dash panel insert	565
4. Fuses, speedometer sender, dash panel insert	566
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	567
6. Lighting switch	568
7. Hazard warning light switch, column switch trim, bonnet contact switch	569
8. Fuses, front lighting, front turn signals	570
9. Headlight range control, illumination regulator, horn plate	571
10. Illumination rear, rear turn signals, rear fog light bulb	572-573
11. Illumination rear, connection for radio	574
12. Fuses, cigarette lighter, socket	575
13. Fuses, interior light, front, ambient temperature sensor	576
14. Rear reading lights, illumination for vanity mirrors	577
15. Fuses, door warning lamps, luggage compartment light, sliding/tilting sunroof	578
16. Exterior mirror driver's door, mirror adjustment switch	579
17. Exterior mirror, front passenger's side, tank filler flap remote release	580
18. Tailgate/boot lid release, luggage compartment light switch	581
19. Fuses, heated rear window, high level brake light	582
20. Fuses, fresh air blower, fresh air/air recirculating flap	583
21. Fuses. windscreen wiper	584

22. Fuses, diagnostic connector, glove box light, socket	585
066 - Convenience system with window lifter, left-hand drive	586-601
1. Convenience system with window lifter, left-hand drive	586-587
2. Fuses	588
3. Fuses	589
4. Bootlid/tailgate remote control switch (driver's side), tank filler flap remote release switch (driver's side), tank filler flap release motor	590
5. Window lifter switch (driver's side), exterior mirror (driver's side), electrically adjustable and heated	591
6. Mirror adjustment switch and interior locking (driver's side)	592
7. Central locking lock unit, door warning lamp (driver's side)	593
8. Exterior mirror (front passenger's side), electrically adjustable and heated, interior locking switch	594
9. Window lifter switch, central locking lock unit, warning lamp (front passenger's side)	595
10. Interior lighting, illuminated vanity mirror, driver's side, ambient temperature sensor	596
11. Reading lights, ultra-sonic sensor, illuminated vanity mirror, front passenger's side, interior monitor switch	597
12. Luggage compartment light, tailgate/bootlid contact switch, tailgate/bootlid release motor	598
13. Control unit with display in dash panel insert	599
14. Sliding/tilting sunroof, bonnet contact switch	600
15. Alarm horn, central locking and anti-theft alarm system aerial	601
067 - Central locking (with convenience features, left-hand drive)	602-615
1. Central locking (with convenience features, left-hand drive)	602
2. Fuses	603
3. Fuses	604
4. Interior lighting, illuminated vanity mirror, ambient temperature sensor	605
5. Reading lights, ultra-sonic sensors, illumination for vanity mirrors	606
6. Mirror adjustment motor, heated exterior mirror, driver's side	607
7. Mirror adjustment motor, heated exterior mirror, front passenger's side	608
8. Interior locking switch (driver's side), remote release switches for tailgate/bootlid and tank filler flap	609
9. Central locking lock unit, door warning lamp (driver's side)	610
10. Interior locking switch, central locking lock unit, warning lamp (front passenger's side)	611
11. Luggage compartment light, tailgate/boot lid contact switch, tailgate/boot lid release motor	612
12. Control unit with display in dash panel insert	613
13. Sliding/tilting sunroof, bonnet contact switch	614
14. Alarm horn, central locking and anti-theft alarm system aerial	615
068 - Headlights without headlight range control	616-620
1. Headlights without headlight range control	616
2. Lighting switch, fog light relay	617
3. Fuses, hazard warning light switch, steering column switch, headlight dipper/flasher switch	618
4. Fuses, front lighting, front turn signals	619
5. Fuses, front lighting, front turn signals	620
069 - Headlights with gas discharge lamps	621-627
1. Headlights with gas discharge lamps	621
2. Vehicle level sender	622
3. Headlights with left gas discharge lamp	623
4. Headlights with right gas discharge lamp	624
5. Lighting switch, fuses, control unit with display in dash panel insert	625
6. Lighting switch, fuses, control unit with display in dash panel insert, headlight dipper/flasher relay	626
7. Fog lights	627
070 - Anti-lock brake system (ABS) MK60	628-634
1. Anti-lock brake system (ABS) MK60	628
2. Fuses, TCS/ESP button	629
3. Steering angle sender, ABS valves	630
4. Speed sensor, ABS valves	631
5. Lateral acceleration sender, yaw rate sender, brake pressure sender -1-, ABS valves	632
6. Control unit with display in dash panel insert, handbrake warning switch, brake fluid level warning contact	633
7. Control unit with display in dash panel insert, brake lining/pad wear sender, data bus diagnostic interface	634
071 - Basic equipment, right-hand	635-658
1. Basic equipment, right-hand	635-636
2. Fuses, battery, ignition/starter switch, X contact relief relay	637
3. Fuses. immobilizer reading coil. dash panel insert	638

4. Fuses, speedometer sender, dash panel insert	639
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	640
6. Light switch	641
7. Hazard warning light switch, steering column switch trim, bonnet contact switch, headlight dipper/flasher relay	642
8. Fuses, front lighting, front turn signals	643
9. Headlight range control, illumination regulator, horn plate	644
10. Illumination rear, rear turn signals, rear fog light bulb	645-646
11. Illumination rear, connection for radio	647
12. Fuses, cigarette lighter, socket, cigarette lighter relay	648
13. Fuses, interior light, front, ambient temperature sensor	649
14. Rear reading lights, illumination for vanity mirrors	650
15. Fuses, door warning lamps, luggage compartment light, sliding/tilting sunroof	651
16. Exterior mirror driver's door, mirror adjustment switch	652
17. Exterior mirror, front passenger's side, tank filler flap remote release	653
18. Tailgate/boot lid release, luggage compartment light switch	654
19. Fuses, heated rear window, high level brake light	655
20. Fuses, fresh air blower, fresh air/air recirculating flap	656
21. Fuses, windscreen wiper	657
22. Fuses, diagnostic connector, glove box light, socket	658
072 - Central locking with convenience features, right-hand drive	659-672
1. Central locking with convenience features, right-hand drive	659
2. Fuses	660
3. Fuses	661
4. Interior lighting, illuminated vanity mirror, ambient temperature sensor	662
5. Reading lights, ultra-sonic sensors, illumination for vanity mirrors	663
6. Mirror adjustment motor, heated exterior mirror, driver's side	664
7. Mirror adjustment motor, heated exterior mirror, front passenger's side	665
8. Interior locking switch (driver's side), remote release switches for tailgate/bootlid and tank filler flap	666
9. Central locking lock unit, door warning lamp (driver's side)	667
10. Interior locking switch, central locking lock unit, warning lamp (front passenger's side)	668
11. Luggage compartment light, tailgate/bootlid contact switch, tailgate/bootlid release motor	669
12. Control unit with display in dash panel insert	670
13. Sliding/tilting sunroof, bonnet contact switch	671
14. Alarm horn, central locking and anti-theft alarm system aerial	672
073 - Convenience system with window lifter, right-hand drive	673-688
1. Convenience system with window lifter, right-hand drive	673-674
2. Fuses	675
3. Fuses	676
4. Bootlid/tailgate remote control switch (driver's side), tank filler flap remote release switch (driver's side), tank filler flap release motor	677
5. Window lifter switch (driver's side), exterior mirror (driver's side), electrically adjustable and heated	678
6. Mirror adjustment switch and interior locking (driver's side)	679
7. Central locking lock unit, door warning lamp (driver's side)	680
8. Exterior mirror (front passenger's side), electrically adjustable and heated, interior locking switch	681
9. Window lifter switch, central locking lock unit, warning lamp (front passenger's side)	682
10. Interior lighting, illuminated vanity mirror, driver's side, ambient temperature sensor	683
11. Reading lights, ultra-sonic sensor, illuminated vanity mirror, front passenger's side, interior monitor switch	684
12. Luggage compartment light, tailgate/bootlid contact switch, tailgate/bootlid release motor	685
13. Control unit with display in dash panel insert	686
14. Sliding/tilting sunroof, bonnet contact switch	687
15. Alarm horn, central locking and anti-theft alarm system aerial	688
074 - Daytime driving lights without headlight range control	689-695
1. Daytime driving lights without headlight range control	689
2. Dash panel insert, turn signal switch, headlight dipper/flasher switch, parking light switch	690
3. Front left bulb, headlight dipper/flasher switch	691
4. Bulb front right, fog light relay, fog light bulb left and right	692
5. Lighting switch, rear fog light switch, switches and instruments, lighting control	693
6. Brake light left, rear fog light, reversing light right, reversing light left, tail light left, turn signal rear left	694
7. Brake lights, tail light right, number plate light, rear right turn signal	695
075 - Daytime driving lights with headlight range control (HRC)	696-703

1. Day driving light with headlight range control (HRC)	696
2. Dash panel insert, turn signal switch, headlight dipper/flasher switch, parking light switch	697
3. Front left bulbs, headlight dipper and flash relay	698
4. Front right bulb, fog light relay, left and right fog light bulb	699
5. Light switch, rear fog light switch, illumination regulators - switches and instruments	700
6. Brake light, rear fog light, right reversing light, left reversing light, left tail light, rear left turn signal	701
7. Brake light, right tail light, number plate light, rear right turn signal	702
8. Headlight range control, illumination regulators	703
076 - Airbags system	704-707
1. Airbags system	704
2. Airbag control unit, airbag coil connector, airbag igniter front, side airbag crash sensors	705
3. Airbag control unit, side airbag igniter, belt tensioner igniter	706
4. Airbag control unit, airbag warning lamp, self-diagnosis connection	707
077 - Rear spoiler, variable	708-711
1. Rear spoiler, variable	708
2. Adjustable rear spoiler control unit, rear spoiler switch	709
3. Adjustable rear spoiler control unit, fuse	710
4. Control unit with display for radio and navigation, adjustable rear spoiler control unit, self-diagnosis connection	711
078 - Four-speed automatic gearbox (AG4)	712-716
1. Four-speed automatic gearbox (AG4)	712
2. Starter inhibitor and reversing light relay	713
3. Automatic gearbox control unit, multi-function switch, kick-down switch	714
4. Automatic gearbox control unit, solenoid valve, gearbox speed sender	715
5. Automatic gearbox control unit, vehicle speed sender, selector lever lock solenoid	716
079 - Heated front seats	717-719
1. Heated front seats	717
2. Heated driver's seat control unit, temperature sensor, heated driver's seat, heated driver's seat backrest	718
3. Heated front passenger's seat control unit, temperature sensor, heated front passenger's seat, heated front passenger's seat backrest	719
080 - Heated washer jets	720-721
1. Heated washer jets	720
2. Heated washer jets	721
081 - Radio systems	722-726
1. Radio systems	722
2. Radio, CD changer	723
3. Radio, front loudspeakers	724
4. Radio, rear loudspeakers	725
5. Radio, aerial, fuses	726
082 - Telephone	727-729
1. Telephone	727
2. Telephone microphone, mobile telephone, earth connection	728
3. Aerial for radio, telephone, fuses	729
083 - Telematics	730-733
1. Telematics	730
2. Fuses, aerial	731
3. Telematics operating unit	732
4. Telephone microphone	733
201 - -Fitting Locations: Relay positions and fuse locations	734-738
1. -Fitting Locations: Relay positions and fuse locations	734
2. Relay positions on relay plate, Fuse positions on relay plate, Relay locations on the 13 position additional relay carrier, left-hand drive	735
3. Fuse locations on the 13 position additional relay carrier, left-hand drive, Relay locations on the 13 position additional relay carrier, right-hand drive, Fuse locations on the 13 position additional relay carrier, right-hand drive	736
4. Fuse locations in fuse holder on left of dash panel	737
5. Fuse locations on battery main fuse holder	738
202 - -Fitting Locations: Wiring harness coupling stations	739-741
1. -Fitting Locations: Wiring harness coupling stations	739
2. Coupling station in protective housing in plenum chamber	740
3. Coupling station on left and right A pillars	741
203 - -Fitting Locations: Control units and relays	742-746
1. -Fitting Locations: Control units and relays	742
2. Control unit for ABS/ABS with EDL	743

3. Central control unit for convenience system, Control unit for sunroof	744
4. Door control units, driver's and front passengers	745
5. Control unit for radiator fan, 2-speed with fan run-on	746
204 - -Fitting Locations: Multi-pin connections	747-754
1. -Fitting Locations: Multi-pin connections	747
2. 10-pin multi-pin connector, in cable channel left in engine compartment, 3-pin multi-pin connector, on automatic gearbox, 10-pin multi-pin connector, on left and right headlight	748
3. 12-pin multi-pin connector, on automatic gearbox, 8-pin multi-pin connector, on automatic gearbox	749
4. 18-pin multi-pin connector, left behind dash panel, 6-pin multi-pin connector, left behind dash panel	750
5. 10-pin multi-pin connector, coupling station on left and right lower A pillar, 10-pin multi-pin connector, coupling station on left and right B pillar, 10-pin multi-pin connector, coupling station in protective housing left in plenum chamber	751
6. 6-pin multi-pin connector, in front interior light, 5-pin multi-pin connector, in front passenger door, 16-pin multi-pin connector, centre in dash panel	752
7. 6-pin multi-pin connector, coupling station left in plenum chamber	753
8. 5-pin multi-pin connector, in drivers door	754
205 - -Fitting Locations: Relay positions and fuse locations	755-760
1. -Fitting Locations: Relay positions and fuse locations	755
2. Fuse locations on battery fuse holder, relay positions and fuse locations on micro-central electrics	756
3. Relay positions and fuse locations on 13 position additional relay carrier, above the micro-central electrics, left-hand drive vehicles	757
4. Relay positions and fuse locations on 13 position additional relay carrier, above the micro-central electrics, right-hand drive vehicles	758
5. Fuse locations in fuse holder on left of dash panel	759
6. Fuse locations in fuse holder on left of dash panel	760
206 - -Fitting Locations: Relay positions and fuse locations	761-766
1. -Fitting Locations: Relay positions and fuse locations	761
2. Fuse locations on battery fuse holder, relay positions and fuse locations on micro-central electrics	762
3. Relay positions and fuse locations on 13 position additional relay carrier, above the micro-central electrics, left-hand drive vehicles	763
4. Relay positions and fuse locations on 13 position additional relay carrier, above the micro-central electrics, right-hand drive vehicles	764
5. Fuse locations in fuse holder on left of dash panel	765
6. Fuse locations in fuse holder on left of dash panel	766
401 - -Fault Finding Programme: Battery discharges	767
1. Test perquisites	767
402 - -Fault Finding Programme: Starter motor does not turn	768
1. Test perquisites	768
403 - -Fault Finding Programme: Starter turns too slowly and does not crank the engine	769
1. Test perquisites	769
404 - -Fault Finding Programme: Alternator warning lamp does not go out as speed increases	770
1. Alternator warning lamp does not go out as speed increases	770
405 - -Fault Finding Programme: Alternator warning lamp does not light up when ignition is switched on	771
1. Test perquisites	771
406 - -Fault Finding Programme: Checking alternator and voltage regulator	772-773
1. Contents, Checking function of freewheel coupling in ribbed belt pulley (diesel engines only)	772
2. Checking alternator and voltage regulator with V.A.G 1715, Test perquisites	773
407 - -Fault Finding Programme: Checking dual tone horn	774-775
1. Test perquisites	774
2. -Fault Finding Programme: Checking dual tone horn	775
408 - -Fault Finding Programme: Checking fog lights	776-777
1. Test perquisites	776
2. -Fault Finding Programme: Checking fog lights	777
409 - -Fault Finding Programme: Checking turn signals and hazard warning system	778-784
1. Test perquisites	778
2. -Fault Finding Programme: Checking turn signals and hazard warning system	779
3. -Fault Finding Programme: Checking turn signals and hazard warning system	780
4. -Fault Finding Programme: Checking turn signals and hazard warning system	781
5. -Fault Finding Programme: Checking turn signals and hazard warning system	782
6. -Fault Finding Programme: Checking turn signals and hazard warning system	783
7. -Fault Finding Programme: Checking turn signals and hazard warning system	784
410 - -Fault Finding Programme: Checking additional heater elements (dual plus) (for vehicles with	785-791

a manual gearbox and engine code ALH)	
1. Function, Test prerequisites	785
2. -Fault Finding Programme: Checking additional heater elements (glow plugs) (for vehicles with a manual gearbox and engine code ALH)	786
3. -Fault Finding Programme: Checking additional heater elements (glow plugs) (for vehicles with a manual gearbox and engine code ALH)	787
4. -Fault Finding Programme: Checking additional heater elements (glow plugs) (for vehicles with a manual gearbox and engine code ALH)	788
5. -Fault Finding Programme: Checking additional heater elements (glow plugs) (for vehicles with a manual gearbox and engine code ALH)	789
6. -Fault Finding Programme: Checking additional heater elements (glow plugs) (for vehicles with a manual gearbox and engine code ALH)	790
7. -Fault Finding Programme: Checking additional heater elements (glow plugs) (for vehicles with a manual gearbox and engine code ALH)	791
411 - -Fault Finding Programme: Checking heated front seats	792-799
1. Contents, Test prerequisites	792
2. Left seat heating not functioning or not functioning correctly	793
3. -Fault Finding Programme: Checking heated front seats	794
4. -Fault Finding Programme: Checking heated front seats	795
5. Right seat heating not functioning or not functioning correctly	796
6. -Fault Finding Programme: Checking heated front seats	797
7. -Fault Finding Programme: Checking heated front seats	798
8. -Fault Finding Programme: Checking heated front seats	799
412 - -Fault Finding Programme: Checking windscreen wash/wipe system	800-804
1. Contents, Test prerequisites	800
2. Checking windscreen wipe system	801
3. -Fault Finding Programme: Checking windscreen wash/wipe system	802
4. -Fault Finding Programme: Checking windscreen wash/wipe system	803
5. Checking windscreen/rear window washer system	804
413 - -Fault Finding Programme: Checking radio system	805-811
1. Contents	805
2. Radio not functioning, FM (UKW) reception distorted, poor or intermittent	806
3. One or more loudspeakers not functioning	807
4. GALA (Speed dependant volume control) not functioning	808
5. Checking roof aerial	809
6. Cassette reproduction dull or distorted	810
7. Auto-reverse continually switches back and forth or switches too early	811