



## Contents

<b>68 - Interior equipment</b> .....	<b>1</b>
<b>1 Interior mirror</b> .....	<b>1</b>
1.1 Interior mirror .....	1
1.2 Removing and installing interior mirror .....	1
1.3 Bonding retaining plate for interior mirror .....	2
<b>2 Compartments, covers and trimming</b> .....	<b>3</b>
2.1 Compartments, covers and trimming .....	3
2.2 Removing and installing centre console .....	3
2.3 Removing trim below centre of dash panel .....	15
2.4 Removing glove box .....	16
2.5 Removing drivers side footwell cover .....	17
2.6 Removing trim under steering column .....	17
2.7 Removing sun visor .....	19
2.8 Removing plenum chamber inner cover .....	19
<b>3 Grab handle</b> .....	<b>21</b>
3.1 Grab handle .....	21
3.2 Removing grab handle (dash panel) .....	21
3.3 Removing hand hold (roof) .....	21
3.4 Removing hand hold straps .....	22
<b>4 Sill panel trims</b> .....	<b>23</b>
4.1 Sill panel trims .....	23
4.2 Removing and installing sill panel trim .....	23
<b>5 Foot support</b> .....	<b>25</b>
5.1 Foot support .....	25
5.2 Removing and installing foot support on driver's side .....	25
5.3 Removing and installing foot support on front passenger's side .....	25
<b>6 Rear seat backrest reinforcement</b> .....	<b>26</b>
6.1 Rear seat backrest reinforcement .....	26
6.2 Removing rear seat backrest reinforcement .....	26
<b>69 - Passenger protection</b> .....	<b>27</b>
<b>1 Seat belts</b> .....	<b>27</b>
1.1 Seat belts .....	27
1.2 Safety regulations for belt tensioners .....	27
1.3 Front seat belt with belt tensioner - Assembly overview .....	28
1.4 Removing and installing rear seat belts .....	32
<b>2 Inspecting seat belts</b> .....	<b>33</b>
2.1 Inspecting seat belts .....	33
<b>3 Airbag</b> .....	<b>37</b>
3.1 Airbag .....	37
3.2 Tools .....	37
3.3 Locations overview .....	38
3.4 Safety precautions when working on the airbag .....	39
3.5 Replacing airbag units following an accident .....	40
3.6 Removing and installing driver's airbag unit .....	41
3.7 Steering wheel - Assembly overview .....	45
3.8 Removing steering wheel .....	46
3.9 Removing and installing coil connector with slip ring .....	46
3.10 Removing and installing front passenger's airbag unit .....	49
3.11 Removing and installing airbag control unit (J 234) .....	51
3.12 Removing and installing driver's/front passenger's side airbag .....	53
3.13 Removing and installing sensor for driver's/front passenger's side airbag .....	56



<b>70 - Trim/Insulation</b> . . . . .	<b>58</b>
<b>1 Dash panel</b> . . . . .	<b>58</b>
1.1 Dash panel . . . . .	58
1.2 Removing and installing dash panel . . . . .	58
<b>2 Door trims</b> . . . . .	<b>67</b>
2.1 Door trims . . . . .	67
2.2 Tools . . . . .	67
2.3 Removing and installing front door trim panel . . . . .	68
<b>3 Pillars and side trim panels</b> . . . . .	<b>70</b>
3.1 Pillars and side trim panels . . . . .	70
3.2 Removing and installing A-pillar upper trim . . . . .	71
3.3 Removing and installing A-pillar lower trim . . . . .	72
3.4 Removing and installing B-pillar upper trim . . . . .	74
3.5 Removing and installing C-pillar trim . . . . .	76
3.6 Removing and installing side panel trim . . . . .	78
<b>4 Load and luggage compartment trim panels</b> . . . . .	<b>80</b>
4.1 Load and luggage compartment trim panels . . . . .	80
4.2 Removing and installing luggage compartment side panel trim . . . . .	80
4.3 Removing and installing load sill cover . . . . .	82
<b>5 Tailgate trim panels</b> . . . . .	<b>84</b>
5.1 Tailgate trim panels . . . . .	84
5.2 Removing and installing tailgate upper trim . . . . .	84
5.3 Removing and installing tailgate lower trim . . . . .	86
<b>6 Roof trims</b> . . . . .	<b>88</b>
6.1 Roof trims . . . . .	88
6.2 Tools . . . . .	88
6.3 Removing and installing moulded headliner . . . . .	89
<b>72 - Seat frames</b> . . . . .	<b>97</b>
<b>1 Front seats</b> . . . . .	<b>97</b>
1.1 Front seats . . . . .	97
1.2 Removing and installing front seat . . . . .	97
1.3 Removing and installing bucket seat . . . . .	98
1.4 Adjusting seat height . . . . .	100
<b>2 Rear seats</b> . . . . .	<b>100</b>
2.1 Rear seats . . . . .	100
2.2 Removing and installing rear seat cushion (single unit) . . . . .	101
2.3 Removing and installing backrest . . . . .	102
<b>74 - Seats - Upholstery, Covers</b> . . . . .	<b>103</b>
<b>1 Front seat cover and padding</b> . . . . .	<b>103</b>
1.1 Front seat cover and padding . . . . .	103
1.2 Removing and installing front seat cover and padding . . . . .	103
<b>2 Rear seat cover and padding</b> . . . . .	<b>104</b>
2.1 Rear seat cover and padding . . . . .	104
2.2 Tools . . . . .	104
2.3 Removing and installing seat cushion cover and padding . . . . .	105
2.4 Removing and installing backrest cover and padding (single unit backrest or right-hand backrest) . . . . .	109