



Contents

50 - Body front	1
1 Body front	1
1.1 Body front	1
1.2 Tools	1
1.3 Lock carrier - Assembly overview	2
1.4 Lock carrier - service position	5
1.5 Front part - Assembly overview	6
1.6 Front wing - Assembly overview	9
1.7 Noise insulation - Assembly overview	12
1.8 Removing and installing plenum chamber closing cover	14
53 - Body rear	15
1 Body rear	15
1.1 Body rear	15
1.2 Rear part - Assembly overview	15
1.3 Rear wing - Assembly overview	18
55 - Bonnet, Flaps	22
1 Bonnet	22
1.1 Bonnet	22
1.2 Assembly overview	23
1.3 Adjusting bonnet	25
1.4 Removing and installing bowden cable	25
1.5 Removing and installing release lever	27
1.6 Removing and installing bonnet lock	28
2 Tailgate	30
2.1 Tailgate	30
2.2 Assembly overview	30
2.3 Removing gas strut	32
2.4 Releasing gas from strut	32
2.5 Adjusting boot lid/tailgate	33
2.6 Removing and adjusting tailgate lock	36
2.7 Removing and installing tailgate remote release motor carrier	39
3 Tank flap unit	40
3.1 Tank flap unit	40
3.2 Removing and installing fuel tank filler flap unit	40
3.3 Removing and installing fuel tank filler flap release motor	41
57 - Front doors/Door components/Central locking system	43
1 Front doors	43
1.1 Front doors	43
1.2 Tools	43
1.3 Assembly overview	44
1.4 Removing and installing door	47
1.5 Adjusting door	51
1.6 Door handle and lock - Assembly overview	53
1.7 Removing lock cylinder housing	55
1.8 Installing lock cylinder housing	56
1.9 Removing and installing door handle	56
1.10 Removing and installing door lock	57
1.11 Removing and installing bearing bracket	63
1.12 Removing and installing locking knob for release rod	64
2 Central locking	66
2.1 Central locking	66



2.2	Assembly overview for central locking and convenience systems	67
63	- Bumpers	72
1	Front bumper	72
1.1	Front bumper	72
1.2	Assembly overview	72
2	Rear bumper	76
2.1	Rear bumper	76
2.2	Assembly overview	76
2.3	Removing and installing diffuser	79
64	- Glazing	80
1	Flush bonded windows	80
1.1	Flush bonded windows	80
1.2	Tools	80
1.3	Materials	81
1.4	Windscreen - Assembly overview	82
1.5	Removing windscreen	84
1.6	Installing windscreen	87
1.7	Removing and installing rain sensor	87
1.8	Side window - Assembly overview	89
1.9	Removing undamaged side window	90
1.10	Removing broken side window	92
1.11	Installing side window	92
1.12	Rear window - Assembly overview	93
1.13	Removing undamaged rear window	94
1.14	Removing broken rear window	96
1.15	Installing rear window	97
1.16	Preparing old undamaged window for glazing	97
1.17	Preparing new window for glazing	98
1.18	Preparing body flange for glazing	99
1.19	Installation instructions	100
1.20	Minimum curing time	101
1.21	Touching up paint damage	101
1.22	Cleaning off surplus adhesive sealing material	101
2	Door windows	101
2.1	Door windows	101
2.2	Tools	102
2.3	Front door window - Assembly overview	103
2.4	Removing front door window	106
2.5	Adjusting door window	107
2.6	Removing and installing assembly carrier	107
2.7	Electric window lifter with convenience system (automatic opening and closing) with excess force limitation (roll-back)	112
2.8	Overriding difficulties in window upper area with force limitation system	114
66	- Exterior equipment	115
1	Removing and installing wheel housing liner	115
1.1	Removing and installing wheel housing liner	115
1.2	Front wheel housing liner	115
1.3	Rear wheel housing liner	116
2	Rear view mirror	117
2.1	Rear view mirror	117
2.2	Tools	117
2.3	Removing and installing mirror glass	117
2.4	Removing mirror housing	118
2.5	Removing and installing exterior mirror	119



3	Roof mouldings	122
3.1	Roof mouldings	122
3.2	Roof moulding	122
4	Spoiler	124
4.1	Spoiler	124
4.2	Removing and installing roof spoiler	124
4.3	Removing and installing rear spoiler	126
5	Sill trim	128
5.1	Sill trim	128
5.2	Replacing sill trim	128