



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, assembly allocation, ratios, capacities	2
2 Transmission layout	5
2.1 Transmission layout	5
2.2 Transmission layout	5
3 Calculation of overall gear ratio "i"	8
3.1 Calculation of overall gear ratio "i"	8
3.2 Notes on brake and performance tests and towing	8
4 General repair instructions	8
4.1 General repair instructions	8
30 - Clutch	11
1 Servicing clutch control	11
1.1 Servicing clutch control	11
1.2 Assembly overview - Pedal cluster	12
1.3 Removing and installing over-centre spring	15
1.4 Removing and installing clutch pedal	17
1.5 Assembly overview - Hydraulic system	19
1.6 Removing and installing master cylinder	22
1.7 Bleeding clutch system	27
2 Servicing clutch release mechanism	27
2.1 Servicing clutch release mechanism	27
34 - Controls, Housing	30
1 Servicing shift mechanism	30
1.1 Servicing shift mechanism	30
1.2 Installation position of shift mechanism	30
1.3 Removing and installing gear stick knob and cover	32
1.4 Servicing gear stick and gear stick housing	33
1.5 Removing and installing selector cables - Exploded view	38
1.6 Removing and installing shift mechanism	41
1.7 Adjusting shift mechanism	45
2 Removing and installing gearbox	48
2.1 Removing and installing gearbox	48
2.2 Removing and installing gearbox (vehicles with 6-cylinder engine)	48
3 Removing and installing bevel box	68
3.1 Removing and installing bevel box	68
3.2 Removing and installing bevel box (vehicles with a 5 or 6-cylinder engine)	69
4 Checking oil in manual gearbox with bevel box	72
4.1 Checking oil in manual gearbox with bevel box	72
5 Dismantling and assembling gearbox	74
5.1 Dismantling and assembling gearbox	74
5.2 Overview	74
5.3 Assembly overview	77
5.4 Removing and installing gearbox housing and selector mechanism	78
5.5 Removing and installing input shaft, output shafts (pinion shafts), differential, bevel box and selector rods	81
5.6 Assembly sequence	87
6 Servicing gearbox housing	96
6.1 Servicing gearbox housing	96



7	Servicing clutch housing	105
7.1	Servicing clutch housing	105
8	Dismantling and assembling gearbox selector mechanism	112
8.1	Dismantling and assembling gearbox selector mechanism	112
9	Dismantling and assembling selector forks	116
9.1	Dismantling and assembling selector forks	116
35 - Gears, Shafts		119
1	Dismantling and assembling input shaft	119
1.1	Dismantling and assembling input shaft	119
2	Adjusting input shaft	130
2.1	Adjusting input shaft	130
3	Dismantling and assembling output shaft, 1st-4th gear	134
3.1	Dismantling and assembling output shaft, 1st-4th gear	134
4	Adjusting output shaft for 1st-4th gears	155
4.1	Adjusting output shaft for 1st-4th gears	155
5	Dismantling and assembling output shaft for 5th, 6th and reverse gear	160
5.1	Dismantling and assembling output shaft for 5th, 6th and reverse gear	160