



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Identification markings for rear final drive | 1 |
| 1.1 Identification markings for rear final drive | 1 |
| 1.2 Code letters, assignment of mechanical units, transmission ratios, capacities - rear final drive | 2 |
| 1.3 Code letters, assignment of mechanical units, transmission ratios, capacities - manual gearbox | 2 |
| 2 Transmission layout | 4 |
| 2.1 Transmission layout | 4 |
| 3 General repair instructions | 7 |
| 3.1 General repair instructions | 7 |
| 01 - Self-diagnosis, Electrical check | 9 |
| 1 Self-diagnosis, electrical check | 9 |
| 1.1 Self-diagnosis, electrical check | 9 |
| 1.2 Safety precautions | 9 |
| 1.3 Function of self-diagnosis | 9 |
| 1.4 Self-diagnosis technical data | 10 |
| 1.5 Fault finding with fault reader V.A.G 1551 or with tester VAS 5051 on "Haldex clutch" (guide) | 11 |
| 2 Electric/electronic components and fitting locations | 12 |
| 2.1 Electric/electronic components and fitting locations | 12 |
| 2.2 Removing and installing four-wheel drive control unit -J492 | 17 |
| 2.3 Removing and installing pump for Haldex clutch -V181 | 18 |
| 3 Performing the self-diagnosis | 20 |
| 3.1 Performing the self-diagnosis | 20 |
| 3.2 Self-diagnosis test prerequisites | 21 |
| 3.3 Connecting fault reader | 21 |
| 3.4 Overview of function selection | 24 |
| 3.5 Interrogating fault memory | 24 |
| 3.6 Automatic test sequence | 25 |
| 3.7 Fault table | 25 |
| 3.8 Erasing fault memory, ending output | 27 |
| 3.9 Final control diagnosis | 28 |
| 3.10 Reading measured value block | 30 |
| 3.11 Test table with measured values | 31 |
| 4 Electrical test of Haldex clutch | 32 |
| 4.1 Electrical test of Haldex clutch | 32 |
| 39 - Final drive, Differential rear | 39 |
| 1 Replacing needle bearing (polygon bearing) for output shaft/drive flange on right-hand side | 39 |
| 1.1 Replacing needle bearing (polygon bearing) for output shaft/drive flange on right-hand side | 39 |
| 2 Removing and installing propshaft | 44 |
| 2.1 Removing and installing propshaft | 44 |
| 2.2 Removing and installing front disc coupling | 52 |
| 2.3 Removing and installing rear disc coupling | 56 |
| 3 Servicing propshaft | 63 |
| 3.1 Servicing propshaft | 63 |
| 4 Checking Haldex clutch for function | 72 |
| 4.1 Checking Haldex clutch for function | 72 |
| 5 Replacing sealing ring for prop shaft flange at rear final drive (final drive removed) | 73 |



| | | |
|-----------|--|-----------|
| 5.1 | Replacing sealing ring for prop shaft flange at rear final drive (final drive removed) | 73 |
| 6 | Replacing sealing rings for flange shaft or drive flange | 76 |
| 6.1 | Replacing sealing rings for flange shaft or drive flange | 76 |
| 6.2 | Replacing seal for left drive flange | 76 |
| 6.3 | Replacing seal for right flange shaft | 78 |
| 7 | O-rings in rear final drive | 81 |
| 7.1 | O-rings in rear final drive | 81 |
| 7.2 | Replacing O-ring for pinion shaft housing/Haldex clutch (final drive removed) | 81 |
| 7.3 | Replacing O-rings for the cover/rear final drive housing (final drive installed) | 83 |
| 8 | Removing and installing rear final drive | 85 |
| 8.1 | Removing and installing rear final drive | 85 |
| 8.2 | Attaching rear final drive to engine stand | 90 |
| 9 | Checking gear oil level in rear final drive | 91 |
| 9.1 | Checking gear oil level in rear final drive | 91 |
| 10 | Checking oil level in Haldex clutch or change oil | 92 |
| 10.1 | Checking oil level in Haldex clutch or change oil | 92 |
| 10.2 | Checking oil level in Haldex clutch | 93 |
| 10.3 | Changing oil level in Haldex clutch | 94 |
| 10.4 | Changing oil filter for Haldex clutch | 95 |