



## Contents

<b>00 - Technical data . . . . .</b>	<b>1</b>
<b>1      Engine technical data . . . . .</b>	<b>1</b>
1.1      Engine technical data . . . . .	1
1.2      Engine number . . . . .	1
1.3      Engine data . . . . .	1
<b>10 - Removing and installing engine . . . . .</b>	<b>3</b>
<b>1      Removing and installing engine . . . . .</b>	<b>3</b>
1.1      Removing and installing engine . . . . .	3
1.2      Notes on removing . . . . .	4
1.3      Securing engine to assembly stand . . . . .	8
1.4      Notes on installing . . . . .	9
1.5      Tightening torques . . . . .	11
1.6      Aligning engine and gearbox mountings . . . . .	11
1.7      Assembly mountings . . . . .	13
1.8      Additional information and removal instructions for vehicles with air conditioner . . . . .	14
<b>13 - Crankshaft group . . . . .</b>	<b>15</b>
<b>1      Dismantling and assembling engine . . . . .</b>	<b>15</b>
1.1      Dismantling and assembling engine . . . . .	15
1.2      Characteristics of the New Beetle RSi . . . . .	15
1.3      Dismantling and assembling engine . . . . .	17
1.4      Removing and installing ribbed belt . . . . .	33
<b>2      Removing and installing sealing flanges and two-part flywheel . . . . .</b>	<b>35</b>
2.1      Removing and installing sealing flanges and two-part flywheel . . . . .	35
2.2      Removing and installing drive plate . . . . .	39
2.3      Renewing crankshaft oil seal -vibration damper end . . . . .	41
<b>3      Removing and installing crankshaft . . . . .</b>	<b>44</b>
3.1      Removing and installing crankshaft . . . . .	44
<b>4      Dismantling and assembling piston and conrod . . . . .</b>	<b>48</b>
4.1      Dismantling and assembling piston and conrod . . . . .	48
4.2      Characteristics of the New Beetle RSi . . . . .	48
4.3      Dismantling and assembling pistons and conrods . . . . .	49
4.4      Piston and cylinder dimensions . . . . .	55
<b>15 - Cylinder head, Valve gear . . . . .</b>	<b>56</b>
<b>1      Removing and installing cylinder head . . . . .</b>	<b>56</b>
1.1      Removing and installing cylinder head . . . . .	56
1.2      Characteristics of the New Beetle RSi . . . . .	56
1.3      Removing and installing cylinder head for engine codes AQP and AUE . . . . .	57
1.4      Removing and installing cylinder head . . . . .	66
1.5      Checking valve timing . . . . .	73
1.6      Adjusting valve timing . . . . .	75
1.7      Removing and installing cylinder head cover . . . . .	81
1.8      Checking compression pressures . . . . .	86
<b>2      Servicing valve gear . . . . .</b>	<b>88</b>
2.1      Servicing valve gear . . . . .	88
2.2      Characteristics of the New Beetle RSi . . . . .	88
2.3      Servicing valve gear for engine codes AQP and AUE . . . . .	90
2.4      Removing and installing camshafts . . . . .	98
2.5      Checking camshaft adjustment . . . . .	107
2.6      Renewing valve stem seals . . . . .	110
2.7      Checking valve guides . . . . .	114



---

2.8 Reworking valve seats . . . . .	115
<b>17 - Lubrication . . . . .</b>	<b>118</b>
1 Removing and installing parts of the lubrication system . . . . .	118
1.1 Removing and installing parts of the lubrication system . . . . .	118
1.2 Characteristics of the New Beetle RSi . . . . .	118
1.3 Dismantling and assembling oil filter housing . . . . .	125
1.4 Checking oil pressure sender (G10) . . . . .	128
1.5 Dismantling and assembling oil pump . . . . .	129
1.6 Removing and installing oil sump . . . . .	132
1.7 Checking oil pressure and oil pressure switch . . . . .	134
<b>19 - Cooling system . . . . .</b>	<b>138</b>
1 Removing and installing parts of cooling system . . . . .	138
1.1 Removing and installing parts of cooling system . . . . .	138
1.2 Characteristics of the New Beetle RSi . . . . .	138
1.3 Parts of coolant system, body side . . . . .	139
1.4 Parts of coolant system, engine side . . . . .	141
1.5 Supplementary radiator . . . . .	147
1.6 Removing and installing supplementary radiator . . . . .	148
1.7 Coolant hose connection diagram . . . . .	150
1.8 Checking continued coolant circulation pump . . . . .	151
1.9 Checking radiator fan . . . . .	154
1.10 Removing and installing coolant pump . . . . .	155
1.11 Dismantling and assembling coolant thermostat housing . . . . .	158
1.12 Draining and filling cooling system . . . . .	161
1.13 Removing and installing radiator . . . . .	164
<b>20 - Fuel supply system . . . . .</b>	<b>166</b>
1 Removing and installing parts of fuel supply system . . . . .	166
1.1 Removing and installing parts of fuel supply system . . . . .	166
1.2 Removing and installing fuel tank with its attachments and fuel filter . . . . .	167
1.3 Removing and installing fuel tank with its attachments and fuel filter . . . . .	174
1.4 Safety precautions when working on the fuel supply system . . . . .	179
1.5 Rules for cleanliness . . . . .	179
1.6 Removing and installing suction jet pump . . . . .	179
1.7 Removing and installing fuel delivery unit . . . . .	182
1.8 Removing and installing fuel gauge sender . . . . .	184
1.9 Removing and installing fuel tank . . . . .	185
1.10 Crash fuel shut-off . . . . .	187
1.11 Checking fuel pump . . . . .	187
2 Electronic power control (EPC) . . . . .	194
2.1 Electronic power control (EPC) . . . . .	194
2.2 Function of EPC system . . . . .	194
2.3 Servicing parts of electronic power control (EPC) . . . . .	195
2.4 Checking accelerator pedal position sender . . . . .	197
3 Activated charcoal filter system . . . . .	201
3.1 Activated charcoal filter system . . . . .	201
3.2 Function . . . . .	201
3.3 Servicing parts of the activated charcoal canister system . . . . .	202
3.4 Checking activated charcoal filter system solenoid valve 1 . . . . .	205
3.5 Checking fuel tank breather . . . . .	206
<b>26 - Exhaust system . . . . .</b>	<b>212</b>
1 Removing and installing parts of exhaust system . . . . .	212
1.1 Removing and installing parts of exhaust system . . . . .	212
1.2 Silencer with mountings . . . . .	212

---



---

1.3	Exhaust gas flap . . . . .	.215
1.4	Checking vacuum actuating element for exhaust flap . . . . .	.218
1.5	Removing and installing parts of exhaust system . . . . .	.219
1.6	Exhaust manifold, front exhaust pipe with double catalyst and attachments . . . . .	.220
1.7	Silencer with mountings . . . . .	.225
<b>2</b>	<b>Secondary air system . . . . .</b>	<b>.228</b>
2.1	Secondary air system . . . . .	.228
2.2	Function . . . . .	.228
2.3	Removing and installing parts of the secondary air system . . . . .	.229
2.4	Checking combi-valve . . . . .	.233