



Contents

00 - Technical data	1
1 — Change history —	1
2 Safety indications	2
2.1 Safety measures when working on vehicles with Start-Stop system	2
2.2 Safety measures for work in the auxiliary frame	2
3 Assessment of crashed vehicles	3
3.1 Crashed vehicles - running gear assessment checklist	3
4 Disposal of gas struts	5
4.1 Disposal of front gas struts	5
4.2 Disposal of rear gas struts	6
5 Repair instructions	9
5.1 Shock absorbers - leaks	9
5.2 Shock absorbers - noises	9
5.3 Shock absorbers - test	10
5.4 Steering box	10
5.5 Seals, seal rings	11
5.6 Screws, nuts	11
5.7 Electric components	11
5.8 Raise the axle of the unloaded vehicle with coil spring	12
40 - Front suspension	18
1 Front axle	18
1.1 Front axle - general assembly overview	18
2 Auxiliary frame	21
2.1 Auxiliary frame - general assembly overview	21
2.2 Auxiliary frame without steering rack - remove and install	21
2.3 Auxiliary frame with steering rack - remove and install	24
2.4 Auxiliary frame - position	30
2.5 Auxiliary frame - Lower	34
3 Anti-roll bar	39
3.1 Anti-roll bar - general assembly overview	39
3.2 Anti-roll bar - remove and install	40
3.3 Coupling rod - remove and install	42
4 Lower wishbone, swivel joint	44
4.1 Lower wishbone, swivel joint - Assembly overview	44
4.2 Lower wishbone - remove and install	45
4.3 Check the drive shaft	49
4.4 Swivel guide - remove and install	49
4.5 Lower front metal/rubber bearings of the wishbone - replace	53
5 Suspension strut, upper wishbone	61
5.1 Suspension strut, upper wishbone - Assembly overview	61
5.2 Suspension strut - remove and install	63
5.3 Suspension strut - repair	73
6 Wheel roller bearing	76
6.1 Wheel bearing - general overview of assembly	76
6.2 Wheel bearing case - remove and install	77
6.3 Hub and wheel bearing - remove and install	83
7 Drive shaft	92
7.1 Drive shaft - assembly overview	92
7.2 Drive shaft - remove and install	94
7.3 Joint - remove and install	106



7.4	Drive shaft heat shield - remove and install	111
7.5	Drive shaft - assemble and disassemble	111
7.6	External constant velocity joint - check	118
42	- Rear suspension	120
1	Axle beam	120
1.1	Axle beam - assembly overview	120
1.2	Axle beam - replace the bonded rubber bush	120
2	Suspension strut/shock absorber, spring	129
2.1	Suspension strut/shock absorber, spring - assembly overview	129
2.2	Shock absorber - remove and install	130
2.3	Shock absorber - repair	132
2.4	Spring - remove and install	134
3	Rear axle	137
3.1	Rear axle - overview	137
3.2	Rear axle - remove and install	138
4	Wheel roller bearing	144
4.1	Wheel bearing - general overview of assembly	144
4.2	Wheel hub/wheel bearing unit - remove and install	145
44	- Wheels, tyres, vehicle geometry	153
1	Tyre monitoring system	153
1.1	Tyre Pressure Monitoring System - system description	153
2	Axle geometry check	155
2.1	Axle geometry check instructions	155
2.2	Preliminary testing conditions	156
2.3	Preparation for alignment	156
2.4	Nominal vehicle geometry alignment values	158
2.5	Place the vehicle in initial position to check geometry	159
2.6	Axle alignment work procedure	160
2.7	Axle geometry measurement requirement	161
2.8	Vehicle data tag	162
2.9	Adjust front axle camber angle	162
2.10	Adjust the rear axle camber angle	164
2.11	Adjust the rear axle toe-out	164
2.12	Adjust front axle toe-out angle	164
2.13	Check the maximum steering angle	165
3	Tightening torques of wheel bolts	167
48	- Steering	168
1	Steering wheel	168
1.1	Steering wheel - assembly overview	168
1.2	Steering wheel - remove and install	168
2	Steering column	171
2.1	Steering column - assembly overview	171
2.2	Steering column - remove and install	173
2.3	Handling and transporting the steering column	182
2.4	Intermediate steering column axle - remove and install	185
2.5	Steering column - repair	186
2.6	Power steering control unit J500 - remove and install	188
3	Steering rack	194
3.1	Steering rack - general overview of assembly	194
3.2	Steering rack - remove and install	197
3.3	Track rod - remove and install	203
3.4	Track rod ball joint - remove and install	207



4	Sensors	210
4.1	Steering angle sensor G85	210