



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety instructions</b>	<b>1</b>
1.1 Safety precautions during a test drive with measuring and testing equipment	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Cleaning rules	2
2.2 General notes	2
2.3 Contact corrosion	2
2.4 Cable routing	2
<b>98 - Assist systems</b>	<b>4</b>
<b>1 Assembly location overview - transmitters, sensors and control units</b>	<b>4</b>
1.1 Assembly location overview - transmitters, sensors and control units	4
<b>2 Transmitters/sensors/control units</b>	<b>7</b>
2.1 Rear parking aid system sensor G203/G204/G205/G206 - remove and install	7
2.2 Front parking aid system sensor G252/G253/G254/G255 - remove and install	8
2.3 Warning buzzer for front parking aid H22- remove and install	9
2.4 Parking distance control unit J428 - remove and install	10
2.5 Parking aid control unit J446 - remove and install	10
2.6 Support of the Parking aid control unit J446 - remove and install	11
2.7 Reversing camera R189 - remove and install	12
<b>3 Adaptive Cruise Control</b>	<b>13</b>
3.1 Adaptive Cruise Control structure	13
3.2 Adaptive cruise control calibration - Static calibration	13
3.3 Adaptive cruise control calibration - Dynamic calibration	18
<b>4 Parking aid system</b>	<b>19</b>
4.1 Structure - Parking aid system	19
<b>5 Rear view camera system</b>	<b>20</b>
5.1 Structure - Rear view camera system	20