



Contents

00 - Technical data	1
1 --- Change history ---	1
2 Safety instructions	2
2.1 Safety measures for work on vehicles with Start-Stop system	2
2.2 Safety precautions during a test drive with measuring and testing equipment	2
3 Repair instructions	3
3.1 Cleaning rules	3
3.2 General Notes	3
3.3 Contact corrosion	3
3.4 Cable routing	3
4 Battery	5
4.1 Battery - general guidelines	5
4.2 Battery Types	5
27 - Starter, current supply, CCS	6
1 Battery	6
1.1 Battery A - installation overview	6
1.2 Battery A - remove and install	7
1.3 Battery A - disconnect and connect	10
1.4 Battery Console A - remove and install	13
1.5 Battery - check	14
1.6 Battery - charging	14
2 Alternator	15
2.1 Generator (Alternator c) - assembly overview	15
2.2 Generator (Alternator c) - remove and install	16
2.3 Alternator - check	18
2.4 Poly-V belt pulley - remove and install	18
2.5 Voltage regulator - remove and install	27
3 Starter	31
3.1 Starter - assembly overview	31
3.2 Starter - remove and install	32
3.3 Starter - check	37
4 Start-Stop system	38
4.1 Start-Stop system, general description	38
5 Cruise control system (GRA)	39
6 Adaptive Cruise Control	40
90 - Gauges, instruments	41
1 Instrument cluster	41
1.1 Instrument cluster KX2 - assembly overview	41
1.2 Instrument cluster KX2 - remove and install	41
2 Horn	46
2.1 Horn - assembly overview	46
2.2 Bass horn H7/Treble horn H2 - remove and install	47
92 - Windscreen wash/wipe system	49
1 Wiper system	49
1.1 Wiper system - assembly overview	49
1.2 Place the wiper system in service position	51
1.3 Window wiper blade - remove and install	51
1.4 Wiper arm - remove and install	52



1.5	Wiper arms - adjust resting position	54
1.6	Wiper motor V - remove and install	56
1.7	Rain and light sensor G397 - remove and install	58
1.8	Rain and light sensor G397 - repair	61
2	Windscreen washer system	63
2.1	Windscreen washer system - assembly overview	63
2.2	Washer water reservoir - remove and install	64
2.3	Windscreen washer fluid level sender - remove and install	66
2.4	Windscreen washer pump - remove and install	67
2.5	Spray jets - remove and install	68
2.6	Spray nozzles - adjust	69
3	Rear window wiper system	71
3.1	Rear window wiper system - assembly overview	71
3.2	Rear wiper blade - remove and install	72
3.3	Rear window wiper arm - remove and install	72
3.4	Rear window wiper arm - adjust	74
3.5	Rear window wiper motor V12- remove and install	74
4	Rear window washer system	77
4.1	Rear window washer system - assembly overview	77
4.2	Washer water reservoir - remove and install	78
4.3	Rear window washer pump - remove and install	78
4.4	Washer jet - remove and install	78
4.5	Washer jet - adjust	78
5	Washer fluid lines	80
5.1	Washer fluid lines - repair	80
94	Lights, bulbs, switches - exterior	81
1	Headlights	81
1.1	Headlights - assembly overview	81
1.2	Headlight - remove and install	82
1.3	Headlight - adjust	86
1.4	Headlight - correct alignment position	87
1.5	Daytime running light LED module L176/L177 - remove and install	89
2	Fog lights	91
2.1	Fog lights - Assembly overview	91
2.2	Fog lights - remove and install	91
2.3	Fog light - adjust	92
3	Turn signal in the exterior mirror housing	93
3.1	Steering indicator on the exterior mirror - Remove and Install	93
4	Tail lights	94
4.1	Tail lights, body - assembly overview	94
4.2	Tail lights, boot lid - assembly overview	94
4.3	Tail light lamp support - remove and install	96
4.4	Tail light, body - remove and install	97
4.5	Tail light, boot lid - remove and install	97
4.6	Tail light installation position - adjust	99
4.7	Turn signal bulb - remove and install	100
5	License plate bulb	102
5.1	License plate bulb X4/X5 - remove and install	102
5.2	Number plate light X4 / X5 - remove and install	103
6	Auxiliary brake light	104
6.1	Auxiliary brake light - assembly overview	104
6.2	Auxiliary brake light - remove and install	104
7	Access and departure authorization	106



7.1	Access and departure authorization system - overview of fitting locations	106
7.2	Keyless access authorization system (Kessy) - overview of fitting locations	107
7.3	Interface for access and starting system J518 - remove and install	108
7.4	Front door handle contact sensor G605 / G606 - remove and install	110
7.5	Aerial 1 on the passenger compartment for access and starting system R138 - remove and install	110
7.6	Aerial 2 on the passenger compartment for access and starting system R139 - remove and install	111
7.7	Aerial for authorization for access and starting switch, left hand side R200- remove and install	112
7.8	Aerial for authorization for access and starting switch, right hand side R201- remove and install	112
7.9	Aerial on the rear bumper for access and starting system R136 - remove and install	112
8	Steering column switch module	114
8.1	Steering column switch module - assembly overview	114
8.2	Lock cylinder - remove and install	116
8.3	Ignition key withdrawal lock solenoid N376 - remove and install	119
8.4	Ignition/starter switch - remove and install	119
8.5	Steering column switch module J527 - remove and install	120
8.6	Flashing/turn light switch E2 - remove and install	123
8.7	Cruise control system switch E45 - remove and install	125
8.8	Window wiper timer switch E22 - remove and install	125
8.9	Steering lock set - remove and install	125
9	Parking aid	128
96	Lights, bulbs, switches - interior	129
1	Lights	129
1.1	Centre console lights - assembly overview	129
1.2	Luggage compartment lights - overview of fitting locations	130
1.3	Headliner lights - overview of fitting locations	131
1.4	"SAFE" central locking system indicator lamp K133 - remove and install	132
1.5	Selector lever position display Y26 - remove and install	133
1.6	Boot light W3 - remove and install	133
1.7	Bulb of the Luggage compartment light W3 - remove and install	134
1.8	Passenger illuminated vanity mirror W49/W50 - remove and install	135
1.9	Front interior light WX1- replace bulb	136
1.10	Internal rear light WX2- replace bulb	137
1.11	Rear reading light bulb W11/W12 - remove and install	138
2	Control elements	139
2.1	Dash panel control elements - assembly overview	139
2.2	Front door control elements - assembly overview	140
2.3	Rear door control elements - assembly overview	141
2.4	Centre console control elements - assembly overview	142
2.5	Luggage compartment control elements - assembly overview	143
2.6	Headliner control elements - assembly overview	144
2.7	Rotary light switch EX1 - remove and install	146
2.8	Headlight beam range adjustment control E102 - remove and install	147
2.9	Auxiliary function switch for parking manoeuvres E266 - remove and install	148
2.10	Passenger airbag off control light K145 - remove and install	148
2.11	Centre console switch module - remove and install	149
2.12	Warning light switch EX3 - removal and install	150
2.13	Exterior mirror adjustment EX11 - remove and install	151
2.14	Driver door window control unit EX36 - remove and install	151
2.15	Front passenger window control switch EX27 - remove and install	152
2.16	Driver side interior locking switch E308 - remove and install	153
2.17	Contact switch F2/F3 - remove and install	153



2.18	Rear door window control unit EX28/EX29 - remove and install	153
2.19	Contact switch F10/F11 - remove and install	154
2.20	Starting system switch E378 - remove and install	154
2.21	Rear lid contact switch - remove and install	155
2.22	Vanity mirror contact switch F298/F299 - remove and install	155
2.23	Front reading/background light - remove and install	156
2.24	Reading lighting switch - remove and install	159
3	Anti-theft alarm system	162
3.1	Interior monitoring - assembly overview	162
3.2	Alarm system sensor G578 - remove and install	162
4	Immobilizer	164
4.1	Immobilizer control unit - remove and install	164
4.2	Immobilizer reading coil - remove and install	164
5	Lighter, socket	166
5.1	Lighter U1 - remove and install	166
5.2	Electric socket U - remove and install	166
5.3	Rear cigarette lighter illumination bulb L32- remove and install	166
97 - Wiring		167
1	Relay carrier, fuse holder, electronic boxes	167
1.1	Relay carrier, fuse holder, E-boxes - assembly overview	167
1.2	Fuse holder A SA - assembly overview	169
1.3	E-Box in engine compartment - remove and install	170
1.4	Relay carrier and Fuse holder B - remove and install	173
1.5	Relay carrier and fuse box carrier behind the dash board, driver side - remove and install	174
1.6	Fuse carrier A SA - remove and install	177
2	Control units	180
2.1	Control units - assembly overview	180
2.2	Control unit for the on-board electrical system J519 - remove and install	180
2.3	Data bus diagnostics interface J533 - remove and install	182
2.4	Support of the Control unit for the on-board electrical system J519 - remove and install	183
2.5	Support of the Parking aid control unit J446 - remove and install	183
3	Connector connections	184
3.1	Wiring harnesses and connections - repair	184
4	Connector housings - unlock and disassemble	185
5	Aerial cables - repair	186
6	Fibre optic cables	187
7	Vehicle diagnostic, testing and information system	188