



## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety indications</b>  | <b>1</b>  |
| 1.1 Safety measures for work in vehicles with Start-Stop system  | 2         |
| 1.2 Safety measures for activities with pyrotechnical components   | 3         |
| 1.3 Storage, transport and disposal of airbags, belt tensioners and battery separation units (pyrotechnical components)                                    | 4         |
| 1.4 Additional safety instructions for the side airbag   | 5         |
| 1.5 Additional safety instructions for the curtain airbag  | 5         |
| 1.6 Safety instructions for collision sensors (pressure sensors) of the front side airbag  | 6         |
| 1.7 Additional safety instructions for works in the seat-occupied recognition system to deactivate the front passenger's airbag - country-specific version | 6         |
| 1.8 Replacing pyrotechnical, electrical, and mechanical components of the restraint system after accidents   | 7         |
| 1.9 Airbag fastening parts after an accident - check   | 9         |
| 1.10 Accident without airbag triggering  | 10        |
| 1.11 Seat belts - check  | 10        |
| 1.12 Seat belt webbing - check   | 10        |
| 1.13 Automatic belt retractor (blocking effect) - check  | 12        |
| 1.14 Visual inspection of the belt latch   | 12        |
| 1.15 Check belt latch operation  | 12        |
| 1.16 Belt guides and tabs - check  | 13        |
| 1.17 Fastening parts and fastening points after an accident - check  | 13        |
| 1.18 Child seat restraint system for additional child seats (not for the driver seat belt), country-specific version - check                               | 13        |
| 1.19 Child seat anchor after an accident - check   | 14        |
| 1.20 Internal rearview mirror with automatic anti-glare - safety instructions  | 14        |
| <b>2 Repair instructions</b>   | <b>15</b> |
| 2.1 Contact corrosion  | 15        |
| 2.2 Cable routing and fastening  | 15        |
| <b>68 - Interior equipment</b>   | <b>16</b> |
| <b>1 Storage compartment/covers</b>  | <b>16</b> |
| 1.1 Storage compartment/covers - assembly overview   | 16        |
| 1.2 Dash panel cover on the driver side - Assembly overview  | 17        |
| 1.3 Steering column lining - assembly overview   | 18        |
| 1.4 Glove box - assembly overview  | 19        |
| 1.5 Storage compartment and reading light on the passenger side and/or reading light on the driver side - assembly overview                                | 20        |
| 1.6 Upper steering column lining - remove and install  | 21        |
| 1.7 Lower steering column lower lining - remove and install  | 22        |
| 1.8 Glove box - remove and install   | 24        |
| 1.9 Glove box lid - remove and install   | 25        |
| 1.10 Glove compartment lid – service position  | 26        |
| 1.11 Dash panel cover on the driver side - remove and install  | 27        |
| 1.12 Headliner storage compartment - remove and install  | 28        |
| <b>2 Equipment</b>   | <b>30</b> |
| 2.1 Sun visor - assembly overview  | 30        |
| 2.2 Sun visor - remove and install   | 31        |
| 2.3 Sun visor centre mount bearing - remove and install  | 33        |
| <b>3 Centre console</b>  | <b>35</b> |
| 3.1 Centre console - assembly overview   | 35        |
| 3.2 Rear centre console lining - remove and install  | 39        |
| 3.3 Front centre console lining in the footwell area - remove and install  | 41        |
| 3.4 Centre console - remove and install  | 43        |



|           |   |            |
|-----------|---|------------|
| 3.5       | Centre console bracket - remove and install                       | 47         |
| <b>4</b>  | <b>Front centre armrest</b>                                       | <b>49</b>  |
| 4.1       | Front centre armrest - assembly overview                          | 49         |
| 4.2       | Front centre armrest - remove and install                         | 49         |
| <b>5</b>  | <b>Interior mirror</b>  | <b>52</b>  |
| 5.1       | Interior mirror - assembly overview                               | 52         |
| 5.2       | Interior mirror - remove and install                              | 53         |
| <b>69</b> | <b>Passenger protection</b>                                       | <b>58</b>  |
| <b>1</b>  | <b>Seat belts</b>   | <b>58</b>  |
| 1.1       | Seat belt and fastening points - assembly overview and locations  | 58         |
| 1.2       | Front three-point seat belt - assembly overview                   | 60         |
| 1.3       | Rear exterior three-point seat belt - assembly overview           | 62         |
| 1.4       | Rear centre three-point seat belt - assembly overview             | 62         |
| 1.5       | Front belt latch - assembly overview                              | 63         |
| 1.6       | Rear belt latch - assembly overview                               | 64         |
| 1.7       | Front three-point seat belt - remove and install                  | 65         |
| 1.8       | Belt height adjuster - remove and install                         | 69         |
| 1.9       | Front seat belt guide - remove and install                        | 70         |
| 1.10      | Rear three-point seat belt - remove and install                   | 71         |
| 1.11      | Rear seat belt guide - remove and install                         | 74         |
| 1.12      | Front belt fitting - remove and install                           | 74         |
| 1.13      | Rear exterior seat belt fitting - remove and install              | 75         |
| 1.14      | Front belt latch - remove and install                             | 76         |
| 1.15      | Rear seat belt latch - remove and install                         | 77         |
| <b>2</b>  | <b>Child seat fittings</b>  | <b>80</b>  |
| 2.1       | Rear child seat fastening points — assembly overview              | 80         |
| 2.2       | Rear child seat anchors - remove and install                      | 80         |
| <b>3</b>  | <b>Airbag system</b>  | <b>83</b>  |
| 3.1       | Airbag system - assembly overview                                 | 83         |
| <b>4</b>  | <b>Airbag control unit</b>  | <b>86</b>  |
| 4.1       | Airbag control unit - assembly overview                           | 86         |
| 4.2       | Airbag control unit J234  | 86         |
| <b>5</b>  | <b>Driver-side airbag</b>   | <b>90</b>  |
| 5.1       | Driver-side airbag - assembly overview                            | 90         |
| 5.2       | Airbag unit with igniter - remove and install                     | 92         |
| 5.3       | Airbag connector - replace  | 96         |
| <b>6</b>  | <b>Passenger-side airbag</b>                                      | <b>99</b>  |
| 6.1       | Passenger-side airbag - assembly overview                         | 99         |
| 6.2       | Passenger-side airbag unit with igniter - remove and install      | 99         |
| 6.3       | Passenger airbag deactivation key switch - remove and install     | 103        |
| <b>7</b>  | <b>Side airbags</b>   | <b>105</b> |
| 7.1       | Front side airbag - assembly overview                             | 105        |
| 7.2       | Front side airbag unit with igniter - remove and install          | 105        |
| <b>8</b>  | <b>Head protection airbag</b>                                     | <b>108</b> |
| 8.1       | Head protection airbag - assembly overview                        | 108        |
| 8.2       | Head protection airbag with igniter – remove and install          | 110        |
| <b>9</b>  | <b>Airbag collision sensors</b>                                   | <b>114</b> |
| 9.1       | Airbag collision sensors - assembly overview                      | 114        |
| 9.2       | Front airbag collision sensor G190 - remove and install           | 115        |
| 9.3       | Front side airbag collision sensor G179/G180 - remove and install | 117        |
| 9.4       | Rear side airbag collision sensor G256/G257 - remove and install  | 121        |
| <b>10</b> | <b>Passenger seat-occupied sensor</b>                             | <b>124</b> |
| 10.1      | Passenger seat-occupied sensor G128 - remove and install          | 124        |