



Contents

00 - Technical data	1
50 - Body - front	2
1 Front end	2
1.1 Front end with complementary parts - assembly overview	2
1.2 Front end with complementary parts - remove and install	4
1.3 Front end with complementary parts - service position	6
2 Mudguard	11
2.1 Front wing - assembly overview	11
2.2 Front wing - remove and install	12
3 Bulkhead	17
3.1 Upper bulkhead panel - assembly overview	17
3.2 Plenum chamber cover - remove and install	17
55 - Bonnet, rear lid	20
1 Bonnet	20
1.1 Bonnet - assembly overview	20
1.2 Operating cable - assembly overview	22
1.3 Bonnet - remove and install	22
1.4 Bonnet - adjust	25
1.5 Bonnet latch - remove and install	28
1.6 Bonnet lock - adjust	31
1.7 Bonnet latch actuating lever - remove and install	32
1.8 Bonnet striker - remove and install	34
1.9 Bonnet striker - adjust	35
1.10 Bonnet hinge - remove and install	37
1.11 Bonnet stay - remove and install	38
1.12 Bowden cable - remove and install	39
2 Rear lid	42
2.1 Rear lid - assembly overview	42
2.2 Rear lid - remove and install	44
2.3 Rear lid - adjust	48
2.4 Adjustment striker - adjust	51
2.5 Rear lid lock - remove and install	53
2.6 Rear lid lock activation - remove and install	55
2.7 Rear lid hinge - remove and install	57
2.8 Rear lid stop - remove and install	60
2.9 Rear lid striker - adjust	61
2.10 Rear lid trim - remove and install	62
2.11 Rear lid struts - remove and install	64
2.12 Rear lid shock absorber - depressurize	66
3 Fuel reservoir nozzle compartment and lid set	68
3.1 Tank flap cup - assembly overview	68
3.2 Fuel tank nozzle compartment and lid set - remove and install	68
3.3 Fuel tank cap - remove and install	72
3.4 Fuel tank cap locking motor V155 - remove and install	73
57 - Front doors, door components, central locking	75
1 Front door	75
1.1 Front door - assembly overview	75
1.2 Front door - remove and install	78
1.3 Front door - adjusting	82
1.4 Front door striker - adjust	84



1.5	Door arrester - remove and install	86
2	Assembly parts	88
2.1	Assembly parts - assembly overview	88
2.2	Front door external handle and lock - assembly overview	90
2.3	Internal front door cover - remove and install	92
2.4	Front door striker - remove and install	94
2.5	Lock cylinder cap - remove and install	96
2.6	Cap without lock cylinder - remove and install	98
2.7	Lock cylinder - remove and install	102
2.8	External door handle - remove and install	105
2.9	External handle support - remove and install	110
2.10	Front door lock - remove and install	112
2.11	Internal front door trim - remove and install	117
2.12	Front door outer trim - remove and install	119
3	Central locking system	121
3.1	Central locking - general assembly overview	121
3.2	Ignition key battery - remove and install	124
3.3	Ignition key cover - remove and install	126
58	Rear doors, door components	128
1	Rear door	128
1.1	Rear door - assembly overview	128
1.2	Rear passenger door - remove and install	131
1.3	Rear passenger door - adjust	134
1.4	Rear door striker - adjust	136
1.5	Door arrester - remove and install	138
2	Assembly parts	141
2.1	Assembly parts - assembly overview	141
2.2	Rear door external handle and lock - assembly overview	143
2.3	Rear door inner cover - remove and install	144
2.4	Rear door striker - remove and install	146
2.5	Cap without lock cylinder - remove and install	148
2.6	External door handle - remove and install	152
2.7	External handle support - remove and install	154
2.8	Rear door lock - remove and install	157
2.9	External rear door trim - remove and install	161
2.10	Rear door internal trim - remove and install	162
63	Bumpers	165
1	Front bumper	165
1.1	Front bumper cover - assembly overview	165
1.2	Front protector support - assembly overview	167
1.3	Front bumper protector - remove and install	169
1.4	Front cover support - remove and install	172
1.5	Support of the parking aid device sensor - install	174
2	Rear bumper	184
2.1	Rear bumper protector - assembly overview	184
2.2	Rear protector support - assembly overview	185
2.3	Rear bumper protector - remove and install	186
2.4	Rear protector support - remove and install	189
2.5	Support of the parking aid device sensor - install	190
64	Glazing	200
1	Repair instructions	200
1.1	Minimum adhesive curing time	200



1.2	Damaged windows - repair	200
1.3	Assembly instructions and material for bonded windows	201
1.4	Stickers for engraving the VIS number on the windows (only for Brazil) - supply	202
1.5	Undamaged windows - prepare for install	203
1.6	New glass - prepare for install	203
1.7	Body flange - prepare to install the window	205
1.8	Adhesive residue cleaning	206
2	Windscreen	207
2.1	Windscreen - assembly overview	207
2.2	Windscreen - remove and install	208
3	Rear window	213
3.1	Rear window - assembly overview	213
3.2	Rear window - remove and install	213
4	Door window glass	218
4.1	Front door window glass - assembly overview	218
4.2	Rear door window glass - assembly overview	219
4.3	Front door window glass - remove and install	219
4.4	Rear door window glass - remove and install	223
5	Window drive mechanism	228
5.1	Front door latch operation mechanism - assembly overview	228
5.2	Rear door latch operation mechanism - assembly overview	228
5.3	Front door window mechanism motor - remove and install	229
5.4	Front door window drive mechanism - remove and install	232
5.5	Rear door window mechanism motor - remove and install	235
5.6	Rear door window drive mechanism - remove and install	237
6	Window channels and trim strips	241
6.1	Front door window channel - remove and install	241
6.2	Front door window external trim - remove and install	243
6.3	Front door window internal trim - remove and install	245
6.4	Rear door window channel - remove and install	246
6.5	Rear door window exterior trim - remove and install	249
6.6	Rear door window internal trim - remove and install	250
66	Exterior equipment	252
1	Front grid	252
1.1	Radiator grille - assembly overview	252
1.2	Front bonnet - remove and install	252
2	Roof spoiler	255
2.1	Roof spoiler - assembly overview	255
2.2	Roof spoiler - remove and install	255
3	Trims and linings	262
3.1	Windscreen lower trim - assembly overview	262
3.2	Wheel housing trims - assembly overview	263
3.3	Rear lid outer trim - assembly overview	263
3.4	Side member trim - assembly overview	264
3.5	Windscreen lower trim - remove and install	265
3.6	Wheel housing trim - remove and install	268
3.7	Rear lid outer trim - remove and install	274
3.8	Side member trim - remove and install	276
3.9	Rear door outer trim - remove and install	279
3.10	A-pillar exterior trim - remove and install	285
3.11	B-pillar exterior trim - remove and install	287
4	Underbody trim	292
4.1	Engine lower lining - assembly overview	292



4.2	Floor lower lining - assembly overview	292
4.3	Underbody cross piece - assembly overview	293
4.4	Underbody trim - remove and install	294
4.5	Central tunnel underbody trim - remove and install	295
4.6	Underbody rear side covering - remove and install	296
4.7	Underbody cross piece - remove and install	298
5	Roof rack	300
5.1	Roof rack - assembly overview	300
5.2	Roof rack - remove and install	300
6	External rear-view mirror	302
6.1	External rear-view mirror - assembly overview	302
6.2	Exterior rear-view mirror - remove and install	304
6.3	Exterior mirror glass - remove and install	306
6.4	Exterior mirror adjustment unit - remove and install	308
6.5	Exterior mirror glass cover - remove and install	310
6.6	Exterior mirror trim - remove and install	312
6.7	Turn signal - remove and install	314
7	Wheel housing liner	316
7.1	Front wheel housing liner - assembly overview	316
7.2	Rear wheel housing liner - assembly overview	317
7.3	Front wheel housing liner - remove and install	317
7.4	Rear wheel housing liner - remove and install	319
8	Lettering and badges	321
8.1	Adhesive lettering - remove and install	321
8.2	Rear lid lettering	322
8.3	Side letterings	324
8.4	Front badge - remove and install	326
8.5	Rear badge - replace	328
9	Heat shield	331
9.1	Heat shield - assembly overview	331
9.2	Heat shield for the centre tunnel - remove and install	332
9.3	Heat shield for the fuel tank region - remove and install	333
9.4	Heat shield for the rear silencer - remove and install	334