



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1</b> <b>— Change history —</b>	<b>1</b>
<b>2</b> <b>Identification</b>	<b>2</b>
2.1   Gearbox identification	2
<b>3</b> <b>Technical data</b>	<b>4</b>
3.1   Correspondence (gearbox / engine)	4
3.2   Supply capacity (gearbox oil)	5
3.3   Gear ratio calculation “i”	5
<b>4</b> <b>Transmission assembly scheme</b>	<b>6</b>
4.1   Transmission assembly scheme	6
<b>5</b> <b>Repair instructions</b>	<b>8</b>
5.1   General repair instructions	8
<b>30 - Clutch</b>	<b>13</b>
<b>1</b> <b>Clutch control</b>	<b>13</b>
1.1   Clutch drive system - assembly locations overview	13
1.2   Clutch drive pedal - assembly overview	14
1.3   Hydraulic clutch system - assembly overview	16
1.4   Clutch release mechanism - assembly overview	18
1.5   Support shell - remove and install	19
1.6   Clutch position sender G476 - remove and install	20
1.7   Pedal return spring - remove and install	22
1.8   Clutch drive pedal - remove and install	24
1.9   Clutch drive pedal support - remove and install	25
1.10   Clutch transmitter cylinder - remove and install	28
1.11   Clutch slave cylinder - remove and install	29
1.12   Clutch drive system line - remove and install	32
1.13   Hydraulic clutch mechanism - bleed	34
1.14   Clutch release mechanism - repair	36
<b>2</b> <b>Clutch</b>	<b>38</b>
2.1   Clutch - assembly overview	38
2.2   Clutch - remove and install	39
<b>34 - Controls, housing</b>	<b>44</b>
<b>1</b> <b>Gearshift mechanism</b>	<b>44</b>
1.1   Gearshift mechanism - installation position	44
1.2   Gear lever - assembly overview	45
1.3   Handle and boot on the gear lever - assembly overview	47
1.4   Gear knob - remove and install	48
1.5   Gearshift mechanism - remove and install	50
1.6   Gearshift mechanism - repair	54
1.7   Gearshift mechanism - adjust	58
1.8   Gearshift mechanism - check operation	61
1.9   Gearshift lever and mechanism - remove and install	62
1.10   Selector cables - remove and install	67
1.11   Selector rod - replace seal	69
1.12   Selector rod and the selector mechanism cover - assembly overview	71
1.13   Selector rod and selector mechanism cover - remove and install with the gearbox installed	73
<b>2</b> <b>Gearbox - remove and install</b>	<b>77</b>
2.1   Transmission - removal	77
2.2   Gearbox - installation	89



2.3	Transmission - tightening torques	94
<b>3</b>	<b>Assembly mountings</b>	<b>95</b>
3.1	Assembly mountings - assembly overview	95
<b>4</b>	<b>Gearbox - transport</b>	<b>98</b>
4.1	Gearbox - transport	98
<b>5</b>	<b>Gearbox oil</b>	<b>99</b>
5.1	Gearbox oil - check and refill	99
5.2	Gearbox oil - drain and fill	100
<b>6</b>	<b>Transmission - fasten to support</b>	<b>102</b>
6.1	Transmission - fasten to the Support 3221A	102
<b>7</b>	<b>Gearbox - disassemble and assemble</b>	<b>104</b>
7.1	Gearbox - schematic overview	104
7.2	gearbox - assembly overview	104
7.3	Transmission housing cover and 5th gear - assembly overview	105
7.4	Gearbox housing Cover and 5th gear - remove and install (gearbox installed)	107
7.5	Clutch housing - assembly overview	109
7.6	Input shaft, output shaft, differential, selection mechanism and selector forks	110
7.7	Input shaft, output shaft, differential, selection mechanism and selector forks - remove and install	112
<b>8</b>	<b>Gearbox and clutch housings</b>	<b>122</b>
8.1	Transmission housing and transmission housing - assembly overview	122
8.2	Transmission and clutch housings - repair	124
<b>9</b>	<b>Selector forks</b>	<b>126</b>
9.1	Selector forks - assembly overview	126
9.2	Selector forks - repair	126
<b>35</b>	<b>Gears, shafts</b>	<b>132</b>
<b>1</b>	<b>Input shaft</b>	<b>132</b>
1.1	Input shaft - general overview of assembly	132
1.2	Input shaft - remove and install	134
1.3	Input shaft - replace seal	145
<b>2</b>	<b>Output shaft</b>	<b>148</b>
2.1	Output shaft - general overview of assembly	148
2.2	Output shaft- remove and install	151
<b>39</b>	<b>Final drive - differential</b>	<b>159</b>
<b>1</b>	<b>Seals</b>	<b>159</b>
1.1	Seals - assembly overview	159
1.2	Seal (left-hand side) - replace	159
1.3	Seal (right-hand side) - replace	162
<b>2</b>	<b>Differential</b>	<b>165</b>
2.1	Differential - general overview of assembly	165
2.2	Differential - remove and install	167
2.3	Differential - adjust	174