



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1</b> <b>— Change history —</b>	<b>1</b>
<b>2</b> <b>Guidelines to automatic transmissions</b>	<b>2</b>
2.1    Diagnostic start suggestions	2
<b>3</b> <b>General repair instructions</b>	<b>3</b>
3.1    General instructions	3
3.2    Safety measures	3
3.3    Safety measures when working on vehicles with Start-Stop system	4
3.4    Safety measures while towing the vehicle	4
3.5    Cleaning rules	4
3.6    Gearbox	4
3.7    Torque converter	5
3.8    ATF	5
3.9    Guided Fault Finding, vehicle self-diagnosis and measuring techniques	6
3.10   Safety measures for test drives with testing and measuring devices	6
3.11   Automatic gearbox control unit J217	6
3.12   Vehicle control units	7
3.13   Electric components	7
3.14   Sealing rings, gaskets and retainer seals	7
3.15   Nuts and bolts	8
<b>4</b> <b>Identification</b>	<b>9</b>
4.1    Gearbox identification	9
4.2    Torque converter identification	9
<b>5</b> <b>Technical Data</b>	<b>11</b>
5.1    Assignment gearbox - engine	11
5.2    Filling volumes	11
<b>6</b> <b>Electric components</b>	<b>12</b>
6.1    Electric components - fitting locations overview	12
<b>32 - Torque converter</b>	<b>18</b>
<b>1</b> <b>Torque converter</b>	<b>18</b>
1.1    Torque converter - assembly overview	18
1.2    Torque converter - remove and install	19
1.3    Torque converter - empty	20
1.4    Torque converter - check	21
1.5    Torque converter retainer - replace	21
<b>37 - Controls, housing</b>	<b>23</b>
<b>1</b> <b>ATF circuit</b>	<b>23</b>
1.1    ATF circuit - installation overview -	23
1.2    ATF radiator - remove and install	23
<b>2</b> <b>ATF</b>	<b>26</b>
2.1    ATF - level check	26
2.2    ATF - drain and level check	31
<b>3</b> <b>Gearbox - remove and install</b>	<b>35</b>
3.1    Gearbox - remove, Polo and Virtus	35
3.2    Gearbox - remove, T-Cross and Nivus	51
3.3    Gearbox - installation	65
3.4    Gearbox - specified torques table	67
<b>4</b> <b>Gearbox - transport</b>	<b>69</b>
<b>5</b> <b>Transmission - fasten to support</b>	<b>71</b>



<b>6</b>	<b>Gear selector mechanism</b> .....	<b>73</b>
6.1	Gear selector mechanism - assembly overview .....	73
6.2	Gear selector mechanism - check .....	75
6.3	Emergency unlock from position P .....	76
6.4	Gear selection mechanism - remove and install .....	77
6.5	Gear selector lever handle - remove and install .....	85
6.6	Handle lock button - put in installation position .....	88
6.7	Selector cable - remove and install .....	90
6.8	Selector cable - check and adjust .....	94
6.9	Multifunction switch F125 - remove and install .....	97
6.10	Multifunction switch F125 - adjust .....	101
6.11	Selector lever retainer seal - replace .....	102
<b>38</b>	<b>- Gears, control</b> .....	<b>104</b>
<b>1</b>	<b>ATF System</b> .....	<b>104</b>
1.1	Gearbox oil pan - remove and install .....	104
1.2	ATF filter (strainer) - remove and install .....	106
<b>2</b>	<b>Valve body</b> .....	<b>108</b>
2.1	Valve body - assembly overview .....	108
2.2	Valve body - remove and install .....	111
2.3	Installation of wires, connectors, and fasteners in the valve body .....	118
2.4	Wire harness of the solenoid valves and sensors - remove and install .....	121
2.5	Gearbox input speed sensor G182 - remove and install .....	122
2.6	Gearbox output speed sensor G195 - remove and install .....	123
<b>39</b>	<b>- Final drive - differential</b> .....	<b>125</b>
<b>1</b>	<b>Retainer seals</b> .....	<b>125</b>
1.1	Retainer seals - assembly overview .....	125
1.2	Left drive flange retainer seal - renew .....	125
1.3	Right drive flange retainer - replace .....	129
<b>2</b>	<b>Gearbox control</b> .....	<b>133</b>
2.1	Gearbox control unit - remove and install .....	133