



Contents

1	Engine list	1
2	Service work	3
2.1	Information about flexible or fixed service	3
2.2	Service tables	8
3	General information	22
3.1	Raising vehicle with lifting platform or trolley jack	22
3.2	Stickers	24
3.3	Connecting vehicle diagnostic tester	25
3.4	Vehicle identification number	26
3.5	Vehicle data sticker	27
3.6	Country overview for diesel not compliant with EN 590	28
3.7	Country overview for petrol not compliant with EN 228	29
3.8	Engine code and engine number	30
3.9	Severe operating conditions	30
3.10	Countries with hot climate	31
3.11	Countries with high levels of dust	31
3.12	Identification plate	32
3.13	Shortened intervals for spark plug replacement	33
4	Descriptions of work	38
4.1	Swivel joints, axle mountings, coupling rod bearings and anti-roll bar rubber mounting: inspecting for damage	40
4.2	Activation of environment monitoring system (Front Assist): checking	41
4.3	Automatic headlight control and static cornering light: checking function	42
4.4	Front passenger front airbag: checking key switch and "ON/OFF function"	43
4.5	Battery: checking battery terminal clamps for secure seating	45
4.6	Battery: checking with battery tester (always refer to workshop manual)	49
4.7	Status of battery: reading, sending diagnosis protocol online	49
4.8	Reducing agent (AdBlue®/DEF): replenishing	49
4.9	Reducing agent (AdBlue®/DEF): changing	55
4.10	Tyres: checking condition, wear pattern, tyre pressure and tread depth	55
4.11	Brake and clutch system: change brake fluid	81
4.12	Brake system and shock absorbers: inspecting for leaks and damage	87
4.13	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	87
4.14	Brake fluid level: Check	90
4.15	Diesel particulate filter: checking	92
4.16	Dual clutch gearbox 02E: changing gear oil and filter	92
4.17	Electric windows: checking positioning (open and close functions)	92
4.18	Natural gas tank: renewing	93
4.19	Natural gas filler connection and sealing cap: checking condition, if necessary cleaning and checking seal	93
4.20	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	93
4.21	Bonnet catch hook: grease.	94
4.22	Gearbox, final drive and drive shaft boots: inspect for leaks and damage.	94
4.23	All-wheel drive coupling: changing oil	95
4.24	Interior and exterior body: inspecting for corrosion with doors and flaps open	99
4.25	Poly V-belt: renewing	100
4.26	Poly V-belt: checking condition	100
4.27	Cooling system: checking frost protection and coolant level	102
4.28	Diesel fuel filter: renewing	104
4.29	Air filter: cleaning housing and renewing filter element	108
4.30	Multi-purpose additive for diesel fuel: adding	110
4.31	Multi-purpose additive for petrol fuel: adding	112
4.32	Memory seat: initialising	114



4.33	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	114
4.34	Engine cover panel "top": removing and installing	115
4.35	Motor compartment cover (noise insulation) "bottom": removing and installing	119
4.36	Engine oil level: checking	119
4.37	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	120
4.38	Engine oil: capacities and specifications	126
4.39	Panorama tilting/sliding roof with rear panorama roof: checking function, cleaning and greasing guide rails, and cleaning wind deflector	127
4.40	Road test: performing (driving behaviour, noises, air conditioner etc.)	131
4.41	Wheel securing bolts: tightening to specified torque	131
4.42	Radio code: reading using vehicle diagnostic tester	132
4.43	Radio/navigation system: entering PIN of anti-theft coding and storing local radio stations to station buttons	133
4.44	Tyre pressure monitoring: performing basic setting	133
4.45	Tyre repair set: checking	137
4.46	Window wash/wipe system and headlight washer system: checking function	138
4.47	Headlight adjustment: checking halogen headlights	142
4.48	Headlight adjustment: checking gas discharge headlights without DLA	146
4.49	Headlight adjustment: checking gas discharge headlights with DLA	150
4.50	Headlight adjustment: checking fog lights	158
4.51	Sliding sunroof drains: checking for blockage, cleaning if necessary	160
4.52	Service interval display: Reset	160
4.53	Service interval display: recoding	164
4.54	Sunroof: checking function, cleaning and greasing guide rails	165
4.55	Track rods: checking clearance, attachment and boots	166
4.56	Auxiliary heater: setting weekday in menu of dash panel insert	166
4.57	Dust and pollen filter: cleaning housing and renewing filter element	168
4.58	Transportation mode: switching off	169
4.59	Transportation devices: removing blocking pieces from springs on front axle	169
4.60	Transportation devices: removing tie-down rings	170
4.61	Door arrester: grease.	173
4.62	Clock and date: setting	174
4.63	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	175
4.64	Camshaft drive toothed belt (diesel engines): renewing	175
4.65	Spark plugs: Renew	175
4.66	Natural gas system: visually inspecting natural gas tank for corrosion and leakage	187
4.67	Natural gas system: checking wax layer between natural gas fuel tank and fuel tank shut-off valve	192
5	Exhaust emissions test	194
5.1	Exhaust emissions test for petrol engines	194
5.2	Exhaust emissions test for diesel engines	196
6	Glossary	199
7	---Change history---	202