



Contents

00 - Technical data	1
1 Identification	1
1.1 Allocation of PR number - brakes	1
2 Technical data	2
2.1 Technical data for brakes	2
3 Brake test	4
3.1 General information	4
3.2 Checking vehicles with front-wheel drive	4
3.3 Checking vehicles with four-wheel drive	4
3.4 Checking parking brake	5
45 - Anti-lock brake system	7
1 General information	7
1.1 Repair instructions for repair work on ABS	7
1.2 Vehicle diagnosis, testing and information system	8
2 Overview of fitting locations	10
2.1 ABS/ESP	10
3 Control unit and hydraulic unit	14
3.1 Assembly overview	14
3.2 Removing and installing control unit and hydraulic unit	17
3.3 Connecting brake lines to hydraulic unit	25
4 Sensors	28
4.1 Assembly overview - speed sensor on front axle	28
4.2 Removing and installing speed sensor on front axle	29
4.3 Assembly overview - speed sensor on rear axle	29
4.4 Removing and installing speed sensor on rear axle	31
4.5 Removing and installing ESP sensor unit	32
4.6 Removing and installing steering angle sender	33
4.7 Removing and installing brake servo vacuum sender	33
46 - Brakes - mechanism	35
1 Front brakes	35
1.1 Assembly overview - front brakes	35
1.2 Removing and installing brake pads/linings	38
1.3 Removing and installing brake caliper	43
2 Rear brakes	47
2.1 Assembly overview - rear brakes	47
2.2 Removing and installing brake pads/linings	50
2.3 Removing and installing brake caliper	53
3 Handbrake	56
3.1 Overview of fitting locations - parking brake	56
3.2 Removing and installing control unit	57
3.3 Removing and installing parking brake motor	57
4 Brake pedal	60
4.1 Assembly overview - brake pedal	60
4.2 Separating brake pedal from brake servo	62
4.3 Connecting brake pedal to brake servo	63
4.4 Removing and installing brake pedal	63
4.5 Removing and installing mounting bracket	66
47 - Brakes - hydraulics	71
1 Front brake calipers	71



1.1	Assembly overview - front brake caliper	71
1.2	Removing and installing brake caliper piston	72
2	Rear brake calipers	78
2.1	Assembly overview - rear brake caliper	78
2.2	Removing and installing rear brake caliper piston	79
3	Brake servo and brake master cylinder	82
3.1	Assembly overview - brake servo/brake master cylinder	82
3.2	Removing and installing brake light switch	86
3.3	Removing and installing brake master cylinder	88
3.4	Removing and installing brake servo	102
4	Vacuum system	120
4.1	Assembly overview - vacuum pump	120
4.2	Assembly overview - electric vacuum pump	121
4.3	Checking non-return valve	122
4.4	Removing and installing brake servo pressure sensor	122
4.5	Checking vacuum system	122
5	Brake lines	127
5.1	Repairing brake lines	127
6	Hydraulic system	132
6.1	General notes on brake fluid	132
6.2	Pre-bleeding hydraulic system	132
6.3	Bleeding hydraulic system following standard procedure	134
6.4	Subsequent bleeding of hydraulic system	135
6.5	Testing for leaks	135