



Contents

00 - Technical data	1
1 Evaluating accident vehicles	1
1.1 Check list for evaluating running gear on accident vehicles	1
2 General information	3
2.1 Tyre types	3
3 Repair instructions	4
3.1 General repair instructions	4
3.2 Steering rack	4
3.3 Gaskets and seals	4
3.4 Nuts and bolts	5
3.5 Electrical components	5
3.6 Raising suspension to unladen position (vehicles with coil springs)	6
40 - Front suspension	15
1 Front axle	15
1.1 Overview - front axle	15
2 Subframe	17
2.1 Assembly overview – subframe	17
2.2 Assembly overview - anti-roll bar	20
2.3 Removing and installing subframe without steering rack	20
2.4 Removing and installing subframe with steering rack	25
2.5 Repairing subframe	32
2.6 Removing and installing anti-roll bar	47
2.7 Repairing thread in longitudinal member	54
2.8 Fixing subframe in position	54
2.9 Lowering subframe	56
3 Suspension strut, upper suspension link	62
3.1 Assembly overview - suspension strut, upper suspension link	62
3.2 Removing and installing suspension strut	66
3.3 Repairing suspension strut	84
4 Lower suspension link, swivel joint	88
4.1 Assembly overview - lower suspension link, swivel joint	88
4.2 Removing and installing lower suspension link	90
4.3 Renewing mounting bracket with suspension link bush	100
4.4 Checking swivel joint	103
4.5 Removing and installing swivel joint	103
4.6 Renewing bonded rubber bush for lower suspension link	108
5 Wheel bearing	112
5.1 Assembly overview – wheel bearing assembly	112
5.2 Removing and installing wheel bearing housing	114
5.3 Removing and installing wheel bearing unit	120
6 Drive shaft	123
6.1 Overview - drive shaft	123
6.2 Assembly overview - drive shaft	124
6.3 Removing and installing drive shaft	131
6.4 Loosening and tightening threaded connections of drive shaft	140
6.5 Removing and installing drive shaft heat shield	144
6.6 Dismantling and assembling drive shaft	146
6.7 Checking outer constant velocity joint	165
6.8 Checking inner constant velocity joint	166
42 - Rear suspension	169



1	Rear axle	169
1.1	Overview – rear axle	169
1.2	Lowering rear axle	173
1.3	Removing and installing rear axle	180
1.4	Removing and installing shield for rear axle	192
2	Subframe	195
2.1	Assembly overview – subframe	195
2.2	Assembly overview - add-on parts for subframe	196
2.3	Fixing subframe in position	197
2.4	Repairing subframe	201
3	Anti-roll bar	239
3.1	Assembly overview - anti-roll bar	239
3.2	Removing and installing anti-roll bar	240
4	Suspension link, track rod	246
4.1	Assembly overview - transverse link	246
4.2	Removing and installing upper transverse link	252
4.3	Removing and installing lower transverse link	257
4.4	Removing and installing track rod	262
5	Suspension strut, shock absorber, spring	270
5.1	Assembly overview - suspension strut, shock absorber, spring	270
5.2	Removing and installing shock absorber	278
5.3	Repairing shock absorber	289
5.4	Removing and installing spring	297
6	Wheel bearing assembly, trailing arm	303
6.1	Assembly overview - wheel bearing, trailing arm	303
6.2	Removing and installing wheel bearing housing	308
6.3	Removing and installing wheel bearing unit	317
6.4	Renewing bonded rubber bush for wheel bearing housing	323
6.5	Removing and installing trailing arm with mounting bracket	329
6.6	Repairing trailing arm	339
7	Drive shaft	345
7.1	Assembly overview – drive shaft	345
7.2	Removing and installing drive shaft	347
7.3	Loosening and tightening threaded connections of drive shaft	351
7.4	Dismantling and assembling drive shaft	355
7.5	Checking inner constant velocity joint	360
43	Self-levelling suspension	363
1	Electronically controlled damping system	363
1.1	Overview of fitting locations - electronically controlled damping system	363
1.2	Cable routing - front axle	365
1.3	Cable routing - rear axle	367
1.4	Removing and installing electronically controlled damping control unit	368
1.5	Re-adapting reference position (default position)	369
1.6	Removing and installing front body acceleration senders	369
1.7	Removing and installing rear body acceleration sender	372
1.8	Removing and installing bracket for body acceleration sender	375
1.9	Shock absorber damping adjustment button	378
2	Vehicle level sender	380
2.1	Assembly overview - front vehicle level senders	380
2.2	Assembly overview - rear vehicle level senders	381
2.3	Removing and installing front vehicle level senders	385
2.4	Removing and installing rear vehicle level sender	387
44	Wheels, tyres, vehicle geometry	392



1	Wheels, tyres	392
1.1	Specified torques for wheel bolts	392
1.2	Tyres with run-flat properties	392
1.3	Pressing tyre off wheel rim	394
1.4	Removing tyre from wheel	395
1.5	Fitting tyre	396
1.6	Wheel change	397
1.7	Tyre sealant	401
1.8	Tyre sealant disposal	402
1.9	Models with breakdown set	402
2	Tyre Pressure Monitoring System	403
2.1	Overview of fitting locations - Tyre Pressure Monitoring System	403
2.2	System description - Tyre Pressure Monitoring System	404
2.3	Assembly overview - tyre pressure sensor	407
2.4	Removing and installing tyre pressure monitor control unit	410
2.5	Removing and installing bracket for tyre pressure monitor control unit	410
2.6	Removing and installing tyre pressure sensor	411
2.7	Changing tyres on vehicles with tyre pressure monitoring system	418
2.8	Removing and installing metal valve body	422
3	Wheel alignment	425
3.1	Notes for wheel alignment	425
3.2	Necessity of wheel alignment	425
3.3	Conditions for testing	426
3.4	Test preparations	427
3.5	Specifications for wheel alignment	428
3.6	Wheel alignment procedure	431
3.7	Adjusting camber at front wheels	432
3.8	Adjusting camber on rear axle	433
3.9	Adjusting toe at rear axle	435
3.10	Adjusting front axle toe	436
3.11	Vehicle data sticker	438
3.12	Steering angle sender - basic setting	438
4	Vibration due to wheels/tyres - causes and rectification	439
4.1	Causes of rough running	439
4.2	Conducting a road test before balancing wheels	439
4.3	Balancing wheel	440
4.4	Vibration control system	443
4.5	Checking radial and lateral runout of wheels and tyres	444
4.6	Checking radial and lateral run-out on wheel rim	446
4.7	Matching wheels and tyres	447
4.8	Determining flat spots on tyres	448
5	Adaptive Cruise Control (ACC)	450
5.1	Calibrating ACC	450
6	Front camera for assist systems	457
6.1	Calibrating front camera for assist systems	457
48 - Steering		466
1	Steering wheel	466
1.1	Assembly overview – steering wheel	466
1.2	Removing and installing steering wheel	466
2	Steering column	469
2.1	Assembly overview – steering column	469
2.2	Removing and installing steering column	471
2.3	Handling and transporting steering column	488
2.4	Checking steering column for damage	490



2.5	Removing and installing ESL control unit	490
3	Steering rack	493
3.1	Assembly overview – steering rack	493
3.2	Removing and installing steering rack	497
3.3	Repairing steering rack	514
3.4	Removing and installing track rod	519
3.5	Removing and installing track rod ball joint	524
3.6	Removing and installing boot	525