



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>27 - Starter, current supply, CCS</b> .....	<b>2</b>
<b>1 Battery</b> .....	<b>2</b>
1.1 Assembly overview - battery .....	2
1.2 Assembly overview - pyrotechnic battery isolator .....	4
1.3 Disconnecting and connecting battery .....	4
1.4 Removing and installing battery .....	9
1.5 Checking battery .....	16
1.6 Charging battery .....	16
1.7 Removing and installing battery isolator .....	17
1.8 Adapting battery monitor control unit J367 .....	19
<b>2 Jump-start connection</b> .....	<b>20</b>
2.1 Assembly overview - jump-start connection .....	20
2.2 Removing and installing jump starting point .....	20
<b>3 Alternator</b> .....	<b>22</b>
3.1 Assembly overview - alternator .....	22
3.2 Removing and installing alternator .....	28
3.3 Checking alternator with voltage regulator CX1 .....	48
3.4 Repairing alternator with voltage regulator CX1 .....	48
3.5 Checking poly V-belt .....	49
3.6 Removing and installing poly V-belt pulley .....	49
3.7 Removing and installing voltage regulator .....	54
<b>4 Starter motor</b> .....	<b>58</b>
4.1 Assembly overview - starter .....	58
4.2 Removing and installing starter .....	66
4.3 Checking starter B .....	88
<b>5 Cruise control system (CCS)</b> .....	<b>89</b>
<b>6 Start/stop system</b> .....	<b>90</b>
6.1 Components of start/stop system .....	90
6.2 Removing and installing voltage stabiliser J532 .....	91
<b>7 Adaptive cruise control (ACC)</b> .....	<b>93</b>
7.1 Components of adaptive cruise control .....	93
7.2 Overview of fitting locations - adaptive cruise control .....	93
7.3 Removing and installing adaptive cruise control button E357 .....	94
7.4 Removing and installing adaptive cruise control unit J428 .....	94
7.5 Calibrating adaptive cruise control .....	95
<b>90 - Gauges, instruments</b> .....	<b>97</b>
<b>1 Dash panel insert</b> .....	<b>97</b>
1.1 Removing and installing dash panel insert K .....	97
1.2 Multi-pin connector pin assignment on dash panel insert K .....	99
<b>2 Horn</b> .....	<b>100</b>
2.1 Removing and installing treble horn H2 , bass horn H7 .....	100
2.2 Removing and installing horn plate .....	100
<b>92 - Windscreen wash/wipe system</b> .....	<b>101</b>
<b>1 Windscreen wiper system</b> .....	<b>101</b>
1.1 Assembly overview - windscreen wiper system .....	101
1.2 Removing and installing wiper blade .....	102
1.3 Removing and installing wiper arms .....	102
1.4 Adjusting wiper arms .....	104



1.5	Renewing windscreen wiper rubber	105
1.6	Removing and installing wiper motor V	106
1.7	Deactivating APP function of wiper motor	110
1.8	Removing and installing rain and light sensor G397	111
<b>2</b>	<b>Windscreen washer system</b>	<b>114</b>
2.1	Assembly overview - windscreen washer system	114
2.2	Removing and installing washer fluid reservoir	116
2.3	Removing and installing washer pump V5 / windscreen and rear window washer pump V59	120
2.4	Removing and installing windscreen washer fluid level sender G33	121
2.5	Removing and installing washer jets	122
2.6	Adjusting spray jets	122
<b>3</b>	<b>Rear window wiper system</b>	<b>123</b>
3.1	Assembly overview - rear window wiper system	123
3.2	Removing and installing wiper blade	123
3.3	Removing and installing wiper arm	124
3.4	Adjusting wiper arm	125
3.5	Removing and installing rear window wiper motor V12	126
<b>4</b>	<b>Rear window washer system</b>	<b>128</b>
4.1	Assembly overview - rear window washer system	128
4.2	Removing and installing spray jet	129
4.3	Adjusting spray jet	129
<b>5</b>	<b>Headlight washer system</b>	<b>130</b>
5.1	Assembly overview - headlight washer system	130
5.2	Removing and installing headlight washer system pump V11	131
5.3	Removing and installing washer jets	132
5.4	Adjusting spray jets	132
5.5	Removing and installing pop-up cylinder	132
<b>6</b>	<b>Washer fluid lines</b>	<b>134</b>
6.1	Repairing washer fluid lines	134
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>135</b>
<b>1</b>	<b>Headlights</b>	<b>135</b>
1.1	Assembly overview - headlight	135
1.2	Removing and installing headlights MX1 / MX2	139
1.3	Adjusting headlights MX1 / MX2	145
1.4	Adjusting headlight installation position	145
1.5	Removing and installing front turn signal bulb M5 / M7	147
1.6	Removing and installing headlight dipped beam bulb M29 / M31	149
1.7	Removing and installing headlight main beam bulb M30 / M32	151
1.8	Removing and installing gas discharge bulb L13 / L14	153
1.9	Removing and installing bulb for daytime running light/side light M1 / M3	155
1.10	Removing and installing headlight range control motor V48 / V49	157
1.11	Installing repair kit for headlight housing	161
1.12	Converting headlights from driving on right to driving on left	164
1.13	Converting headlights from driving on left to driving on right	166
1.14	Removing and installing swivel module position sensor G474 / G475	168
1.15	Removing and installing dynamic cornering light control motor V318 / V319	169
1.16	Removing and installing gas discharge bulb control unit J343 / J344	169
1.17	Removing and installing output module for headlight J667 / J668	170
<b>2</b>	<b>Fog lights</b>	<b>172</b>
2.1	Assembly overview - fog lights	172
2.2	Removing and installing fog light	172
2.3	Removing and installing fog light bulb L22 / L23 , cornering light bulb L148 / L149 , daytime running light bulb L174 / L175	174



2.4	Adjusting fog lights	174
<b>3</b>	<b>Lights in exterior mirror</b>	<b>175</b>
3.1	Assembly overview - lights in exterior mirror	175
3.2	Removing and installing entry light in exterior mirror W52 / W53	175
3.3	Removing and installing turn signal repeater bulb L131 / L132 , entry light in exterior mirror W52 / W53	175
<b>4</b>	<b>Tail lights</b>	<b>178</b>
4.1	Assembly overview - tail lights in body	178
4.2	Assembly overview - tail lights in rear lid	179
4.3	Removing and installing tail light MX3 / MX4	181
4.4	Removing and installing tail light MX5 / MX6	185
4.5	Removing and installing tail light cluster bulb	188
<b>5</b>	<b>High-level brake light</b>	<b>193</b>
5.1	Removing and installing bulb for high-level brake light M25	193
<b>6</b>	<b>Number plate light</b>	<b>197</b>
6.1	Removing and installing number plate light X	197
6.2	Removing and installing bulb for number plate light X	199
<b>7</b>	<b>Entry and start authorisation system</b>	<b>200</b>
7.1	Assembly overview - entry and start authorisation system	200
7.2	Removing and installing front door exterior handle central locking button E369 / E370	204
7.3	Removing and installing rear door exterior handle central locking button E371 / E372	207
7.4	Removing and installing interior aerial for entry and start authorisation	209
7.5	Removing and installing luggage compartment aerial for entry and start authorisation R137	214
7.6	Removing and installing rear bumper aerial for entry and start system R136	215
7.7	Checking entry and start system aerials and sensors	216
7.8	Removing and installing rear lid power opening sender G750 / G760	217
<b>8</b>	<b>Steering column switch module (SCSM)</b>	<b>219</b>
8.1	Assembly overview - steering column switch module (SCSM)	219
8.2	Removing and installing steering column switch module (SCSM)	220
8.3	Removing and installing steering column electronics control unit J527	227
<b>9</b>	<b>Parking aid</b>	<b>232</b>
9.1	Assembly overview – parking aid	232
9.2	Removing and installing parking aid control unit J446	233
9.3	Removing and installing front parking aid warning buzzer H22	234
9.4	Removing and installing rear parking aid warning buzzer H15	235
9.5	Adjusting volume and frequency of rear parking aid warning buzzer H15	236
9.6	Removing and installing front parking aid senders G252 / G253 / G254 / G255	236
9.7	Removing and installing rear parking aid senders G203 / G204 / G205 / G206	237
<b>10</b>	<b>Park assist steering</b>	<b>238</b>
10.1	Assembly overview - park assist steering	238
10.2	Removing and installing park assist steering control unit J791	239
10.3	Removing and installing front sender for park assist steering G568 / G569	240
10.4	Removing and installing rear park assist steering sender G716 / G717	242
10.5	Removing and installing front parking aid warning buzzer H22	244
10.6	Removing and installing park assist steering control unit J791	244
<b>11</b>	<b>Automatic headlight range control</b>	<b>246</b>
11.1	Removing and installing cornering light and headlight range control unit J745	246
<b>12</b>	<b>Towing bracket</b>	<b>247</b>
12.1	Removing and installing trailer detector control unit J345	247
<b>13</b>	<b>Lane departure warning</b>	<b>249</b>
13.1	Assembly overview - lane departure warning	249
13.2	General description	249
13.3	Removing and installing front camera for driver assist systems R242	250



13.4	Removing and installing windscreen heater for front sensors Z113	252
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>253</b>
<b>1</b>	<b>Lights</b>	<b>253</b>
1.1	Overview of fitting locations - lights in dash panel	254
1.2	Overview of fitting locations - lights in front doors	255
1.3	Overview of fitting locations - lights in rear doors	256
1.4	Overview of fitting locations - lights in luggage compartment	256
1.5	Overview of fitting locations - lights in roof trim	259
1.6	Removing and installing glove compartment light W6	259
1.7	Removing and installing bulb for glove compartment light W6	261
1.8	Removing and installing footwell light W9 / W10	261
1.9	Removing and installing footwell light bulb W9 / W10	262
1.10	Removing and installing front passenger side airbag deactivated warning lamp K145	262
1.11	Removing and installing Central locking SAFELOCK function warning lamp K133	264
1.12	Removing and installing entry light W31 / W32 / W33 / W34	265
1.13	Removing and installing cigarette lighter illumination bulb L28	267
1.14	Removing and installing luggage compartment light W3	267
1.15	Removing and installing bulb for luggage compartment light W3	269
1.16	Removing and installing illuminated vanity mirror W20 / W14	269
1.17	Removing and installing vanity mirror light bulb L31	270
1.18	Removing and installing front interior light W1	271
1.19	Removing and installing centre reading light W39 / W40	271
1.20	Removing and installing front interior light WX1	271
1.21	Removing and installing bulbs for front interior light W1	272
1.22	Removing and installing bulbs for centre reading light W39 / W40	273
1.23	Removing and installing rear interior light W43	274
1.24	Removing and installing rear reading light W11 / W12	274
1.25	Removing and installing rear interior light WX2 , Saloon	274
1.26	Removing and installing bulbs for rear reading light W11 / W12 , rear interior light W43 , Saloon	275
1.27	Removing and installing rear reading light W11 / W12 , Estate	276
1.28	Removing and installing bulb for rear reading light W11 / W12 , Estate	277
<b>2</b>	<b>Controls</b>	<b>278</b>
2.1	Fitting locations overview - controls in dash panel	279
2.2	Fitting locations overview - controls in front doors	281
2.3	Overview of fitting locations - controls in rear doors	282
2.4	Overview of fitting locations - controls in centre console	283
2.5	Fitting locations overview - controls in luggage compartment	284
2.6	Fitting locations overview - controls in roof trim	286
2.7	Removing and installing light switch E1	286
2.8	Removing and installing switch and instrument illumination regulator E20 and headlight range control regulator E102	288
2.9	Removing and installing electronic ignition lock D9	288
2.10	Removing and installing hazard warning light button E229	291
2.11	Removing and installing glove compartment light switch E26	292
2.12	Removing and installing key-operated switch to deactivate front passenger side airbag E224	293
2.13	Removing and installing front driver side window regulator button E710	294
2.14	Removing and installing rear driver side window regulator button, in driver door E712	294
2.15	Removing and installing front passenger side window regulator button, in driver door E715	294
2.16	Removing and installing rear passenger side window regulator button, in driver door E714	294
2.17	Removing and installing childproof lock button E318	294
2.18	Removing and installing driver side button module	294
2.19	Removing and installing mirror adjustment switch E43	296



2.20	Removing and installing driver side interior locking button for central locking system E308	297
2.21	Removing and installing rear lid remote release button E233	298
2.22	Removing and installing window regulator switch in front passenger door E107	299
2.23	Removing and installing rear window regulator button E711 / E713	300
2.24	Removing and installing electromechanical parking brake button E538	301
2.25	Removing and installing auto-hold button E540	301
2.26	Removing and installing TCS and ESP button E256	301
2.27	Removing and installing entry and start authorisation button E408	301
2.28	Removing and installing shock absorber damping adjustment button E387	301
2.29	Removing and installing Start/Stop operation button E693	302
2.30	Removing and installing rear roller blind switch E149	302
2.31	Removing and installing tyre pressure monitor display button E492	302
2.32	Removing and installing parking aid button E266	302
2.33	Removing and installing park assist steering button E581	302
2.34	Removing and installing switch module in centre console EX23 / EX30	302
2.35	Removing and installing heated rear seat switch with regulator E128 / E129	304
2.36	Removing and installing electric hinged tow coupling attachment button E474	305
2.37	Removing and installing luggage compartment light switch F5	306
2.38	Removing and installing vanity mirror contact switch F147 / F148	306
2.39	Removing and installing front interior light button E326 , reading light button E457 / E458	307
2.40	Removing and installing sliding sunroof adjustment regulator E139	307
2.41	Removing and installing garage door operating unit E284	307
2.42	Removing and installing interior monitoring deactivation switch E267	308
2.43	Removing and installing bonnet contact switch F266	309
<b>3</b>	<b>Immobiliser</b>	<b>311</b>
3.1	General description	311
3.2	Removing and installing immobilizer reading unit D1	312
3.3	Immobiliser control unit J362	312
3.4	Ignition key	312
3.5	Online system test	313
<b>4</b>	<b>Anti-theft alarm</b>	<b>314</b>
4.1	Assembly overview - anti-theft alarm system	314
4.2	Activating and deactivating anti-theft alarm	315
4.3	Removing and installing alarm horn H12	316
4.4	Removing and installing interior monitor send and receive module 1 G303	318
4.5	Removing and installing interior monitoring sensor G273	321
4.6	Removing and installing vehicle inclination sender G384	321
<b>5</b>	<b>Lane change assist</b>	<b>322</b>
5.1	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	322
5.2	Removing and installing lane change assist control unit J769 / J770	323
5.3	Calibrating lane change assist	324
5.4	Calibrating lane change assist control unit J769 / J770	329
<b>6</b>	<b>Cigarette lighter, sockets</b>	<b>332</b>
6.1	Removing and installing cigarette lighter U1	332
6.2	Removing and installing DC/AC converter with socket, 12 V-230 V U13	332
<b>97 - Wiring</b>		<b>335</b>
<b>1</b>	<b>Relay carriers, fuse holders, electronics boxes</b>	<b>335</b>
1.1	Removing and installing electronics box (E-box)	335
1.2	Removing and installing main fuse holder in electronics box	341
1.3	Removing and installing dash panel fuse holder	341
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	342
<b>2</b>	<b>Select Control units</b>	<b>346</b>



2.1	Removing and installing onboard supply control unit J519 .....	346
2.2	Removing and installing data bus diagnostic interface J533 .....	350
2.3	Removing and installing convenience system central control unit J393 .....	351
<b>3</b>	<b>Connectors</b> .....	<b>356</b>
3.1	Repairing electrical wiring harnesses and plug-in connections .....	356
<b>4</b>	<b>Vehicle diagnosis, testing and information systems</b> .....	<b>357</b>