



## Contents

<b>68 - Interior equipment</b> .....	<b>1</b>
<b>1 Interior mirror</b> .....	<b>1</b>
1.1 Removing and installing interior mirror .....	1
1.2 Bonding on retaining plate for interior mirror without rain sensor .....	2
1.3 Removing and installing interior mirror with rain sensor .....	3
1.4 Bonding on retaining plate for interior mirror with rain sensor .....	4
1.5 Removing and installing interior mirror in vehicles with a multifunction camera .....	4
<b>2 Compartments, covers and trims</b> .....	<b>6</b>
2.1 Tools .....	6
2.2 Removing and installing centre console .....	6
2.3 Removing and installing footwell trim .....	9
2.4 Removing and installing front ashtray/storage tray .....	10
2.5 Removing and installing Infotainment surround .....	12
2.6 Removing and installing "Climatronic/Climatic" cover .....	13
2.7 Removing and installing rear trim .....	14
2.8 Removing and installing centre console air duct .....	15
2.9 Removing and installing centre console compartment .....	17
2.10 Removing and installing centre console extension .....	18
2.11 Removing and installing centre console armrest .....	21
2.12 Removing and installing armrest compartment .....	22
2.13 Removing and installing upper part of armrest .....	23
2.14 Removing and installing dash panel end trims .....	24
2.15 Removing and installing steering column trim .....	25
2.16 Removing and installing glove compartment .....	26
2.17 Removing and installing glove compartment lock cylinder .....	28
2.18 Removing and installing footwell cover on driver side .....	29
2.19 Removing and installing dash panel trim, front passenger side .....	30
2.20 Removing and installing dash panel insert trim .....	31
2.21 Removing and installing analogue clock holder .....	32
2.22 Removing and installing analogue clock .....	33
2.23 Removing and installing trim on driver side .....	34
2.24 Removing and installing spectacles holder in moulded headliner .....	35
2.25 Removing and installing spectacles holder in moulded headliner .....	36
2.26 Removing and installing single sun visors .....	37
2.27 Removing and installing double sun visor (Saloon and Estate) .....	39
2.28 Removing and installing permit/pass holder .....	41
<b>3 Sill panel mouldings</b> .....	<b>43</b>
3.1 Removing and installing sill panel mouldings .....	43
3.2 Removing and installing wheel housing liner .....	45
<b>4 Grab handles</b> .....	<b>48</b>
4.1 Removing and installing roof grab handles .....	48
<b>5 Rear shelf/roller sunblind</b> .....	<b>50</b>
5.1 Removing and installing rear shelf (Saloon with no roller sunblind) .....	50
5.2 Removing and installing rear shelf (Saloon with roller sunblind) .....	51
5.3 Removing and installing roller sunblind (Saloon) .....	53
5.4 Removing and installing sunblind on rear door trim .....	55
<b>6 Net partition</b> .....	<b>59</b>
6.1 Removing and installing net partition .....	59
6.2 Removing and installing net partition mountings .....	60
<b>69 - Passenger protection</b> .....	<b>61</b>
<b>1 Seat belts</b> .....	<b>61</b>



1.1	General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	62
1.2	Special instructions for belt tensioners	63
1.3	Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	63
1.4	Removing and installing front seat belts (Saloon and Estate)	63
1.5	Removing and installing front belt height adjuster (Saloon and Estate)	66
1.6	Removing and installing front belt buckle	67
1.7	Removing and installing rear outer seat belts with belt tensioner (Saloon)	69
1.8	Removing and installing rear outer seat belts with no belt tensioner (Saloon)	71
1.9	Removing and installing rear outer seat belts with belt tensioner (Estate)	73
1.10	Removing and installing rear outer seat belts with no belt tensioner (Estate)	76
1.11	Removing and installing middle, rear seat belt	79
1.12	Removing and installing rear double belt buckle	80
<b>2</b>	<b>Inspecting seat belts</b>	<b>82</b>
2.1	Points to check	82
<b>3</b>	<b>Checking child seat anchors (ISOFIX) after an accident</b>	<b>85</b>
3.1	Points to check	85
<b>4</b>	<b>Airbag</b>	<b>86</b>
4.1	Tools	86
4.2	Overview of locations - airbag systems	87
4.3	General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	89
4.4	Special instructions for driver and front passenger airbag	90
4.5	Special instructions for curtain airbag modules	90
4.6	Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	91
4.7	Deactivating the airbag	91
4.8	Renewing airbag units following an accident	91
4.9	Removing and installing airbag control unit J234	92
4.10	Removing and installing driver airbag unit	94
4.11	Removing and installing airbag coil connector and return spring with slip ring F138	97
4.12	Removing and installing front passenger airbag unit	98
4.13	Removing and installing front side-airbag	100
4.14	Removing and installing rear side-airbag	103
4.15	Removing and installing curtain airbag (Saloon)	104
4.16	Removing and installing curtain airbag (Estate)	107
4.17	Removing and installing seat occupied sensor, front passenger side G128	109
4.18	Adapting components	110
<b>5</b>	<b>Crash sensors</b>	<b>111</b>
5.1	Tools	111
5.2	Removing and installing front airbag crash sensor, driver side G283	111
5.3	Removing and installing side-airbag crash sensor, driver side G179	112
5.4	Removing and installing side-airbag crash sensor, front passenger side G180	115
5.5	Removing and installing rear side-airbag crash sensor, driver side G256	118
5.6	Removing and installing rear side-airbag crash sensor, front passenger side G257	119
<b>70</b>	<b>Trim, insulation</b>	<b>121</b>
<b>1</b>	<b>Dash panel</b>	<b>121</b>
1.1	Tools	121
1.2	Removing and installing dash panel	121
1.3	Removing and installing assembly carrier	127
<b>2</b>	<b>Door trims</b>	<b>134</b>
2.1	Tools	134
2.2	Removing and installing door trim at front	135
2.3	Removing and installing rear door trim	138



2.4	Removing and installing sunblind on rear door trim	142
2.5	Removing and installing front door trim cover	142
<b>3</b>	<b>Pillar trims</b>	<b>143</b>
3.1	Tools	143
3.2	Removing and installing upper trim for A-pillar	143
3.3	Removing and installing middle trim for A-pillar	144
3.4	Removing and installing lower trim for A-pillar	145
3.5	Removing and installing upper B-pillar trim	147
3.6	Removing and installing lower trim for B-pillar	149
3.7	Removing and installing C-pillar trim, Saloon (vehicles without sunblind)	150
3.8	Removing and installing C-pillar trim, Saloon (vehicles with sunblind)	151
3.9	Removing and installing C-pillar trim (Estate)	153
3.10	Removing and installing D-pillar trim	154
<b>4</b>	<b>Rear lid trim</b>	<b>157</b>
4.1	Tools	157
4.2	Removing and installing warning triangle bracket (Saloon)	158
4.3	Removing and installing rear lid trim (Saloon)	159
4.4	Removing and installing window frame trim (Estate)	160
4.5	Removing and installing rear lid trim (Estate)	161
4.6	Removing and installing warning triangle bracket (Estate)	162
<b>5</b>	<b>Load and luggage compartment trims</b>	<b>164</b>
5.1	Tools	164
5.2	Removing and installing lock carrier cover (Saloon)	164
5.3	Removing and installing lock carrier cover (Estate)	165
5.4	Removing and installing load and luggage compartment floor covering (Estate)	166
5.5	Removing and installing left side trim of luggage compartment (Saloon)	167
5.6	Removing and installing right side trim of luggage compartment (Saloon)	169
5.7	Removing and installing left side trim of luggage compartment (Estate)	170
5.8	Removing and installing right side trim of luggage compartment (Estate)	173
<b>6</b>	<b>Passat Estate rail system</b>	<b>176</b>
6.1	Removing and installing retaining rails	176
6.2	Removing and installing retainer and carrier for rail system	177
<b>7</b>	<b>Roof trims</b>	<b>180</b>
7.1	Tools	180
7.2	Removing and installing roof end strip (Saloon)	181
7.3	Removing and installing roof end strip (Estate)	182
7.4	Lowering and installing moulded headliner (Saloon)	183
7.5	Removing and installing moulded headliner (Saloon)	187
7.6	Removing and installing moulded headliner (Estate)	191
7.7	Removing and installing roof insulation/reinforcement (Estate)	194
<b>72 - Seat frames</b>		<b>198</b>
<b>1</b>	<b>Front seats</b>	<b>198</b>
1.1	Tools	198
1.2	Removing and installing front seat	200
1.3	Removing and installing trim on tunnel side	203
1.4	Removing and installing seat (electric) trim	204
1.5	Removing and installing seat (electric) trim and holder	205
1.6	Removing and installing seat (part electric) trim	206
1.7	Removing and installing seat height adjuster unit	207
1.8	Removing and installing backrest adjustment wheel	210
1.9	Removing and installing lumbar adjustment lever	211
1.10	Removing and installing seat height adjuster handle	212
1.11	Removing and installing seat (manually height adjustable) trim	212



1.12	Removing and installing lever for seat height adjuster handle and retainer for seat trim (manually height-adjustable and partially electric) . . . . .	214
1.13	Removing and installing front seat backrest . . . . .	216
1.14	Removing and installing lumbar support (2-way, manual) . . . . .	218
1.15	Removing and installing lumbar support (4-way, electric) . . . . .	219
1.16	Removing and installing head restraint . . . . .	221
1.17	Removing and installing seat ventilation switch E655 . . . . .	222
1.18	Removing and installing front seat fan V268 . . . . .	223
1.19	Removing and installing front seat backrest fan V269 . . . . .	225
<b>2</b>	<b>Rear seats . . . . .</b>	<b>228</b>
2.1	Tools . . . . .	228
2.2	Removing and installing bench seat (Saloon) . . . . .	228
2.3	Removing and installing bench seat (Estate) . . . . .	231
2.4	Detaching and connecting Bowden cable of rear backrest folding mechanism . . . . .	233
2.5	Removing and installing left backrest segment . . . . .	234
2.6	Removing and installing right backrest segment . . . . .	235
2.7	Removing and installing side padding with side-airbag . . . . .	236
2.8	Removing and installing side padding with no side-airbag . . . . .	238
2.9	Removing and installing centre armrest . . . . .	240
2.10	Removing and installing centre armrest drink holder . . . . .	241
<b>74</b>	<b>- Seat - padding, covers . . . . .</b>	<b>243</b>
<b>1</b>	<b>Front seat covers and padding . . . . .</b>	<b>243</b>
1.1	Tools . . . . .	243
1.2	Removing and installing front seat cushion cover and padding . . . . .	244
1.3	Removing and installing front seat backrest cover and padding . . . . .	249
1.4	Renewing heater elements of seat heating . . . . .	254
<b>2</b>	<b>Rear seat covers and padding . . . . .</b>	<b>256</b>
2.1	Tools . . . . .	256
2.2	Removing and installing bench seat cover and padding (Saloon) . . . . .	256
2.3	Removing and installing bench seat cover and padding (Estate) . . . . .	259
2.4	Removing and installing cover and padding for bench seat with integrated child seat . . . . .	262
2.5	Removing and installing push button with trim for adjusting mechanism of child seat . . . . .	267
2.6	Removing and installing right backrest cover and padding . . . . .	269
2.7	Removing and installing left backrest cover and padding . . . . .	272