



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
50 - Body - front	2
1 Lock carrier	2
1.1 Assembly overview – lock carrier	2
1.2 Service position	3
1.3 Removing and installing lock carrier	8
2 Wings	11
2.1 Assembly overview - front wing	11
2.2 Removing and installing front wing	12
3 Bulkhead	15
3.1 Assembly overview - plenum chamber bulkhead	15
3.2 Assembly overview - plenum chamber cover	17
3.3 Removing and installing plenum chamber cover	17
55 - Bonnet, rear lid	21
1 Bonnet (hood)	21
1.1 Assembly overview - bonnet	21
1.2 Removing and installing bonnet	21
1.3 Removing gas strut	25
1.4 Releasing gas from gas strut	25
1.5 Assembly overview - bonnet hinge	25
1.6 Removing and installing bonnet hinge	26
1.7 Removing and installing insulation	29
1.8 Assembly overview - bonnet lock and release components	31
1.9 Removing and installing bonnet lock	31
1.10 Detaching Bowden cable	33
1.11 Adjusting bonnet	33
1.12 Removing and installing release lever	36
2 Rear lid (saloon)	37
2.1 Tools	37
2.2 Assembly overview - rear lid	37
2.3 Removing and installing rear lid	38
2.4 Removing gas strut	40
2.5 Installing gas strut	41
2.6 Releasing gas from gas strut	42
2.7 Assembly overview - rear lid hinge	42
2.8 Removing and installing rear lid hinge	43
2.9 Assembly overview - hinge seal	46
2.10 Removing and installing hinge seal	47
2.11 Removing and installing striker pin	49
2.12 Adjusting rear lid	49
2.13 Assembly overview - release element	52
2.14 Removing and installing release element	53
2.15 Removing and installing bonnet lock	55
2.16 Rear lid seal	56
2.17 Removing and installing rear lid seal	57
3 Rear lid (estate)	59
3.1 Tools	59
3.2 Assembly overview - rear lid	59



3.3	Removing and installing rear lid	60
3.4	Removing and installing rear lid hinge	62
3.5	Removing and installing bonnet lock	64
3.6	Removing and installing striker pin	66
3.7	Removing and installing release button (vehicle identification number > 3C-8E108000 / 3C-8P064070)	67
3.8	Removing and installing release button (vehicle identification number 3C-8E108001 / 3C-8P064071 >)	69
3.9	Adjusting rear lid	71
3.10	Removing and installing gas strut	75
3.11	Releasing gas from gas strut	75
3.12	Removing and installing motor in control unit for electrically operated rear lid	75
3.13	Rear lid seal	79
3.14	Removing and installing rear lid seal	79
3.15	Assembly overview - cover	82
4	Tank flap unit	83
4.1	Tools	83
4.2	Assembly overview - tank flap unit and actuator	83
4.3	Assembly overview - tank flap unit for natural gas vehicles	85
4.4	Removing and installing tank flap unit	86
4.5	Removing and installing actuator	88
57	Front doors, door components, central locking	89
1	Rear door	89
1.1	Tools	89
1.2	Assembly overview - front door	90
1.3	Assembly overview - door hinges	92
1.4	Removing and installing door	93
1.5	Adjusting door	95
2	Door components	97
2.1	Tools	97
2.2	Assembly overview - assembly carrier	98
2.3	Removing and installing subframe	98
2.4	Assembly overview - door handle and door lock	104
2.5	Removing and installing lock cylinder housing cover cap	105
2.6	Removing and installing lock cylinder housing	106
2.7	Removing and installing door handle	107
2.8	Removing and installing door handle with access and start authorisation	108
2.9	Removing and installing door lock	110
2.10	Removing and installing mounting bracket	114
2.11	Removing and installing retaining bracket	117
2.12	Inner door seal	118
2.13	Removing and installing inner door seal	119
2.14	Removing and installing outer door seal	120
2.15	Assembly overview - insulation	124
3	Central locking	125
3.1	Fitting location overview - central locking components	125
3.2	Adapting remote control keys to remote control (vehicles without entry and start authorisation system)	127
3.3	Adapting remote control keys to immobilizer (vehicles with or without entry and start authorisation system)	127
3.4	Removing and installing remote control key battery	127
58	Rear doors, door components	130
1	Rear door (saloon)	130
1.1	Tools	130



1.2	Assembly overview - rear door	131
1.3	Assembly overview - door hinges	133
1.4	Removing and installing door	134
1.5	Adjusting door	136
2	Rear door (estate)	138
2.1	Tools	138
2.2	Assembly overview - rear door	139
2.3	Assembly overview - door hinges	140
2.4	Removing and installing door	142
2.5	Adjusting door	145
3	Door components	147
3.1	Tools	147
3.2	Assembly overview - assembly carrier	148
3.3	Removing and installing subframe	148
3.4	Assembly overview - door handle and door lock	155
3.5	Removing and installing lock cylinder housing cover cap	156
3.6	Removing and installing lock cylinder housing	157
3.7	Removing and installing door handle	158
3.8	Removing and installing door handle with access and start authorisation	159
3.9	Removing and installing door lock	161
3.10	Removing and installing mounting bracket	164
3.11	Removing and installing retaining bracket	167
3.12	Door inner seals	168
3.13	Removing and installing inner door seal	169
3.14	Removing and installing outer door seal	170
3.15	Assembly overview - insulation	174
60	Sunroof	175
1	Sliding/tilting sunroof with glass panel (Meritor)	175
1.1	Tools	175
1.2	Function	175
1.3	Assembly overview - sliding/tilting sunroof with glass panel	176
1.4	Removing and installing bellows	179
1.5	Removing sliding/tilting sunroof glass panel	180
1.6	Installing sliding/tilting sunroof glass panel	181
1.7	Adjusting height of sliding/tilting sunroof glass panel	181
1.8	Adjusting panel seal	182
1.9	Removing and installing panel seal	183
1.10	Removing and installing wind deflector	183
1.11	Removing and installing sliding headliner	184
1.12	Removing and installing sliding/tilting sunroof glass panel drive	185
1.13	Adjusting drive for sliding/tilting sunroof glass panel ("0" position)	186
1.14	Removing and installing sliding/tilting sunroof glass panel automatic preselection switch	187
1.15	Checking parallel running	187
1.16	Adjusting parallel running	187
1.17	Assembly overview - carrier unit	188
1.18	Removing and installing carrier unit	189
1.19	Operating without current	192
1.20	Removing and installing guide plate	192
1.21	Removing and installing guide plate	193
1.22	Cleaning water drainage hoses	194
2	Sliding/tilting sunroof with solar panel (Webasto)	197
2.1	Tools	197
2.2	Function	197
2.3	Assembly overview - sliding/tilting sunroof with solar panel	198



2.4	Removing sliding/tilting sunroof solar panel	199
2.5	Installing sliding/tilting sunroof solar panel	200
2.6	Adjusting sliding/tilting sunroof solar panel height	200
2.7	Checking parallel running of solar panel	201
2.8	Adjusting parallel running of solar panel	202
2.9	Renewing panel seal	202
2.10	Removing wind deflector	202
2.11	Removing solar panel trim	203
2.12	Removing sliding/tilting sunroof drive	203
2.13	Adjusting drive for sliding/tilting sunroof (zero position)	204
2.14	Removing pre-selector control for sliding/tilting sunroof	205
2.15	Removing electrical contact in solar roof	205
2.16	Removing electrical contact for sliding/tilting sunroof solar panel in carrier unit	205
2.17	Removing and installing carrier unit	206
2.18	Operating without current	209
2.19	Cleaning water drainage hoses	209
3	Panorama sliding sunroof (Arvin-Meritor)	212
3.1	Tools	212
3.2	Function	212
3.3	Basic setting, panoramic sliding sunroof	213
3.4	Assembly overview - panoramic sliding roof	213
3.5	Removing and installing front glass panel	215
3.6	Removing and installing rear glass panel	219
3.7	Adjusting height of front and rear glass panel	221
3.8	Renewing seals for rear glass panel	223
3.9	Removing and installing the exterior seal	227
3.10	Removing and installing interior seal	229
3.11	Removing and installing wind deflector	231
3.12	Removing and installing preselector for glass panel and sunroof sun blind	234
3.13	Removing and installing sliding sunroof motor	235
3.14	Removing and installing sun blind motor	238
3.15	Removing and installing sun blind	241
3.16	Removing and installing sunroof sun blind cross strut	249
3.17	Assembly overview - assembly frame	250
3.18	Removing and installing sun blind Bowden cable	251
3.19	Removing and installing assembly frame	255
3.20	Removing and installing rear part	258
3.21	Removing and installing front motor plate	262
3.22	Removing and installing tilting mechanism and front glass panel cable	265
3.23	Maintenance and care	269
3.24	Operating without current	270
3.25	Cleaning water drainage hoses	271
63	Bumpers	274
1	Front bumper cover	274
1.1	Tools	274
1.2	Repairing front bumper cover	274
1.3	Installing brackets for parking aid system	274
1.4	Assembly overview - front bumper cover	279
1.5	Removing and installing front bumper cover	280
1.6	Front bumper cover add-on parts	282
1.7	Front bumper cover add-on parts, Passat Alltrack	284
1.8	Front bumper cover substructure parts	285
1.9	Assembly overview - front bumper carrier	286
1.10	Assembly overview - front bumper carrier (USA)	287
1.11	Number plate carrier	288



2	Rear bumper cover (saloon)	291
2.1	Tools	291
2.2	Repairing rear bumper cover	291
2.3	Installing brackets for parking aid system	291
2.4	Bumper, rear	296
2.5	Rear bumper cover add-on parts 11.2010 ►	301
2.6	Assembly overview - rear bumper carrier	302
2.7	Assembly overview - towing bracket	302
2.8	Removing and installing drive for swivelling ball head	304
3	Rear bumper cover (estate)	305
3.1	Tools	305
3.2	Repairing rear bumper cover	305
3.3	Installing brackets for parking aid system	305
3.4	Bumper, rear	310
3.5	Rear bumper cover add-on parts	315
3.6	Rear bumper cover add-on parts, Passat Alltrack	316
3.7	Assembly overview - rear bumper carrier	317
3.8	Assembly overview - towing bracket	317
3.9	Removing and installing drive for swivelling ball head	319
64 - Glazing		320
1	Flush bonded windows	320
1.1	Tools	320
1.2	Materials	321
1.3	Repairing windscreen	322
1.4	Assembly overview - windscreen	322
1.5	Removing windscreen	323
1.6	Installing windscreen	325
1.7	Assemble overview - rear window (saloon)	326
1.8	Removing undamaged rear window (saloon)	327
1.9	Removing broken rear window (saloon)	328
1.10	Installing rear window (saloon)	328
1.11	Assembly overview - rear window (estate)	328
1.12	Removing undamaged rear window (estate)	329
1.13	Removing broken rear window (estate)	330
1.14	Installing rear window (estate)	331
1.15	Assembly overview - side window (estate)	331
1.16	Removing undamaged side window (estate)	333
1.17	Removing broken side window (estate)	334
1.18	Installing side window (estate)	334
1.19	Preparing old undamaged window for glazing	335
1.20	Preparing new window without precoating for glazing	335
1.21	Preparing body flange for glazing	336
1.22	Fitting instructions	338
1.23	Minimum curing period	341
1.24	Touching up paint damage	341
1.25	Cleaning in the event of dirt caused by adhesive sealant	341
2	Front door window	342
2.1	Tools	342
2.2	Assembly overview	343
2.3	Removing and installing door window	344
2.4	Removing and installing window regulator motor	348
2.5	Removing and installing window channel	349
2.6	Removing and installing window channel trim strip	352
3	Rear door window (saloon)	354



3.1	Tools	354
3.2	Assembly overview	355
3.3	Removing and installing door window	356
3.4	Removing and installing window regulator motor	360
3.5	Removing and installing window channel	361
3.6	Removing and installing window channel trim strip	363
4	Rear door window (estate)	365
4.1	Tools	365
4.2	Assembly overview	366
4.3	Removing and installing door window	367
4.4	Removing and installing window regulator motor	372
4.5	Removing and installing window channel	373
4.6	Removing and installing guide rails	374
4.7	Removing and installing window channel trim strip	375
66	- Exterior equipment	377
1	Wheel housing liner	377
1.1	Tools	377
1.2	Assembly overview - front wheel housing liner	377
1.3	Assembly overview - rear wheel housing liner	379
1.4	Removing and installing front wheel housing liner	380
1.5	Removing and installing rear wheel housing liner	382
2	Exterior mirror	384
2.1	Tools	384
2.2	Assembly overview - exterior mirror	384
2.3	Removing and installing mirror glass	385
2.4	Removing and installing mirror housing	387
2.5	Removing and installing trim	388
2.6	Removing and installing side turn signal and entry light in exterior mirror	389
2.7	Removing and installing exterior mirror	391
3	Radiator grille	392
3.1	Tools	392
3.2	Radiator grille	392
3.3	Removing and installing emblem	395
3.4	Removing and installing emblem in vehicles with adaptive cruise control	397
3.5	Assembly overview - number plate carrier	398
3.6	Removing and installing number plate carrier	399
4	Roof railing	401
4.1	Tools	401
4.2	Assembly overview - roof railing	401
4.3	Removing and installing roof railing	402
4.4	Assembly overview - roof railing retaining bracket	405
4.5	Removing and installing roof railing retaining bracket	406
5	Mouldings and trims	409
5.1	Tools	409
5.2	Assembly overview - water deflector	410
5.3	Removing and installing water deflector	410
5.4	Front and rear door covers	413
5.5	Assembly overview - side member extension	416
5.6	Assembly overview - rear lid trim strip, saloon	417
5.7	Removing and installing rear side window trim strip	418
5.8	Wheel arch trim	419
5.9	»R-Line« and »Exclusive« cover strip	420
6	Noise insulation	422
6.1	Tools	422



6.2	Assembly overview - noise insulation	422
6.3	Removing and installing noise insulation	425
7	Skid plate	426
7.1	Assembly overview - skid plate	426
7.2	Removing and installing skid plate	427
7.3	Removing and installing skid plate bracket	428
8	Tunnel cross-piece	429
8.1	Tools	429
9	Assembly overview - tunnel cross-piece	430
10	Underbody cladding	431
10.1	Tools	431
10.2	Assembly overview - underbody cladding	431
11	Fuel tank covers (natural gas vehicles)	433
12	Assembly overview - heat shield	434
13	Add-on parts, Passat Alltrack	435
13.1	Safety requirements	435
13.2	Fitting instructions for add-on parts	435
13.3	Tools	435
13.4	Materials	436
13.5	Assembly overview - add-on parts	436
13.6	Side member extension	437
13.7	Front wheel housing trim	439
13.8	Rear wheel arch trim	441
13.9	Preparing body component for bonding	443
13.10	Fitting instructions	444
13.11	Minimum curing period	444
13.12	Touching up paint damage	444
13.13	Cleaning guidelines	444
14	Special add-on parts	445
14.1	Safety requirements	445
14.2	Assembly overview - add-on parts	445
14.3	Assembly overview – side member extension	448
14.4	Roof spoiler (estate)	449
14.5	Fitting instructions	454
14.6	Preparing add-on parts for bonding	454
14.7	Preparing new add-on part for bonding	455
14.8	Preparing body component for bonding	455
14.9	Fitting instructions	455
14.10	Minimum curing period	456
14.11	Touching up paint damage	456
14.12	Cleaning in the event of dirt caused by adhesive sealant	456
14.13	Cleaning guidelines	456
15	Lettering and emblems	457
15.1	Removing and installing emblems at rear	457
15.2	Tools	457
15.3	Fitting instructions	458
15.4	Rear lettering - dimensions	458
15.5	Lettering on wing	461
16	Scuff protection film	463
16.1	Scuff protection film at front and rear	463