



Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety precautions for working on vehicles with supplementary heater	1
1.2 Safety precautions for working on vehicles with start-stop system	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on cooling system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
2 General notes	4
2.1 Starting conditions for supplementary heater	4
2.2 Notes for vehicles with a start-stop system	5
2.3 Notes on supplementary heater operation in vehicles with diesel engine	5
2.4 Rules for cleanliness for working on the supplementary heater and the fuel system	5
2.5 Identification plates	6
3 Repair notes	9
3.1 General repair instructions	9
82 - Supplementary heating	10
1 Fitting location overview - auxiliary/supplementary heater	10
1.1 Location overview - supplementary heater components	10
2 Supplementary heater	13
2.1 Fitting location overview - auxiliary/supplementary heater	13
2.2 Assembly overview - supplementary heater, interior	14
2.3 Removing and installing supplementary heater	17
2.4 Dismantling and assembling supplementary heater	21
2.5 Removing and installing air intake silencer	23
2.6 Removing and installing circulation pump V55	23
2.7 Removing and installing silencer with bracket	25
2.8 Removing and installing exhaust system	26
2.9 Removing and installing supplementary heater bracket	27
2.10 Removing and installing cover	27
2.11 Removing and installing glow plug with flame monitoring Q8	27
2.12 Removing and installing temperature sensor G18 and overheating sensor G189	29
2.13 Connector pin assignment for supplementary heater	29
3 Coolant circuit with supplementary heater	33
3.1 Schematic diagram - coolant hoses	33
3.2 Removing and installing heater coolant shut-off valve N279	41
4 Fuel supply	44
4.1 Location overview - fuel supply	44
4.2 Removing and installing metering pump V54	45
4.3 Testing quantity of fuel delivered	47
5 Regulation of supplementary heater	50
5.1 Functional description	50
5.2 Supplementary heating mode	51
5.3 Auxiliary heating mode	51
5.4 Switching off supplementary heater	51
6 Other control components	53
6.1 Removing and installing ambient temperature sensor G17	53
6.2 Removing and installing remote control receiver for auxiliary coolant heater R149	53
6.3 Functional description of remote control for supplementary heater	55