



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 All-wheel drive - notes on performance test	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Technical data</b>	<b>6</b>
3.1 Allocation gearbox - engine	6
3.2 Capacities	16
3.3 Calculation of gear ratios	17
<b>4 Overview - power transmission</b>	<b>18</b>
4.1 Overview - power transmission - front-wheel drive	18
4.2 Overview - power transmission - all-wheel drive	19
<b>5 Electrical components</b>	<b>22</b>
5.1 Overview of fitting locations - electrical components	22
<b>6 Repair instructions</b>	<b>25</b>
6.1 General repair instructions	25
<b>30 - Clutch</b>	<b>29</b>
<b>1 Clutch mechanism</b>	<b>29</b>
1.1 Overview of fitting locations – clutch mechanism	29
1.2 Assembly overview - pedal cluster	30
1.3 Assembly overview - clutch hydraulics	36
1.4 Assembly overview - clutch release mechanism	44
1.5 Removing and installing bearing bush	46
1.6 Checking clutch master cylinder and clutch slave cylinder	47
1.7 Removing and installing clutch position sender G476	48
1.8 Removing and installing return spring	55
1.9 Removing and installing over-centre spring	58
1.10 Removing and installing clutch pedal	75
1.11 Removing and installing mounting bracket	80
1.12 Removing and installing clutch master cylinder	106
1.13 Removing and installing bleeder	110
1.14 Removing and installing lines for clutch mechanism	114
1.15 Removing and installing clutch slave cylinder together with release bearing	118
1.16 Bleeding clutch mechanism	120
1.17 Repairing clutch release mechanism	121
<b>2 Clutch</b>	<b>123</b>
2.1 Determining make of clutch	123
2.2 Assembly overview - clutch	124
2.3 Removing and installing clutch	127
<b>34 - Controls, housing</b>	<b>143</b>
<b>1 Selector mechanism</b>	<b>143</b>
1.1 Installation position - selector mechanism	143
1.2 Overview - selector mechanism	144
1.3 Assembly overview – gear knob and cover	145
1.4 Assembly overview - gear lever and selector housing, CC, Scirocco, Golf Cabriolet, Passat	147
1.5 Assembly overview - selector cables, CC, Scirocco, Golf Cabriolet, Passat	149
1.6 Assembly overview - selector mechanism, Golf, Golf Estate	151



1.7	Removing and installing gear knob	153
1.8	Dismantling and assembling selector mechanism	161
1.9	Removing and installing selector mechanism	167
1.10	Removing and installing gear selector cable and gate selector cable	173
1.11	Repairing selector mechanism	176
1.12	Adjusting selector mechanism	181
1.13	Checking selector mechanism	186
<b>2</b>	<b>Removing and installing gearbox</b>	<b>187</b>
2.1	Distinguishing between different types of turbo diesel engines	187
2.2	Removing gearbox	188
2.3	Installing gearbox	295
2.4	Specified torques for gearbox	369
<b>3</b>	<b>Assembly mountings</b>	<b>370</b>
3.1	Assembly overview - assembly mountings	370
<b>4</b>	<b>Bevel box</b>	<b>374</b>
4.1	Assembly overview - bevel box	374
4.2	Bevel box differences, Golf and Golf estate	376
4.3	Removing bevel box	377
4.4	Installing bevel box	390
<b>5</b>	<b>Front differential lock</b>	<b>400</b>
5.1	Assembly overview - front differential lock	400
5.2	Allocation of front differential lock	400
5.3	Removing front differential lock	400
5.4	Installing front differential lock	404
<b>6</b>	<b>Transporting gearbox</b>	<b>408</b>
6.1	Transporting gearbox	408
6.2	Transporting front differential lock	409
<b>7</b>	<b>Gear oil</b>	<b>410</b>
7.1	Distinguishing between different manual gearbox types when filling oil	410
7.2	Checking gear oil level	410
<b>8</b>	<b>Securing to engine and gearbox support</b>	<b>415</b>
8.1	Installing manual gearbox to engine and gearbox support	415
8.2	Installing bevel box or front differential lock to engine and gearbox support	416
<b>9</b>	<b>Dismantling and assembling gearbox</b>	<b>418</b>
9.1	Schematic overview - gearbox	418
9.2	Assembly overview - gearbox	421
9.3	Assembly overview - gearbox housing and selector mechanism	423
9.4	Assembly overview - selector unit	425
9.5	Assembly overview - shafts, differential, selector mechanism	426
9.6	Assembly overview - selector forks	430
9.7	Renewing selector shaft seal	431
9.8	Dismantling and assembling gearbox	433
<b>10</b>	<b>Gearbox housing, clutch housing</b>	<b>458</b>
10.1	Assembly overview - gearbox housing	458
10.2	Assembly overview - clutch housing	460
10.3	Repairing gearbox housing	462
10.4	Repairing clutch housing	472
<b>35 - Gears, shafts</b>		<b>476</b>
<b>1</b>	<b>Input shaft</b>	<b>476</b>
1.1	Assembly overview - input shaft	476
1.2	Dismantling and assembling input shaft	477
1.3	Renewing input shaft seal	483
<b>2</b>	<b>Output shaft</b>	<b>485</b>



2.1	Assembly overview - output shaft .....	485
2.2	Dismantling and assembling output shaft .....	493
2.3	Adjusting output shaft .....	554
<b>39</b>	<b>Final drive - differential .....</b>	<b>566</b>
<b>1</b>	<b>Oil seals .....</b>	<b>566</b>
1.1	Overview of fitting locations - seals .....	566
1.2	Renewing left seal .....	568
1.3	Renewing right seal .....	572
<b>2</b>	<b>Differential .....</b>	<b>587</b>
2.1	Assembly overview - differential .....	587
2.2	Dismantling and assembling differential .....	592
2.3	Adjusting differential .....	606
<b>3</b>	<b>Adjustment overview .....</b>	<b>612</b>
<b>4</b>	<b>Components of bevel box .....</b>	<b>613</b>
4.1	Assembly overview - components of bevel box .....	613
4.2	Renewing bevel box seals .....	619
4.3	Renewing output flange and redetermining thickness of shim .....	646
4.4	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft .....	647
<b>5</b>	<b>Components of front differential lock .....</b>	<b>652</b>
5.1	Assembly overview - components of front differential lock .....	652
5.2	Checking function .....	654
5.3	Removing and installing pump V181 .....	654
5.4	Removing and installing coupling for front differential lock .....	656
5.5	Removing and installing differential lock control unit J647 .....	656
5.6	Renewing seals for front differential lock .....	657
5.7	Renewing ball bearing for flange shaft .....	661
<b>6</b>	<b>Gear oil .....</b>	<b>664</b>
6.1	Checking gear oil level .....	664
<b>7</b>	<b>Oil for front differential lock .....</b>	<b>672</b>
7.1	Checking oil level for front differential lock .....	672
7.2	Draining and filling oil for front differential lock .....	673