



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number, engine data	1
2 Safety instructions	3
2.1 Safety precautions when working on fuel supply system	3
2.2 Safety precautions when working on natural gas system	4
2.3 Safety precautions during road tests in which testing and measuring equipment is used	6
2.4 Safety precautions when working on cooling system	7
2.5 Safety precautions when working on ignition system	8
3 Repair instructions	9
3.1 Rules for cleanliness	9
3.2 Foreign objects in engine	9
3.3 Contact corrosion	9
3.4 Routing and securing lines	9
3.5 Installing coolers, condensers and radiators	10
10 - Removing and installing engine	11
1 Removing and installing engine	11
1.1 Removing engine	11
1.2 Installing engine	20
2 Assembly mountings	25
2.1 Assembly overview - assembly mountings	25
13 - Crankshaft group	26
1 Cylinder block (pulley end)	26
1.1 Assembly overview - poly V-belt drive	26
1.2 Assembly overview - cylinder block (pulley end)	28
1.3 Removing and installing poly V-belt	30
1.4 Removing and installing ancillary bracket	33
1.5 Removing and installing pulley	34
1.6 Renewing crankshaft oil seal - belt pulley end	36
2 Cylinder block, gearbox end	40
2.1 Assembly overview - cylinder block, gearbox end	40
2.2 Renewing crankshaft sealing flange - flywheel end	41
3 Crankshaft	49
3.1 Assembly overview - crankshaft	49
3.2 Crankshaft dimensions	50
3.3 Renewing needle bearing in crankshaft	50
4 Pistons and conrods	52
4.1 Assembly overview - pistons and conrods	52
4.2 Checking piston and cylinder bore	53
4.3 Removing and installing oil spray jets	55
4.4 Separating new conrod	56
15 - Cylinder head, valve gear	57
1 Cylinder head	57
1.1 Assembly overview - cylinder head	57
1.2 Removing and installing cylinder head	59
1.3 Removing and installing camshaft housing	64
1.4 Checking compression	72
2 Cover for timing chain	74
2.1 Removing and installing valve timing housing (timing case)	74



3	Chain drive	88
3.1	Checking valve timing	88
3.2	Adjusting valve timing	90
3.3	Checking timing chain	99
3.4	Removing and installing timing chain and chain drive for oil pump	106
4	Valve gear	117
4.1	Assembly overview - valve gear	117
4.2	Measuring axial play of camshaft	119
4.3	Removing and installing valve stem seals	119
5	Inlet and exhaust valves	122
5.1	Checking valve guides	122
5.2	Reworking valve seats	122
17 - Lubrication		124
1	Sump, oil pump	124
1.1	Assembly overview – sump/oil pump	124
1.2	Engine oil	126
1.3	Removing and installing sump	127
1.4	Removing and installing oil pump	130
2	Oil filter, oil pressure switch	133
2.1	Checking oil pressure and oil pressure switch	133
19 - Cooling		135
1	Cooling system, coolant	135
1.1	Coolant hose schematic diagram	135
1.2	Draining and filling coolant	137
1.3	Checking cooling system for leaks	141
2	Coolant pump, regulation of cooling system	144
2.1	Assembly overview - thermostat	144
2.2	Removing and installing coolant pump	145
2.3	Removing and installing coolant pump pulley	151
2.4	Removing and installing coolant circulation pump V50	155
3	Radiator/radiator fan	158
3.1	Assembly overview – radiator/radiator fan	158
3.2	Removing and installing cowl together with radiator fan V7 and radiator fan 2 V177	159
3.3	Removing and installing radiator	160
21 - Turbocharging/supercharging		162
1	Turbocharger	162
1.1	Assembly overview - turbocharger	162
1.2	Removing and installing turbocharger	166
1.3	Checking vacuum unit for turbocharger	170
1.4	Adjusting vacuum unit for turbocharger	172
1.5	Renewing vacuum unit for turbocharger	177
2	Charge air system	180
2.1	Assembly overview - charge air system	180
2.2	Assembly overview - charge-air hose connections	181
2.3	Checking charge air system for leaks	182
2.4	Removing and installing charge air cooler	186
3	Supercharger	192
3.1	Assembly overview - supercharger	192
3.2	Removing and installing supercharger	194
3.3	Removing and installing drive unit seal for supercharger	201
24 - Mixture preparation - injection		205



1	Injection system	205
1.1	General notes on injection.	205
2	Injectors	206
2.1	Assembly overview - fuel rail with injectors	206
2.2	Releasing high pressure in fuel system	207
2.3	Removing and installing injectors	208
2.4	Renewing seal on injector	211
3	Checking natural gas supply system for leaks	214
3.1	Different pressure sections of natural gas supply system	214
3.2	Determining pressure in gas system	217
3.3	Determining operating mode of natural gas vehicles	217
3.4	Activating/deactivating natural gas mode	218
3.5	Checking gas system for leaks	219
4	Gas injectors	225
4.1	Removing and installing gas rail with gas injectors N366 , N367 , N368 , N369	225
5	Gas pressure regulator	228
5.1	Assembly overview - gas pressure regulator	228
5.2	Removing and installing gas pressure regulator	233
5.3	Removing and installing tank pressure sensor G400	238
6	Air filter	242
6.1	Assembly overview - air filter housing	242
6.2	Removing and installing air filter housing	243
7	Intake manifold	244
7.1	Assembly overview - intake manifold	244
7.2	Removing and installing upper part of intake manifold	251
7.3	Removing and installing lower part of intake manifold	256
7.4	Removing and installing regulating flap control unit J808 and throttle valve module J338	258
7.5	Cleaning throttle valve module J338	260
8	High-pressure pump	262
8.1	Assembly overview - high-pressure pump	262
8.2	Removing and installing high-pressure pump	263
9	Senders and sensors	268
9.1	Checking fuel pressure sender G247	268
10	Engine control unit	272
10.1	Removing and installing engine control unit J623 (Passat ▶10.2010)	272
10.2	Removing and installing engine control unit J623 with protective housing (Passat ▶10.2010)	273
10.3	Removing and installing engine control unit J623 (Passat 11.2010▶)	274
10.4	Removing and installing engine control unit J623 with protective housing (Passat 11.2010▶)	276
10.5	Removing and installing engine control unit J623 (Touran)	278
10.6	Removing and installing engine control unit J623 with protective housing (Touran)	279
26 - Exhaust system	283	
1	Emission control	283
1.1	Assembly overview – emission control	283
2	Exhaust pipes, silencers	285
2.1	Assembly overview - silencers	285
2.2	Removing and installing front exhaust pipe	286
28 - Ignition system	287	
1	Ignition system	287
1.1	General notes	287



1.2	Assembly overview - ignition system	287
1.3	Test data, spark plugs	289
1.4	Removing and installing ignition coils with output stage	289
1.5	Removing and installing engine speed sender G28	291