



Contents

00 - Technical data	1
1 Engine data	1
2 Safety precautions when working on fuel supply system	2
3 Rules for cleanliness	3
20 - Fuel supply system	4
1 What to do if fuel tank filled with incorrect fuel	4
1.1 Step 1 (Engine was started with incorrect fuel)	4
1.2 Step 2 (Engine was not started with incorrect fuel)	5
1.3 Step 3 (There are filings in fuel delivery unit and fuel tank)	6
1.4 Step 4 (There are no filings in fuel delivery unit or fuel tank)	7
1.5 Step 5 (There are filings in high-pressure pump)	7
1.6 Step 6 (There are no filings in high-pressure pump)	8
2 Fuel tank (front-wheel drive)	9
2.1 Assembly overview - fuel tank (Passat 2006)	9
2.2 Emptying fuel tank	11
2.3 Removing and installing fuel tank (Passat 2006)	16
3 Fuel tank (front-wheel drive)	20
3.1 Assembly overview - fuel tank (Passat 2011)	20
3.2 Emptying fuel tank	21
3.3 Removing and installing fuel tank (Passat 2011)	27
4 Fuel delivery unit/ fuel gauge sender	31
4.1 Removing and installing fuel delivery unit (Passat 2006)	31
4.2 Removing and installing fuel gauge sender G (Passat 2006)	33
5 Fuel delivery unit/ fuel gauge sender	35
5.1 Assembly overview - fuel delivery unit (Passat 2011)	35
5.2 Removing and installing fuel delivery unit (Passat 2011)	36
5.3 Removing and installing fuel gauge sender G 6 (Passat 2011)	38
6 Checking fuel pump	40
6.1 Checking delivery rate of fuel pump (Passat 2006)	40
6.2 Checking voltage supply of fuel pump G6 (Passat 2006)	41
6.3 Checking electric power consumption of fuel pump G6 (Passat 2006)	42
7 Checking fuel pump	44
7.1 Checking delivery pressure of fuel pump (vehicles with 6.0 bar fuel low-pressure system Passat 2011)	44
7.2 Checking delivery rate of of fuel pump (vehicles with 6.0 bar fuel low-pressure system Passat 2011)	48
7.3 Checking voltage supply of of fuel pump (vehicles with 6.0 bar fuel low-pressure system Passat 2011)	51
7.4 Checking electric power consumption of of fuel pump (vehicles with 6.0 bar fuel low-pressure system Passat 2011)	53
8 Fuel filter	55
8.1 Assembly overview - fuel filter (Passat 2006)	55
8.2 Assembly overview - upper part of fuel filter (Passat 2006)	56
8.3 Removing and installing upper part of fuel filter (Passat 2006)	56
8.4 Removing and installing fuel filter (Passat 2006)	59
9 Fuel filter	61
9.1 Assembly overview - fuel filter, 6.0 bar fuel low-pressure system (Passat 2011)	61
9.2 Removing and installing fuel filter, 6.0 bar fuel low-pressure system (Passat 2011)	62
9.3 Removing and replacing fuel hoses in engine compartment, 6.0 bar fuel low-pressure system (Passat 2011)	64
10 Repairing throttle mechanism	66



10.1	Assembly overview - accelerator mechanism	66
10.2	Removing and installing accelerator module	66