



Contents

01 - Self-diagnosis	1
1 Vehicle diagnosis, testing and information systems	1
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051A	1
2 Immobilizer self-diagnosis	3
2.1 Performing immobilizer self-diagnosis	3
2.2 Fault table	7
2.3 Measured value blocks	10
2.4 Coding immobilizer control unit J362	11
3 Guided functions for immobilizer	13
3.1 Observe additional information and prerequisites for "online request with GeKo-VW"	13
3.2 Online system test	14
3.3 Adaptation of ignition keys	14
3.4 Adaption after changing engine control unit	15
3.5 Adapting immobilizer	15
27 - Starter, current supply, CCS	16
1 Battery	16
1.1 Battery handling instructions	16
1.2 Removing and installing battery	16
1.3 Visual check	18
1.4 Checking electrolyte level	18
1.5 No load voltage measurement	20
1.6 Checking specific gravity of all cells	21
1.7 Battery load test	23
1.8 Charging battery	24
1.9 Quick charging/starting boost	25
2 Starter	26
2.1 Removing and installing starter	26
3 Alternator with poly-V-belt	30
3.1 4-cylinder diesel or fuel injected petrol engine with no air conditioner compressor	30
3.2 4-cylinder diesel engine with air conditioner compressor	31
3.3 4-cylinder fuel injection petrol engine with air conditioner compressor	32
3.4 6-cylinder fuel injection petrol engine with air conditioner compressor	33
3.5 Removing and installing poly-V-belt, 4-cylinder engine	35
3.6 Removing and installing poly-V-belt, 6-cylinder engine	37
3.7 Checking alternator carbon brushes	38
3.8 Renewing poly-V-belt pulley on alternator	38
3.9 Removing and installing poly-V-belt pulley with freewheel	39
90 - Gauges, instruments	40
1 Dash panel insert	40
1.1 Removing and installing dash panel insert	40
2 Repairing dash panel insert	42
2.1 Vehicles with rev counter and digital clock	42
2.2 Vehicles with multifunction indicator (MFI)	43
2.3 Checking LED	49
2.4 Installing speedometer (G54)	50
91 - Radio, telephone, navigation	52
1 Radio systems	52
1.1 Radio system "alpha"	52
1.2 Radio system "beta"	53



1.3	Radio system "gamma" and "gamma with CD changer"	54
1.4	Removing and installing radio	55
1.5	Activating anti-theft coding on radio	57
1.6	Removing and installing cassette storage box	57
1.7	Fitting location of CD changer	57
2	Aerial system	59
2.1	Roof aerial	59
3	Suppression measures	60
4	Loudspeaker system	61
4.1	Removing and installing front right treble loudspeaker	62
4.2	Removing and installing front left treble loudspeaker	63
4.3	Removing and installing rear bass loudspeaker	63
4.4	Removing and installing rear treble loudspeaker	63
4.5	Removing and installing front bass loudspeakers	64
92	- Windscreen wash/wipe system	65
1	Windscreen wiper system	65
1.1	Assembly overview - windscreen wiper system	65
1.2	Setting park position	66
1.3	Adjusting wiper blade park position	66
1.4	Removing and installing wiper blade rubber insert	66
2	Windscreen washer system	67
2.1	Assembly overview - windscreen washer system	67
2.2	Adjusting washer spray jets	67
2.3	Connection to windscreen washer pump	68
3	Rear window wipe/wash system	69
3.1	Assembly overview - rear window wipe/wash system	69
3.2	Adjusting rear window wiper park position	69
3.3	Adjusting washer spray jet	70
4	Headlight washer system	71
4.1	Assembly overview - headlight washer system	71
4.2	Adjusting washer spray jets	71
94	- Lights, bulbs, switches - exterior	72
1	Headlight	72
1.1	Removing and installing headlight housing	72
1.2	Removing headlight bulbs	73
1.3	Removing and installing headlight range control motor	74
1.4	Adjusting headlights	74
2	Front fog lights	76
2.1	Removing or adjusting fog light	76
2.2	Removing and installing fog light bulb	77
3	Front turn signals	78
3.1	Removing front turn signals	78
3.2	Removing and installing turn signal bulb	78
4	Side mounted repeater turn signals	79
4.1	Removing and installing side mounted repeater turn signal	79
5	Number plate lights	80
5.1	Removing and installing registration plate light	80
5.2	Replacing number plate light bulb	80
6	Tail lights	81
6.1	Removing and installing tail light on saloon	81
6.2	Removing and installing tail light on Variant	81
7	Steering column switch and ignition and starter switch	83



7.1	Assembly overview - steering wheel	83
7.2	Removing and installing cover	84
7.3	Removing and installing horn button	85
7.4	Removing and installing horn button on vehicles with a driver airbag	85
7.5	Contact ring for horn plate	86
7.6	Removing and installing steering lock housing	86
7.7	Removing and installing turn signal and windscreen wiper switches	86
7.8	Removing and installing lock cylinder	87
7.9	Pin assignment on steering column switch	87
7.10	Pin assignment at connector for multifunction indicator (MFI) and cruise control system (CCS) (at steering lock housing)	88
96	Lights, bulbs, switches - interior	89
1	Cruise control system (CCS)	89
1.1	Assembly overview - cruise control system (CCS)	89
1.2	Removing control element	90
1.3	Adjusting control element	91
1.4	Removing and installing breather valve	91
1.5	Removing and installing vacuum pump for automatic distance control system V18	91
1.6	Checking vacuum system for leaks	91
2	Anti-theft alarm system (ATA)	92
2.1	Removing alarm system warning lamp K95	93
2.2	Removing and installing contact switch in rear lid lock cylinder for anti-theft alarm system and central locking system F124	93
2.3	Removing and installing anti-theft alarm and vermin repellent system contact switch F120	93
2.4	Removing and installing anti-theft alarm system horn H8	94
2.5	Removing and installing anti-theft alarm system control unit J284	94
3	Interior lights and switches	95
3.1	Removing and installing light switch	95
3.2	Removing combi-warning lamp	95
3.3	Removing and installing interior light	96
3.4	Replacing front passenger reading light bulb	96
3.5	Removing and installing luggage compartment light W3 , Variant	97
3.6	Removing and installing luggage compartment light W3 , saloon	97
3.7	Removing and installing luggage compartment light switch	97
3.8	Removing and installing rear reading lights	97
3.9	Removing and installing sliding sunroof switch E8	98
3.10	Removing and installing door contact switch	98
3.11	Removing and installing electric window switch	98
3.12	Removing and installing mirror adjustment switch E43 with mirror adjustment change-over switch E48	99
4	Immobilizer	100
4.1	Removing and installing immobilizer	100
4.2	Removing and installing immobilizer control unit J362	100
4.3	Removing and installing immobilizer reader coil D2	101
4.4	Transponder	101
4.5	Retrofitting fuel shut-off valve control unit J366	101
4.6	Installing fuel shut-off valve control unit J366	102
4.7	Adapting fuel shut-off valve control unit to immobilizer control unit	104
4.8	Functional check of immobilizer	104
97	Wiring	105
1	Relay plate	105
1.1	Removing and installing relay plate	105
1.2	Removing and installing multi-pin connector on back of relay plate	105