



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	5
2.1 Transmission layout	5
3 Calculating overall ratio (i)	7
3.1 Calculating overall ratio (i)	7
4 General repair instructions	7
4.1 General repair instructions	7
30 - Clutch	9
1 Servicing clutch control	9
1.1 Servicing clutch control	9
1.2 Assembly overview - Pedal cluster (LHD vehicles)	10
1.3 Removing and installing over-centre spring (LHD vehicles)	13
1.4 Removing and installing clutch pedal (LHD vehicles)	14
1.5 Assembly overview - Pedal cluster (RHD vehicles)	14
1.6 Removing and installing over-centre spring (RHD vehicles)	17
1.7 Removing and installing clutch pedal (RHD vehicles)	17
1.8 Assembly overview - Hydraulic system	18
1.9 Removing and installing master cylinder	22
1.10 Bleeding clutch system	23
2 Servicing clutch release mechanism	24
2.1 Servicing clutch release mechanism	24
3 Servicing clutch	27
3.1 Servicing clutch	27
34 - Controls, Housing	32
1 Servicing gear selector mechanism	32
1.1 Servicing gear selector mechanism	32
1.2 Installation position of gear selector mechanism	32
1.3 Removing and installing gear selector cables	35
1.4 Removing and installing gear stick housing	41
1.5 Removing and installing gear stick	45
1.6 Adjusting gear selector mechanism	49
2 Removing and installing gearbox	52
2.1 Removing and installing gearbox	52
2.2 Removing and installing gearbox - Vehicles with 4 cylinder engine -	52
2.3 Removing and installing gearbox - Vehicles with 6 cylinder fuel injection engine -	62
2.4 Checking gearbox oil	70
3 Dismantling and assembling gearbox	71
3.1 Dismantling and assembling gearbox	71
3.2 Removing and installing cover for gearbox housing and 5th gear	72
3.3 Removing and installing gearbox housing and selector mechanism	75
3.4 Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	78
3.5 Dismantling and assembling sequence	81
4 Servicing gearbox housing and clutch housing	98
4.1 Servicing gearbox housing and clutch housing	98
5 Dismantling and assembling gearbox selector mechanism	108
5.1 Dismantling and assembling gearbox selector mechanism	108



6	Dismantling and assembling selector forks	113
6.1	Dismantling and assembling selector forks	113
35 - Gears, Shafts		119
1	Dismantling and assembling input shaft	119
1.1	Dismantling and assembling input shaft	119
2	Adjusting input shaft	130
2.1	Adjusting input shaft	130
2.2	Table of adjustment shims	131
2.3	Carrying out check measurement	133
3	Dismantling and assembling output shaft (pinion shaft)	134
3.1	Dismantling and assembling output shaft (pinion shaft)	134
4	Adjusting output shaft	158
4.1	Adjusting output shaft	158
5	Dismantling and assembling reverse shaft	161
5.1	Dismantling and assembling reverse shaft	161
39 - Final drive, Differential		165
1	Renewing flanged shaft oil seals (gearbox installed)	165
1.1	Renewing flanged shaft oil seals (gearbox installed)	165
1.2	Renewing oil seals on gearboxes without springs behind flanges	165
1.3	Renewing oil seal on gearboxes with springs behind flanges	167
2	Dismantling and assembling differential	169
2.1	Dismantling and assembling differential	169
3	Adjustment overview	185
3.1	Adjustment overview	185
4	Adjusting differential	185
4.1	Adjusting differential	185