



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
2 Code letters, gearbox allocation, ratios, equipment	2
2.1 Code letters, gearbox allocation, ratios, equipment	2
3 Capacities	4
3.1 Capacities	4
4 Repair instructions	4
4.1 Repair instructions	4
01 - Self diagnosis, Electrical check	7
1 Self-diagnosis function	7
1.1 Self-diagnosis function	7
1.2 Technical data of self-diagnosis	8
1.3 Self-diagnosis - Guide	8
2 Locations of electrical/electronic components	10
2.1 Locations of electrical/electronic components	10
3 Performing self-diagnosis	21
3.1 Performing self-diagnosis	21
3.2 Connecting fault reader V.A.G 1551 and selecting functions	21
3.3 List of selectable functions	22
3.4 Interrogating fault memory	23
3.5 Fault table	23
3.6 Erasing fault memory	27
3.7 Initiating basic setting	28
3.8 Read measured value block	29
3.9 Test table	30
4 Gearbox: Electrical test	36
4.1 Gearbox: Electrical test	36
4.2 Electrical check on multi-pin connector with 38 pins	37
4.3 Test table	38
4.4 Electrical check on multi-pin connector with 68 pins	42
4.5 Test table	45
32 - Torque converter	49
1 Torque converter	49
1.1 Torque converter	49
1.2 Identification of torque converter	49
1.3 Draining torque converter	50
1.4 Removing and installing torque converter oil seal	50
37 - Controls, Housing	51
1 Servicing shift mechanism	51
1.1 Servicing shift mechanism	51
1.2 Checking shift mechanism	51
1.3 Checking and adjusting selector lever cable	51
1.4 Checking ignition key removal lock (vehicles with ignition key removal lock)	52
1.5 Dismantling and assembling shift mechanism	53
1.6 Dismantling and assembling shift mechanism (vehicles with ignition key removal lock)	62
1.7 Dismantling and assembling selector lever (vehicles with ignition key removal lock)	69
1.8 Removing and installing locking cable (vehicles with ignition key removal lock)	75
1.9 Adjusting locking cable (vehicles with ignition key removal lock)	77
2 Checking gearbox	78



2.1	Checking gearbox	78
2.2	Checking shift points	78
2.3	Checking stall speed	78
2.4	Measuring main pressure	78
2.5	Fault finding table for "4-speed automatic gearbox"	78
3	Removing and installing gearbox	78
3.1	Removing and installing gearbox	78
4	Checking and topping up ATF level	83
4.1	Checking and topping up ATF level	83
4.2	Checking ATF level	83
4.3	Topping up ATF	84
5	Gearbox with selector elements	85
5.1	Gearbox with selector elements	85
5.2	Position of selector elements	86
6	Dismantling and assembling gearbox	87
6.1	Dismantling and assembling gearbox	87
6.2	Removing and installing ATF cooler and ATF filler tube	87
6.3	Dismantling and assembling planetary gearbox -Overview-	88
6.4	I - Removing and installing ATF pump to supporting tube	90
6.5	II - Removing and installing reverse gear clutch -K2- to large sun gear	93
6.6	III - Removing and installing free wheel and reverse gear brake -B1-	96
6.7	IV - Planet carrier and gearbox housing with input gear and cover	98
6.8	Dismantling and assembling planetary gearbox	100
6.9	Overview of all planetary gearbox adjustments	112
6.10	Adjusting planet carrier	113
6.11	Adjusting reverse gear brake -B1-	118
6.12	Adjusting clutch play between -K1- and -K2-	123
6.13	Adjusting 2nd and 4th gear brake -B2-	128
38 - Gears, Hydraulic controls		132
1	Dismantling and assembling ATF pump	132
1.1	Dismantling and assembling ATF pump	132
2	Dismantling and assembling free wheel with -B1- piston	135
2.1	Dismantling and assembling free wheel with -B1- piston	135
3	Dismantling and assembling 1st to 3rd gear clutch -K1- with turbine shaft	137
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1- with turbine shaft	137
4	Dismantling and assembling reverse gear clutch -K2-	143
4.1	Dismantling and assembling reverse gear clutch -K2-	143
5	Dismantling and assembling 4th gear clutch -K3- with pump shaft	146
5.1	Dismantling and assembling 4th gear clutch -K3- with pump shaft	146
6	Removing and installing valve body	150
6.1	Removing and installing valve body	150
7	Dismantling and assembling parking lock	157
7.1	Dismantling and assembling parking lock	157
39 - Final drive, Differential		163
1	Checking oil in final drive	163
1.1	Checking oil in final drive	163
2	Removing and installing oil seal for drive flange	163
2.1	Removing and installing oil seal for drive flange	163
3	Dismantling and assembling final drive	166
3.1	Dismantling and assembling final drive	166
3.2	Repair overview of final drive	166
3.3	Removing and installing input gear	168



3.4	Removing and installing drive pinion	173
3.5	Removing and installing differential	180
3.6	Dismantling and assembling differential	188
4	Adjusting final drive	194
4.1	Adjusting final drive	194
4.2	Overview of adjustments	194
4.3	Adjustments to be completed after replacing individual components	196
4.4	Adjusting drive pinion	196
4.5	Adjusting input gear	199
4.6	Adjusting differential	200