



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
2 Information on "Automatic gearbox 01M"	2
2.1 Information on "Automatic gearbox 01M"	2
3 Code letters, gearbox allocation, ratios, equipment	2
3.1 Code letters, gearbox allocation, ratios, equipment	2
4 Capacities	5
4.1 Capacities	5
5 Repair instructions	5
5.1 Repair instructions	5
01 - Self diagnosis	9
1 Self-diagnosis function	9
1.1 Self-diagnosis function	9
1.2 Technical data of self-diagnosis	10
1.3 Self-diagnosis - Guide	11
2 Locations of electrical/electronic components	12
2.1 Locations of electrical/electronic components	12
3 Performing self-diagnosis	24
3.1 Performing self-diagnosis	24
3.2 Connecting fault reader V.A.G 1551 and selecting functions	24
3.3 List of selectable functions	26
3.4 Interrogating fault memory	26
3.5 Fault table	27
3.6 Erasing fault memory	32
3.7 Initiating basic setting	33
3.8 Read measured value block	34
3.9 Test table	36
4 Gearbox: Electrical test	44
4.1 Gearbox: Electrical test	44
4.2 Electrical check	44
4.3 Test table	47
32 - Torque converter	52
1 Torque converter	52
1.1 Torque converter	52
1.2 Identification of torque converter	52
1.3 Torque converter allocation	53
1.4 Removing and installing torque converter oil seal	55
1.5 Draining torque converter	56
37 - Controls, Housing	58
1 Servicing shift mechanism	58
1.1 Servicing shift mechanism	58
1.2 Checking shift mechanism	58
1.3 Checking and adjusting selector lever cable	58
1.4 Checking ignition key removal lock (vehicles with ignition key removal lock)	59
1.5 Dismantling and assembling selector mechanism	59
1.6 Dismantling and assembling shift mechanism (vehicles with ignition key removal lock)	68
1.7 Dismantling and assembling selector lever (vehicles with ignition key removal lock)	75
1.8 Removing and installing locking cable (vehicles with ignition key removal lock)	81
1.9 Adjusting locking cable (vehicles with ignition key removal lock)	84



2	Checking gearbox	84
2.1	Checking gearbox	84
2.2	Checking shift points	85
2.3	Checking stall speed	85
2.4	Measuring main pressure	85
2.5	Fault finding table for "4-speed automatic gearbox"	85
3	Removing and installing gearbox	85
3.1	Removing and installing gearbox	85
3.2	Removing and installing starter bush	91
4	Checking and topping up ATF level	93
4.1	Checking and topping up ATF level	93
4.2	Checking ATF level	94
4.3	Topping up ATF	95
4.4	Renewing ATF	96
5	Gearbox with selector elements	97
5.1	Gearbox with selector elements	97
5.2	Position of selector elements	98
6	Dismantling and assembling gearbox	100
6.1	Dismantling and assembling gearbox	100
6.2	Removing and installing ATF cooler and ATF filler tube	100
6.3	Dismantling and assembling planetary gearbox -Overview-	102
6.4	I - Removing and installing ATF pump to supporting tube	103
6.5	II - Removing and installing reverse gear clutch -K2- to large sun wheel	106
6.6	III - Removing and installing freewheel and reverse gear brake -B1-	109
6.7	IV - Planet carrier and gearbox housing with input gear and cover	111
6.8	Dismantling and assembling planetary gearbox	113
6.9	Overview of all planetary gearbox adjustments	129
6.10	Adjusting planet carrier	130
6.11	Adjusting reverse gear brake -B1-	136
6.12	Adjusting clutch play between -K1- and -K2-	141
6.13	Adjusting 2nd and 4th gear brake -B2-	146
38	- Gears, Hydraulic controls	152
1	Dismantling and assembling ATF pump	152
1.1	Dismantling and assembling ATF pump	152
2	Dismantling and assembling freewheel with -B1- piston	155
2.1	Dismantling and assembling freewheel with -B1- piston	155
3	Dismantling and assembling 1st to 3rd gear clutch -K1-	157
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1-	157
4	Dismantling and assembling reverse gear clutch -K2-	162
4.1	Dismantling and assembling reverse gear clutch -K2-	162
5	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	165
5.1	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	165
6	Removing and installing valve chest	169
6.1	Removing and installing valve chest	169
7	Dismantling and assembling parking lock	178
7.1	Dismantling and assembling parking lock	178
39	- Final drive, Differential	185
1	Checking oil in final drive	185
1.1	Checking oil in final drive	185
2	Removing and installing oil seal for drive flange	185
2.1	Removing and installing oil seal for drive flange	185
3	Dismantling and assembling final drive	188



3.1	Dismantling and assembling final drive	188
3.2	Repair overview of final drive	188
3.3	Removing and installing input gear	190
3.4	Removing and installing drive pinion	196
3.5	Removing and installing differential	206
3.6	Dismantling and assembling differential	215
4	Adjusting final drive	226
4.1	Adjusting final drive	226
4.2	Overview of adjustments	227
4.3	Adjustments to be completed after replacing individual components	228
4.4	Adjusting drive pinion	228
4.5	Adjusting input gear	230
4.6	Adjusting differential	232
5	Definitions	233
5.1	Definitions	233