



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Notes on installing	5
1.4 Tightening torques	6
1.5 Assembly mountings	6
1.6 Aligning engine and gearbox	9
1.7 Renewing engine carrier rubber mounting	10
1.8 Additional information and removal instructions for vehicles with air conditioner	11
13 - Crankshaft group	13
1 Dismantling and assembling engine	13
1.1 Dismantling and assembling engine	13
1.2 Removing and installing ribbed belt	26
1.3 Removing and installing toothed belt	29
2 Removing and installing sealing flanges and flywheel/drive plate	32
2.1 Removing and installing sealing flanges and flywheel/drive plate	32
2.2 Renewing crankshaft oil seal - pulley end -	34
2.3 Removing and installing drive plate	36
3 Removing and installing crankshaft	39
3.1 Removing and installing crankshaft	39
3.2 Crankshaft dimensions	41
4 Dismantling and assembling pistons and conrods	42
4.1 Dismantling and assembling pistons and conrods	42
4.2 Piston and cylinder dimensions	48
15 - Cylinder head, Valve gear	49
1 Removing and installing cylinder head	49
1.1 Removing and installing cylinder head	49
1.2 Removing and installing cylinder head	53
1.3 Checking compressions	54
2 Servicing valve gear	55
2.1 Servicing valve gear	55
2.2 Reworking valve seats	63
2.3 Removing and installing camshaft oil seal	64
2.4 Removing and installing camshaft	66
2.5 Checking hydraulic bucket tappets	68
2.6 Checking valve guides	68
2.7 Renewing valve guides	69
2.8 Renewing valve stem seals	69
17 - Lubrication	71
1 Removing and installing parts of the lubrication system	71
1.1 Removing and installing parts of the lubrication system	71
1.2 Checking oil pressure and oil pressure switch	79



19 - Cooling system	81
1 Removing and installing parts of cooling system	81
1.1 Removing and installing parts of cooling system	81
1.2 Parts of cooling system body side	82
1.3 Parts of cooling system - engine side	86
1.4 Dismantling and assembling coolant pump	89
1.5 Draining and filling cooling system	90
1.6 Removing and installing radiator and radiator fan	92
1.7 Checking radiator fan run-on	93
20 - Fuel supply system	94
1 Removing and installing parts of fuel supply system	94
1.1 Removing and installing parts of fuel supply system	94
1.2 Removing and installing fuel tank with its attachments and fuel filter, front wheel drive	95
1.3 Removing and installing fuel tank with its attachments and fuel filter, four wheel drive	100
1.4 Safety precautions when working on the fuel supply system	105
1.5 Rules for cleanliness	105
1.6 Adjusting throttle cable	106
1.7 Removing and installing fuel delivery unit	108
1.8 Checking fuel pump	109
1.9 Removing and installing parts of activated charcoal filter system	115
1.10 Checking activated charcoal filter shut-off valve	118
26 - Exhaust system	119
1 Removing and installing parts of exhaust system, front wheel drive	119
1.1 Removing and installing parts of exhaust system, front wheel drive	119
1.2 Exhaust manifold, front exhaust pipe and catalyst with attachments - Engine codes AAM, ABS, ADZ	120
1.3 Exhaust manifold, front exhaust pipe and catalyst with attachments - Engine codes 2E, ADY, AGG	122
1.4 Silencer with mountings - Engine code AAM	125
1.5 Silencer with mountings - Engine codes ABS, 2E, ADY, AGG	129
2 Removing and installing parts of exhaust system, four wheel drive	132
2.1 Removing and installing parts of exhaust system, four wheel drive	132
2.2 Exhaust manifold, front exhaust pipe and catalyst with attachments	133
2.3 Removing and installing front exhaust pipe	136
2.4 Silencer with mountings	138